



EDI MODEL 2018EClip-NC CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

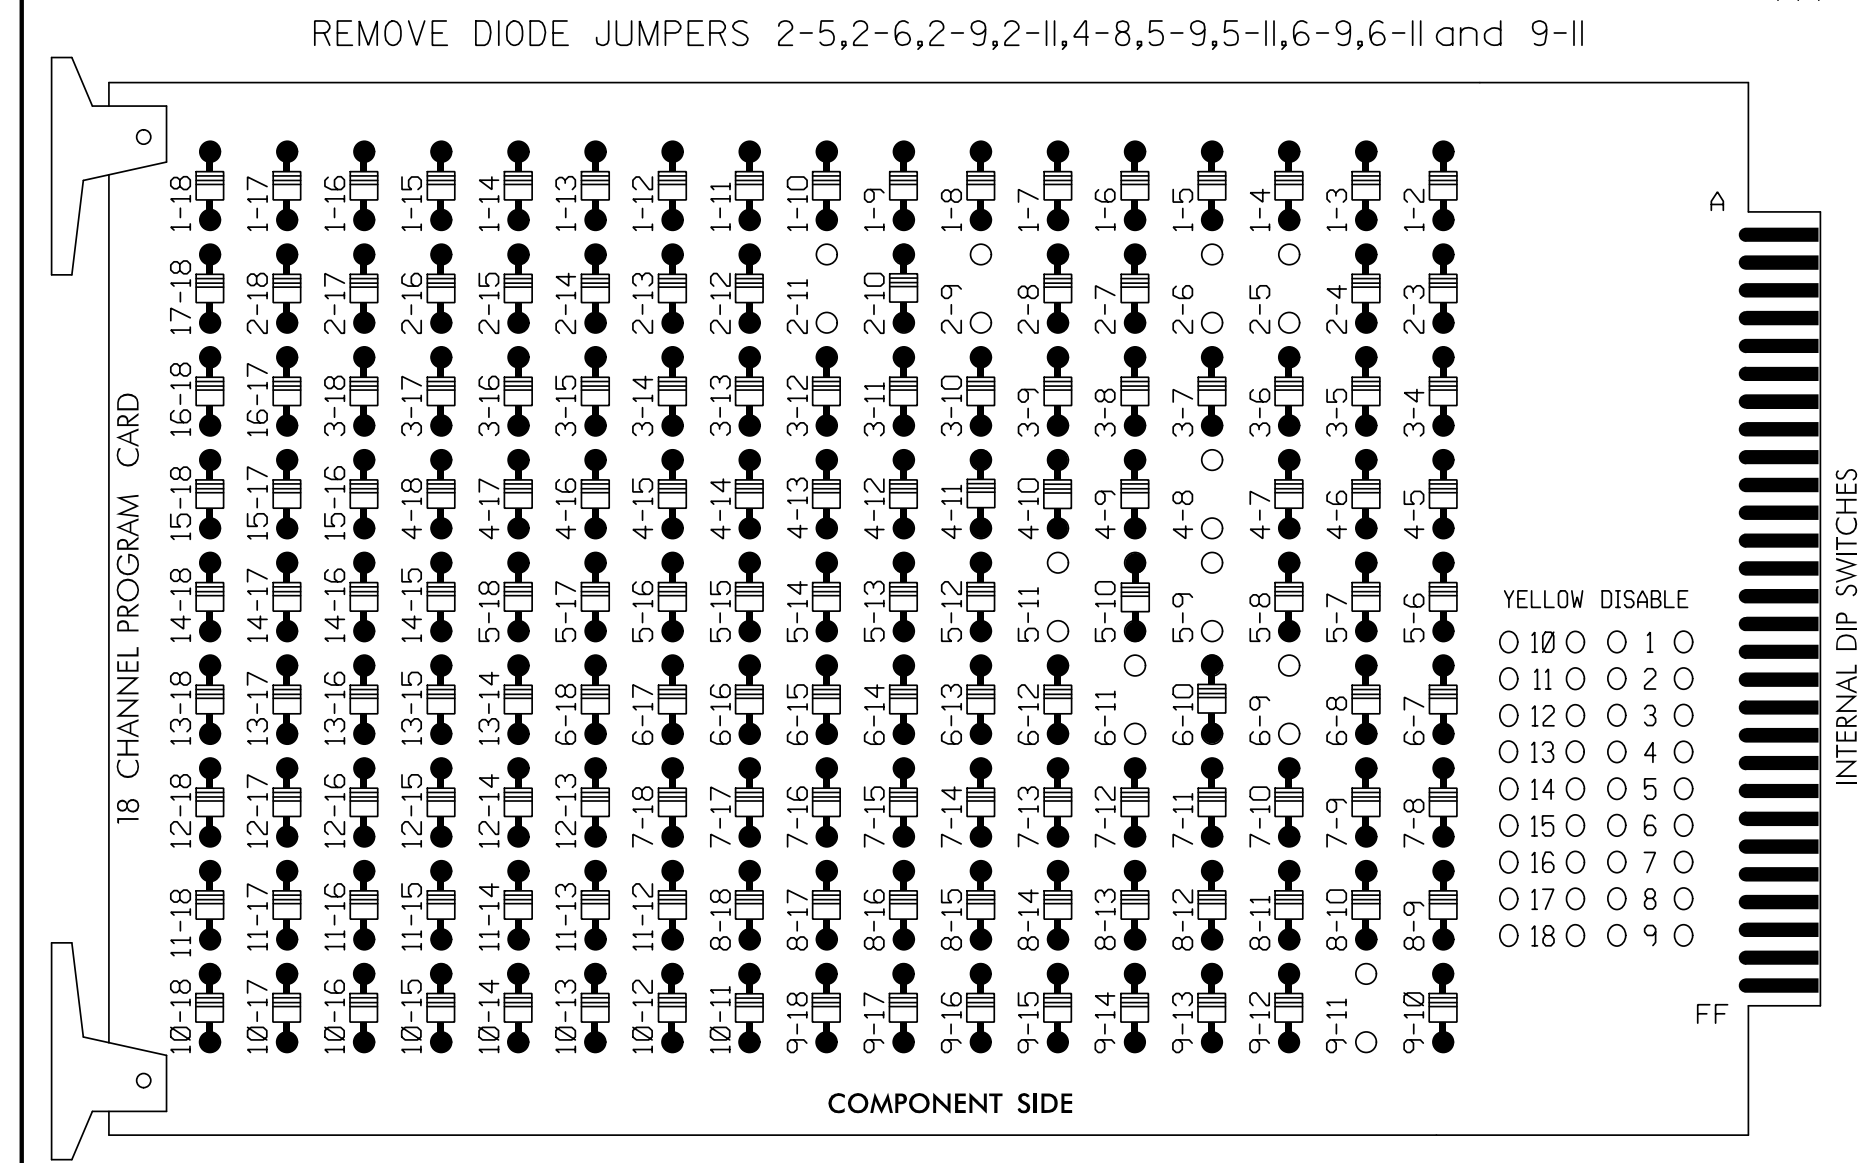

- NOTES:**
- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
 - Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
 - Ensure that Red Enable is active at all times during normal operation.
 - Integrate monitor with Ethernet network in cabinet.

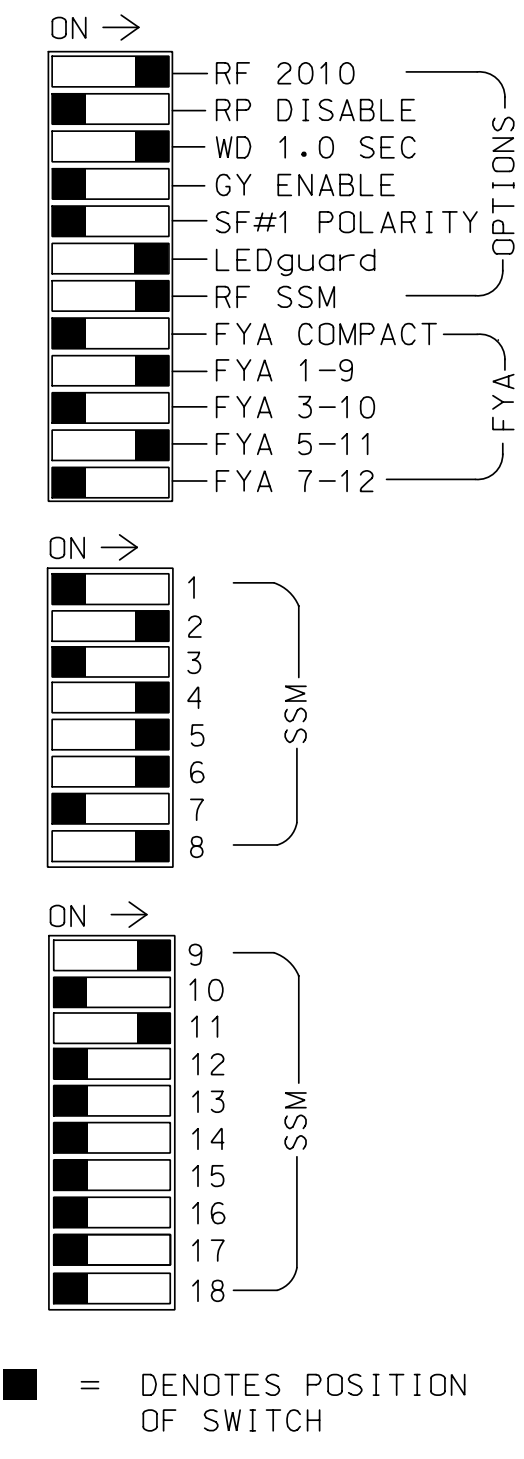

NOTES

- To prevent "Flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Program phases 4 and 8 for Dual Entry.
- Enable Simultaneous Gap-Out for all phases.
- Program phases 2 and 6 for volume density operation.
- Program controller to start up in phase 2 Green and 6 Green.
- The cabinet and controller are part of the Fayetteville Signal System.

EQUIPMENT INFORMATION

CONTROLLER.....2070E
 CABINET.....332 W/AUX
 SOFTWARE.....ECONOLITE ASC/3-2070
 CABINET MOUNT.....BASE
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
 LOAD SWITCHES USED.....S2,S5,S7,S8,S11
 AUX S1,AUX S4
 PHASES USED.....2,4,5,6,8
 OVERLAP "A".....*
 OVERLAP "B".....NOT USED
 OVERLAP "C".....*
 OVERLAP "D".....NOT USED
 * See overlap programming detail on sheet 2


SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	NU	21,22	NU	NU	41,42	NU	42	51*	62,63	NU	NU	81,82	NU	61*	NU	NU	51*	NU
RED		128			101			*	134			107						
YELLOW		129			102				135			108						
GREEN		130			103				136			109						
RED ARROW														A121				A114
YELLOW ARROW										132				A122				A115
FLASHING YELLOW ARROW														A123				A116
GREEN ARROW							133	133										

NU = Not Used
 *Denotes install load resistor. See load resistor installation detail this sheet.
 * See pictorial of head wiring in detail this sheet.

INPUT FILE POSITION LAYOUT

(front view)

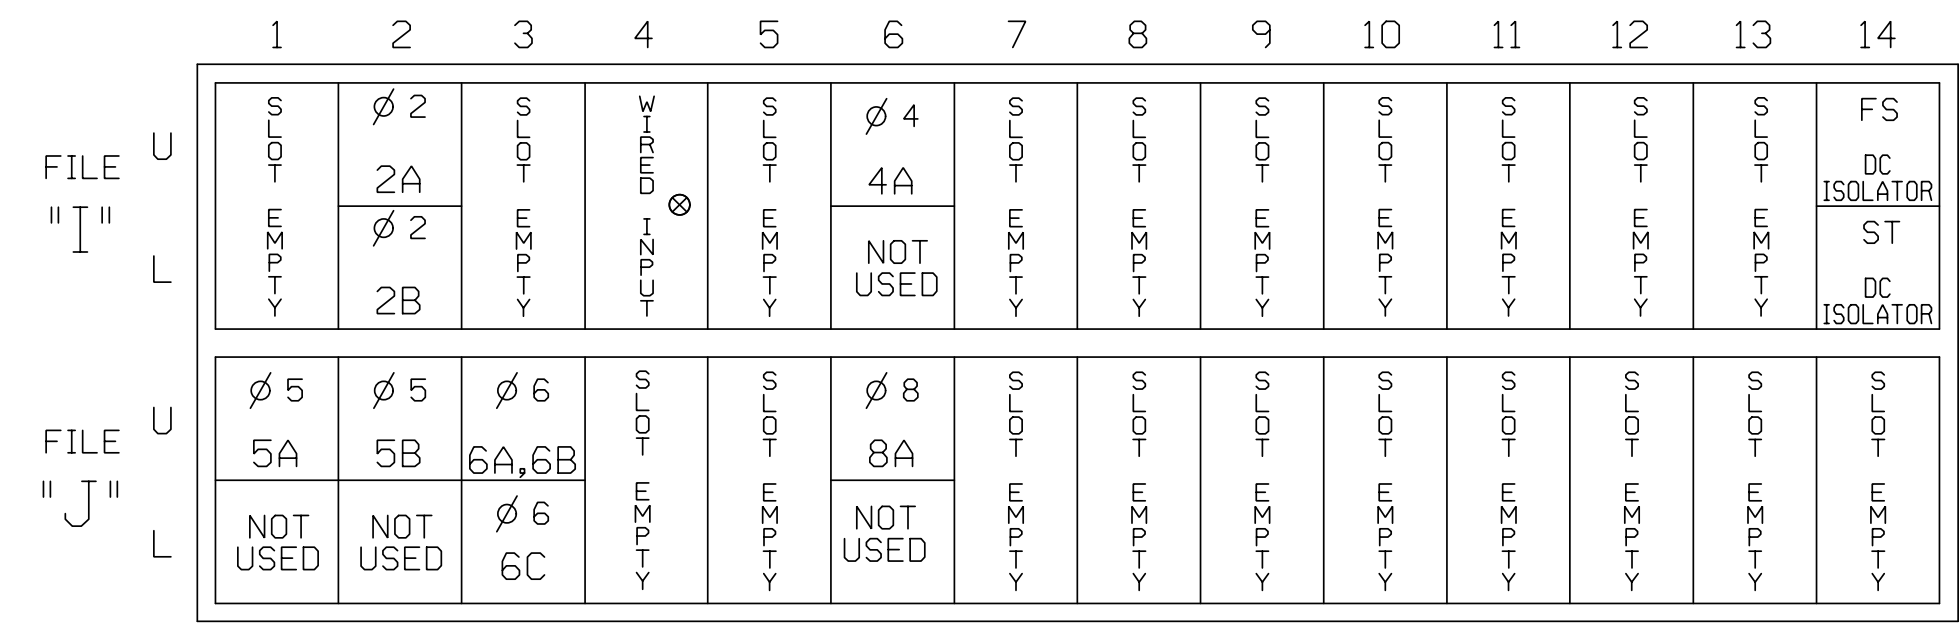

EX.: 1A, 2A, ETC. = LOOP NO.'S
 FS = FLASH SENSE
 ST = STOP TIME


⊗ Wired Input - Do not populate slot with detector card

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND TIME	DELAY TIME	DETECTOR TYPE
2A	TB2-5,6	I2U	39	2	2	YES			N
2B	TB2-7,8	I2L	43	12	2	YES			N
4A	TB4-9,10	I6U	41	4	4	YES		3	S
5A ¹	TB3-1,2	J1U	55	5	5	YES		15	S
		I4U	47	22	2	YES		3	G
5B	TB3-5,6	J2U	40	6	5	YES		15	S
6A,6B	TB3-9,10	J3U	64	36	6	YES			N
6C	TB3-11,12	J3L	77	46	6	YES		3	G
8A	TB5-9,10	J6U	42	8	8	YES		10	S


¹Add jumper from J1-W to I4-W, on rear of input file.

INPUT FILE POSITION LEGEND: J2L

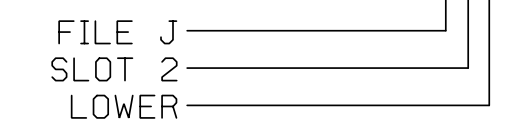

FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

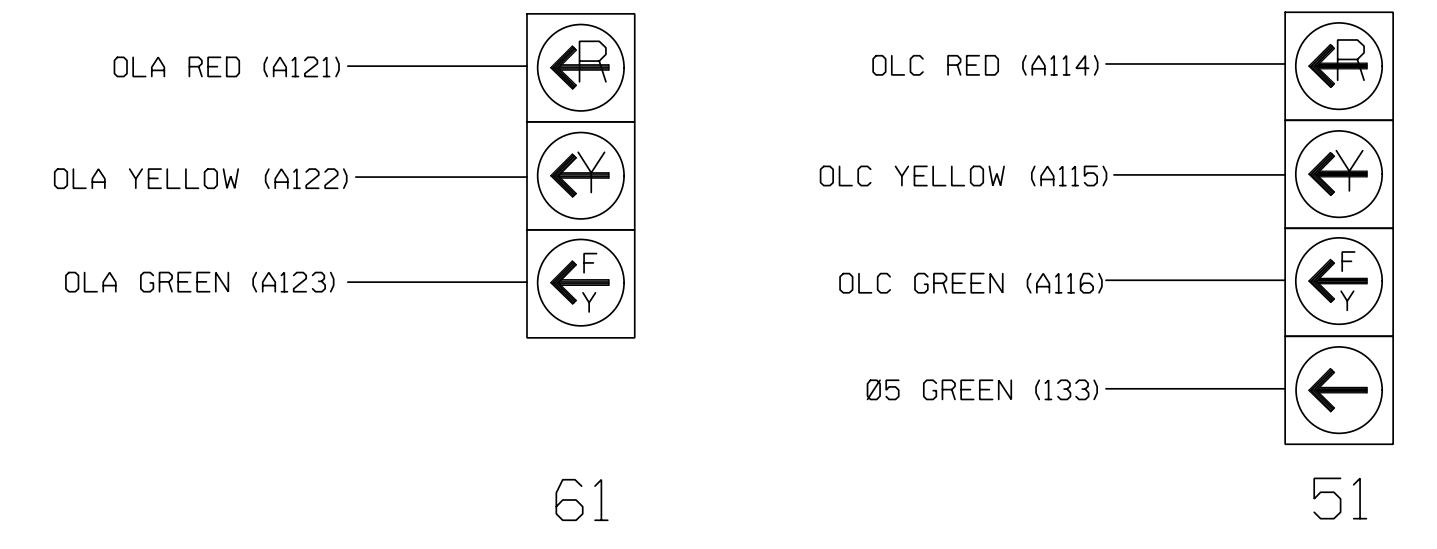


LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown)

ACCEPTABLE VALUES

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

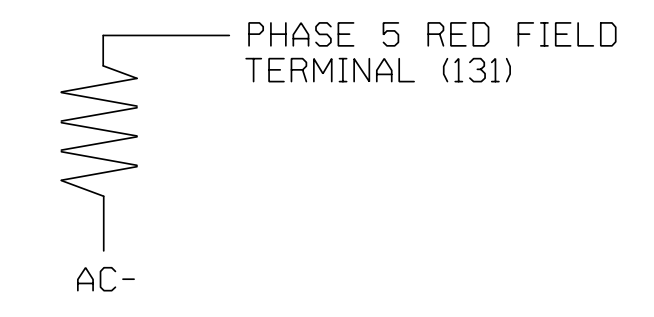

Electrical Detail Sheet 1 of 2

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Electrical and Programming Details For:

 PLANS PREPARED IN THE OFFICE OF:
Kimley-Horn
 NC License #F-0102
 421 Fayetteville Street, Suite 600
 Raleigh, NC 27601
 (919) 677-2000

SR 1141 (Cumberland Road)
 at
 SR 1136 (Wingate Road)

Division 6 Cumberland County Fayetteville
 PLAN DATE: July 2016 REVIEWED BY: KP Baumann
 PREPARED BY: SP Pennington REVIEWED BY: SL Phillips

REVISIONS	INIT.	DATE

SEAL

 Stacie L. Phillips
 9/16/2016
 DATE
 SIG. INVENTORY NO. 06-0619

9/16/2016 K:\MAIL_TPT\OK-SIGNALS\4011036345_Foyette\111e_Electr\Coals\654 - Signal_Design\4th_Submit\Final\F101_0600619-2016e1.dgn Susan Pennington