

# FYA SIGNAL OUTPUT REMAPPING ASSIGNMENT PROGRAMMING DETAIL FOR SIGNAL HEAD 11

(program controller as shown below)

STEP 1

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS), WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION, ENTER "14"

```
PAGE:1 C1 PIN:16 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....14
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
```

THE OUTPUT IS SET AS A VEHICLE PHASE BY DEFAULT, THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.  
ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1 C1 PIN:16 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...1
SELECT COLOR(0=RED,1=YEL,2=GRN)...0
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER INPUTTING DATA, THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1 C1 PIN:16 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....14
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
```

PRESS "+" KEY FOR OUTPUT 15

STEP 2

```
PAGE:1 C1 PIN:17 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....15
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
```

THE OUTPUT IS SET AS A VEHICLE PHASE BY DEFAULT, THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.  
ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1 C1 PIN:17 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...1
SELECT COLOR(0=RED,1=YEL,2=GRN)...1
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER INPUTTING DATA, THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1 C1 PIN:17 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....15
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
```

PRESS "+" KEY FOR OUTPUT 16

STEP 3

```
PAGE:1 C1 PIN:18 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....16
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
```

THE OUTPUT IS SET AS A VEHICLE PHASE BY DEFAULT, THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.  
ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1 C1 PIN:18 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...1
SELECT COLOR(0=RED,1=YEL,2=GRN)...2
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER INPUTTING DATA, THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1 C1 PIN:18 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....16
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
```

PRESS "+" UNTIL OUTPUT 33 IS REACHED.

STEP 4

```
PAGE:1 C1 PIN:35 NOT ENABLED
OUTPUT ASSIGNMENT #.....33
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
```

THE OUTPUT IS SET AS "NOT ENABLED" BY DEFAULT, THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.  
ENTER A "Y" FOR VEHICLE PHASE.

```
PAGE:1 C1 PIN:35 NOT ENABLED
SELECT VEHICLE PHASE (1-16)...1
SELECT COLOR(0=RED,1=YEL,2=GRN)...2
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE PHASE' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER INPUTTING DATA, THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE PHASE' AS SHOWN BELOW.

```
PAGE:1 C1 PIN:35 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....33
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
```

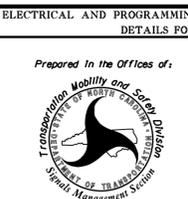
OUTPUT PROGRAMMING FOR HEAD 11 COMPLETE

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 07-0440T2  
DESIGNED: September 2016  
SEALED: 1/25/17  
REVISED: N/A

C:\Users\simmons\Documents\Working Folder\Electrical Detail\070440\_Sm\_ele\_xxx.dgn  
01/25/2017 11:46  
S:\TAS\B\TAS\Signal Management\Working Folder\Electrical Detail\070440\_Sm\_ele\_xxx.dgn  
bjsimmons

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Electrical Detail - Temp 2 (TMP Phase II & III) - Sheet 3 of 3

	Electrical and Programming Details for:		NC 119 at I-40 EB/I-85 NB Ramps		
	Prepared in the Office of:	Division 7 Alamance County Mebane		SEAL	
PLAN DATE: January 2017	REVIEWED BY: BAS	PREPARED BY: B. SIMMONS	REVIEWED BY:	DocuSigned by: <i>Zachary M. Little</i> 1/30/2017	DATE
REVISIONS	INIT.	DATE	SIGNATURE	DATE	DATE

750 N. Greenfield Pkwy, Garner, NC 27529

SIG. INVENTORY NO. 07-0440T2