

OUTPUT REMAPPING ASSIGNMENT PROGRAMMING DETAIL  
TO ASSIGN LOADSWITCH AUX S6 TO OVERLAP 'F'  
(FOR SIGNAL HEAD 23)  
(program controller as shown below)

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN  
'1' (OUTPUT ASSIGNMENTS).  
WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION, ENTER "37"

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT  
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1 C1 PIN:83 NOT ENABLED
OUTPUT ASSIGNMENT #.....37
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

OVERLAP "F" RED

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS  
"Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.  
ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1 C1 PIN:83 NOT ENABLED
SELECT VEHICLE OVERLAP (A=1,P=16)...6
SELECT COLOR(0=RED,1=YEL,2=GRN)...0
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'  
THE SCREEN SHOWN ABOVE WILL APPEAR.  
ENTER DATA AS SHOWN.  
PRESS THE 'ENT' AFTER AFTER INPUTING DATA,  
THEN 'ESC'.

PRESS '+' KEY FOR OUTPUT 38

```
PAGE:1 C1 PIN:83 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....37
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

```
PAGE:1 C1 PIN:84 NOT ENABLED
OUTPUT ASSIGNMENT #.....38
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

OVERLAP "F" GREEN

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS  
"Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.  
ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1 C1 PIN:84 NOT ENABLED
SELECT VEHICLE OVERLAP (A=1,P=16)...6
SELECT COLOR(0=RED,1=YEL,2=GRN)...2
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'  
THE SCREEN SHOWN ABOVE WILL APPEAR.  
ENTER DATA AS SHOWN.  
PRESS THE 'ENT' AFTER AFTER INPUTING DATA,  
THEN 'ESC'.

PRESS '+' KEY FOR OUTPUT 53

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT  
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1 C1 PIN:84 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....38
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

```
PAGE:1 C1 PIN:100 NOT ENABLED
OUTPUT ASSIGNMENT #.....53
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

OVERLAP "F" YELLOW

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS  
"Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.  
ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1 C1 PIN:100 NOT ENABLED
SELECT VEHICLE OVERLAP (A=1,P=16)...6
SELECT COLOR(0=RED,1=YEL,2=GRN)...1
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'  
THE SCREEN SHOWN ABOVE WILL APPEAR.  
ENTER DATA AS SHOWN.  
PRESS THE 'ENT' AFTER AFTER INPUTING DATA,  
THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT  
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

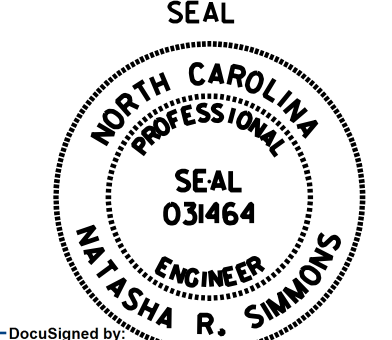
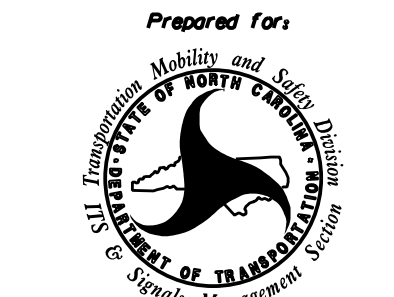
```
PAGE:1 C1 PIN:100 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....53
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

THIS ELECTRICAL DETAIL IS FOR  
THE SIGNAL DESIGN: 03-0215T6  
DESIGNED: June 2017  
SEALED: 9/10/2021  
REVISED: N/A

Electrical Detail - Sheet 9 of 9  
Signal Upgrade  
Temporary Design 6

DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED

**HNTB** HNTB NORTH CAROLINA, P.C.  
343 E. Six Forks Road, Suite 200  
Raleigh, North Carolina 27609  
No. License No.: C-1564  
(919) 546-8997

	NC 211 (Howe Street) at NC 87 (River Road)/ SR 1852 (Robert Ruark Drive) Division 03 Brunswick Co. Southport	
	Prepared for: 	Prepared by: A.H. Thornburg Reviewed by: N.R. Simmons
PLAN DATE: June 2017 REVIEWED BY: A.D. Klinksiek	REVISIONS INIT. DATE	DATE 9/10/2021
750 N. Greenfield Pkwy, Corner, NC 27529		SIG. INVENTORY NO. 03-0215T6