


14-AUG-2025 15:24
DW:///SUD0036433.work\ins-com\ATKMANC01\Documents\Roads and Bridges\Projects\100059632_JSSR S1g and ITS\Task 05_11_Signals\070935T1_sml.ele_20250314.dgn
ENC4586 AT LUS21624

18 CHANNEL IP CONFLICT MONITOR

PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

REMOVE DIODE JUMPERS 1-5, 1-6, 1-9, 1-11, 2-5, 2-6, 2-9, 2-11, 2-13, 4-8, 4-10, 4-12, 4-16, 5-9, 5-11, 5-13, 6-9, 6-11, 6-13, 8-10, 8-12, 8-16, 9-11, 9-13, 10-12, 10-16, 11-13 and 12-16.

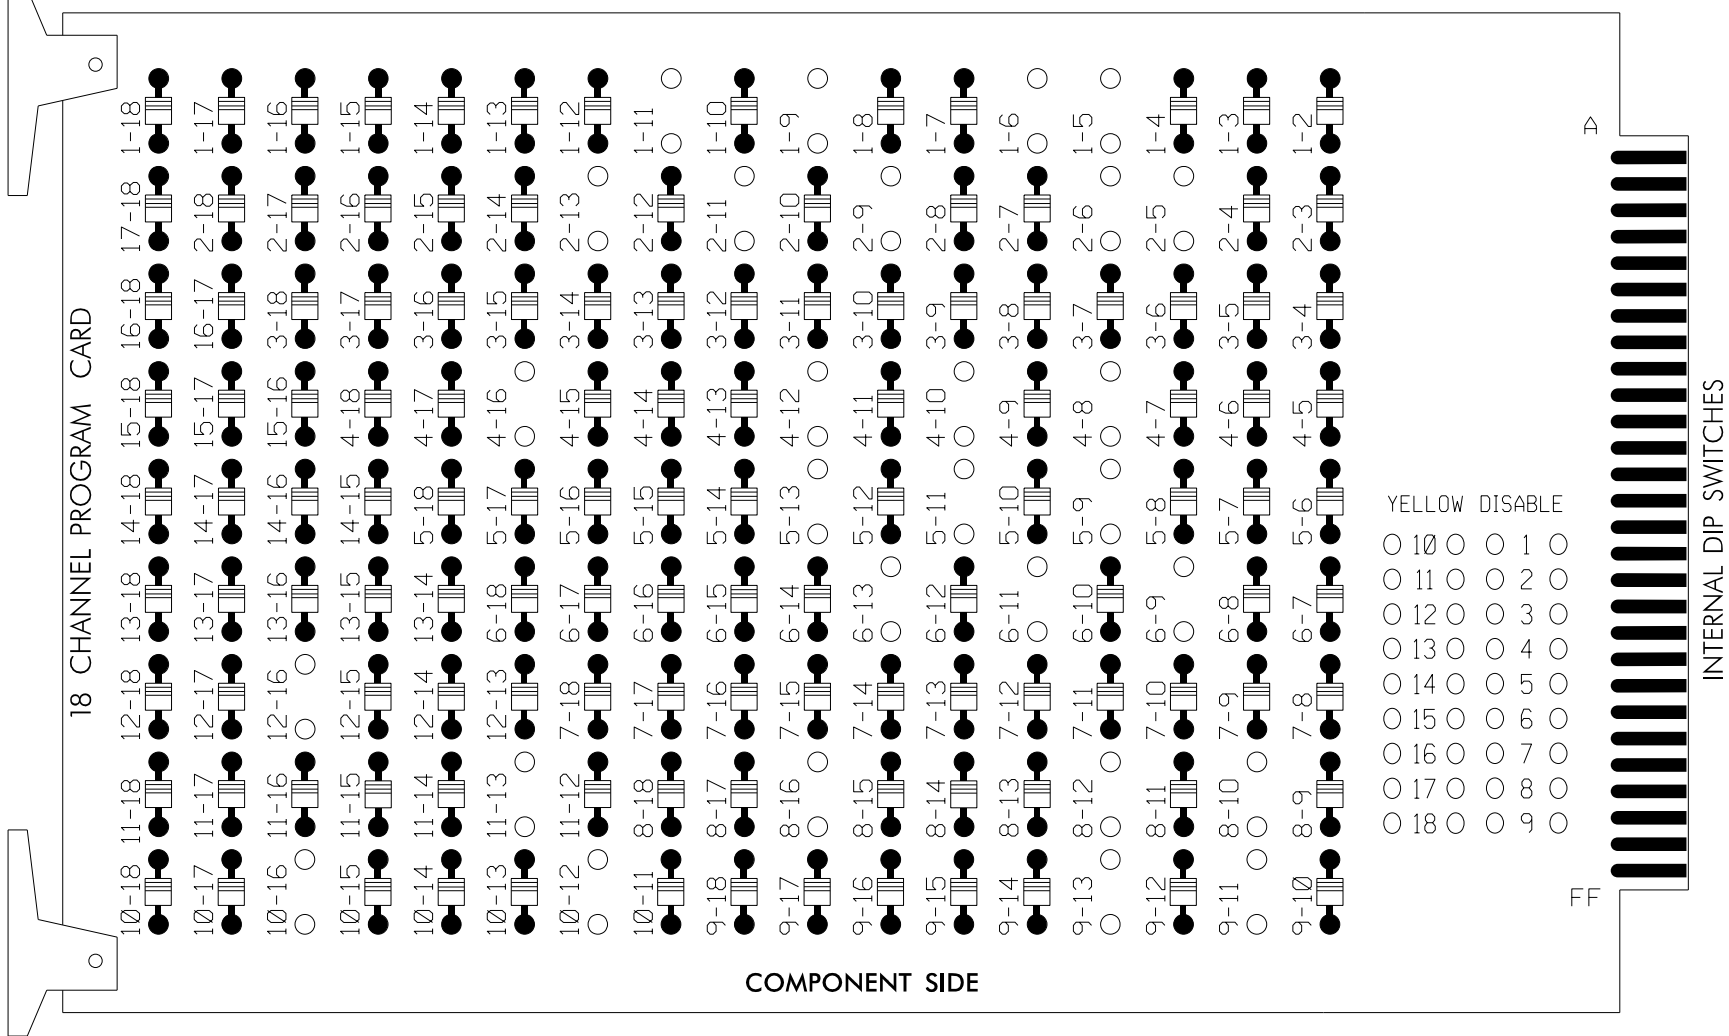

REMOVE JUMPERS AS SHOWN

NOTES:

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
- Ensure that Red Enable is active at all times during normal operation.
- Integrate monitor with Ethernet network in cabinet.

NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Program phases 4 and 8 for Dual Entry.
- Program controller to start up in phase 2 Green and 6 Green.
- The cabinet and controller are part of the High Point Signal System.

EQUIPMENT INFORMATION

CONTROLLER.....2070LX
CABINET.....332 W/ AUX
SOFTWARE.....ECONOLITE ASC/3-2070
CABINET MOUNT.....BASE
OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
LOAD SWITCHES USED.....S1,S2,S3,S5,S7,S8,S11,S12,
AUX S1,AUX S2,AUX S4,AUX S5
PHASES USED.....1,2,2 PED,4,5,6,8,8 PED
OVERLAP "A".....*
OVERLAP "B".....*
OVERLAP "C".....*
OVERLAP "D".....*

* See overlap programming detail on sheet 2

INPUT FILE POSITION LAYOUT

(front view)

