

MAXTIME OVERLAP PROGRAMMING DETAIL
FOR DEFAULT PHASING

Front Panel
Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface
Home >Controller >Overlap Configuration >Overlaps
Overlap Plan 1

Overlap	1
Type	FYA 4 - Section
Included Phases	2
Modifier Phases	1
Modifier Overlaps	-
Trail Green	0
Trail Yellow	0.0
Trail Red	0.0

MAXTIME DETECTOR PROGRAMMING DETAIL
FOR ALTERNATE PHASING LOOP 1A

Front Panel
Main Menu >Controller >Detector >Veh Det Plans

Web Interface
Home >Controller >Detector Configuration >Vehicle Detectors

In the table view of web interface right click on "Detector" in the top left corner of the table. Copy the entire contents of Detector Plan 1. Paste Detector Plan 1 into Detector Plan 2. Modify Detector Plan 2 as shown below and save changes.

1A

Plan 2		
Detector	Call Phase	Delay
1	1	0.0
29	0	0.0

MAXTIME ALTERNATE PHASING ACTIVATION DETAIL

To run alternate phasing, select a Pattern that is programmed to run Overlap Plan 2 and Detector Plan 2. A Pattern can be selected through the scheduler or manually by changing the Operational Mode.

	OVERLAP PLAN	VEH DET PLAN
ACTIVE PLAN REQUIRED TO RUN DEFAULT PHASING	1	1
ACTIVE PLAN REQUIRED TO <u>RUN ALTERNATE PHASING</u>	2	2

ALTERNATE PHASING CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN OVERLAP PLAN 2 AND VEHICLE DETECTOR PLAN 2 ACTIVATE TO CALL THE "ALTERNATE PHASING":

OVERLAP PLAN 2: Modifies overlap included phases for head 11 and to run protected turns only.

VEH DET PLAN 2: Disables phase 6 call on loop 1A and reduces delay time for phase 1 call on loop 1A to 0 seconds.

MAXTIME OVERLAP PROGRAMMING DETAIL
FOR ALTERNATE PHASING

Front Panel
Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface
Home >Controller >Overlap Configuration >Overlaps

In the table view of the web interface, right click on "Overlap" in the top left corner of the table. Copy the entire contents of Overlap Plan 1. Paste Overlap Plan 1 into Overlap Plan 2. Modify Overlap Plan 2 as shown below and save changes.

Overlap Plan 2

Overlap	1
Type	FYA 4 - Section
Included Phases	-
Modifier Phases	1
Modifier Overlaps	-
Trail Green	0
Trail Yellow	0.0
Trail Red	0.0

NOTICE
INCLUDED
PHASE

MAXTIME ALTERNATE PHASING PATTERN
PROGRAMMING DETAIL

Front Panel
Main Menu >Controller >Coordination >Patterns

Web Interface
Home >Controller >Coordination >Patterns

Pattern Parameters		
Pattern	Veh Det Plan	Overlap Plan
*	2	2

* The Pattern number(s) are to be determined by the Division and/or City Traffic Engineer.

MAXTIME STARTUP AND SOFTWARE FLASH
PROGRAMMING DETAIL

Front Panel
Main Menu >Controller >Unit

Web Interface
Home >Controller >Unit

Modify parameters as shown below and save changes.

Start Up Parameters

StartUp Clearance Hold
6

Unit Flash Parameters

All Red Flash Exit Time
6

Signal Upgrade - Temporary Signal 2
TMP Phase VI Steps 1-3
Electrical Detail - Sheet 2 of 2

DOCUMENT NOT CONSIDERED FINAL
UNLESS ALL SIGNATURES COMPLETED




P: (919) 878-9580
8801 Six Forks Road Suite 700 | Raleigh, North Carolina 27615-2965
NC License No. F-0112


Engineers | Construction Managers | Planners | Scientists

www.rk.com

Responsive People | Creative Solutions

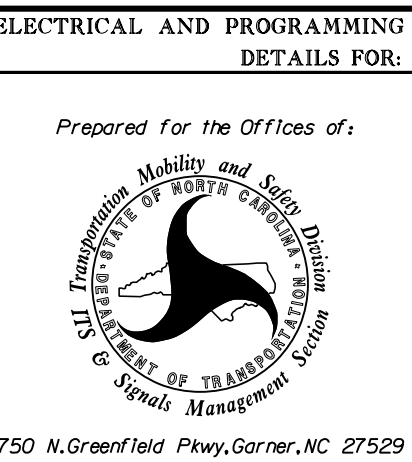

US 421 at SR 1514 (Bamboo Road)			
Division 11	Watauga County	near Boone	
PLAN DATE: April 2026	REVIEWED BY: DT Sears		
PREPARED BY: WP Erickson-Jones	REVIEWED BY: C Silver		
REVISIONS	INIT.	DATE	

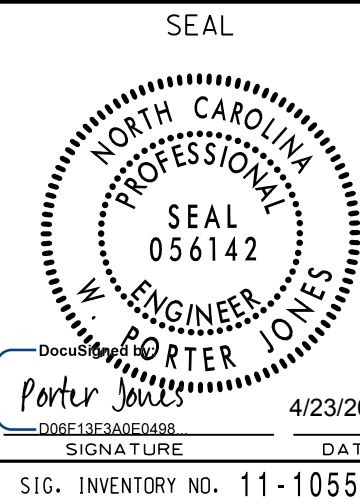

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 11-1055T2
DESIGNED: April 2026
SEALED: 04/23/2026
REVISED: