



EDI MODEL 2010ECL CONFLICT MONITOR


PROGRAMMING DETAIL

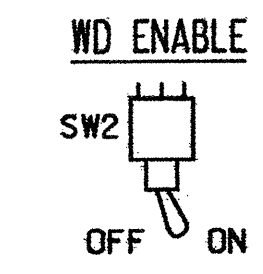

(remove jumpers and set switches as shown)

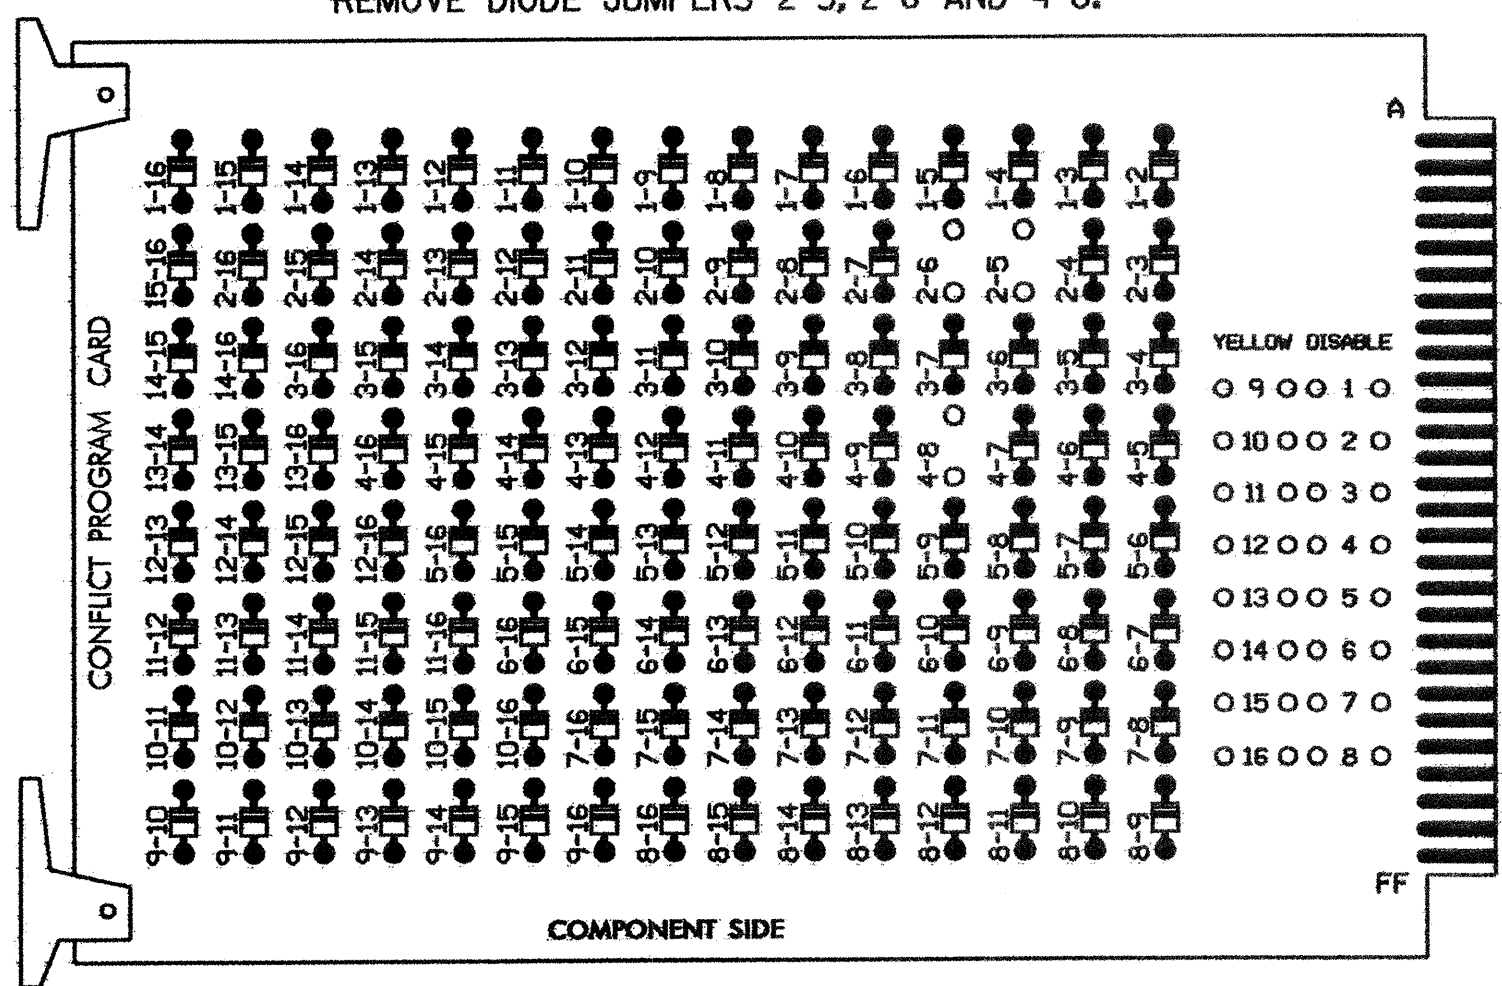

OPTIONS

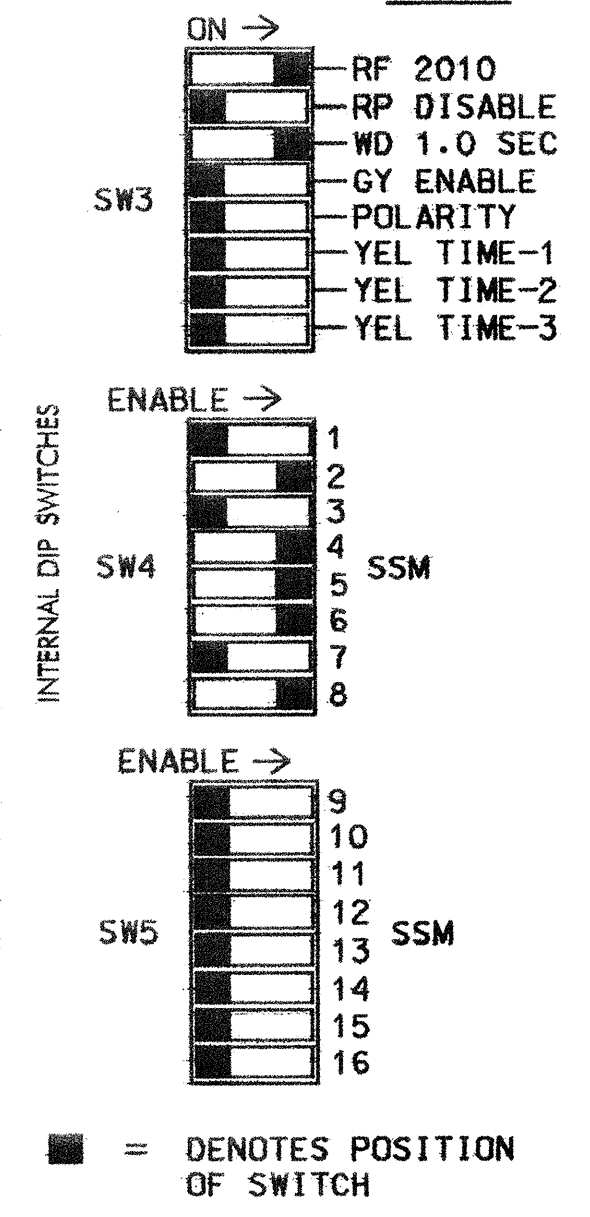

NOTES:

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Make sure jumpers SEL1-SEL5 are present on the monitor board.

NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Ensure that Red Enable is active at all times during normal operation. To prevent Red Failures on unused monitor channels, tie unused red monitor inputs 1,3,7, 9,10,11,12,13,14,15 & 16 to load switch AC+ per the cabinet manufacturer's instructions.
- Program controller to start up in phases 2 and 6 green.
- Enable Simultaneous Gap-Out, on the controller unit, for all phases.
- Program phases 4 and 8, on the controller unit, for Dual Entry.
- The cabinet and controller are part of the Gastonia City System.

FIELD CONNECTION HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S2P	S3	S4	S4P	S5	S6	S6P	S7	S8	S8P
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED
SIGNAL HEAD NO.	NU	21,22	NU	NU	41,42	NU	51	61,62	NU	NU	81,82	NU
GREEN		130			103			136			109	
YELLOW		129			102			135			108	
RED		128			101			134			107	
RED ARROW								131				
YELLOW ARROW								132				
GREEN ARROW								133				


NU = Not Used

EQUIPMENT INFORMATION

CONTROLLER.....CONTRACTOR SUPPLIED 2070L
 CABINET.....CONTRACTOR SUPPLIED 332
 SOFTWARE.....ECONOLITE OASIS
 CABINET MOUNT.....BASE
 OUTPUT FILE POSITIONS...12
 LOAD SWITCHES USED.....S2,S4,S5,S6,S8
 PHASES USED.....2,4,5,6,8
 OVERLAPS.....NONE

INPUT FILE POSITION LAYOUT

(front view)

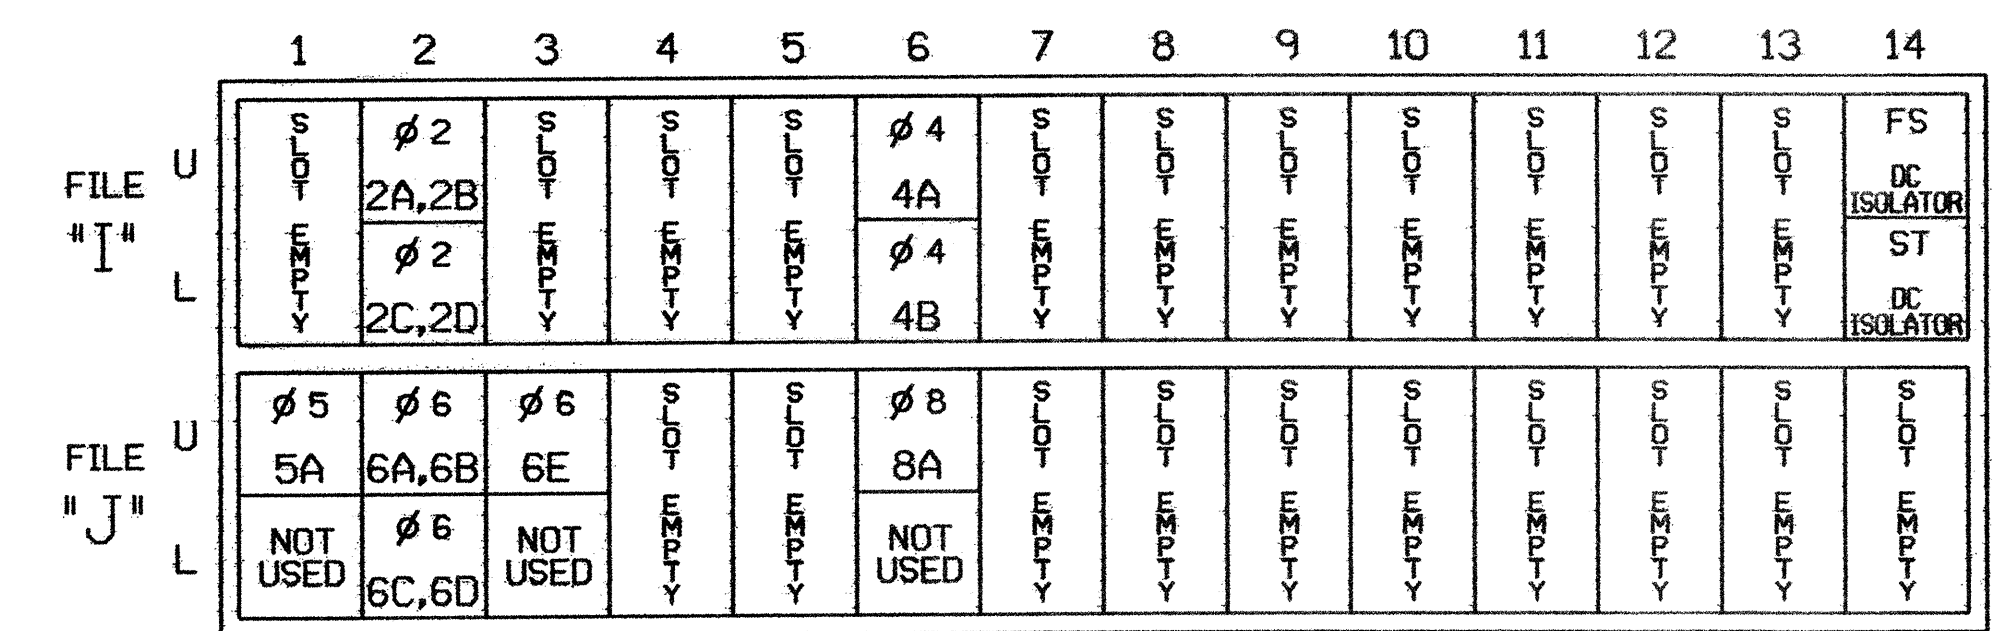


EX. : 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
2A,2B	TB2-5,6	I2U	39	1	2	2	Y	Y		1.8	
2C,2D	TB2-7,8	I2L	43	5	12	2	Y	Y			
4A	TB4-9,10	I6U	41	3	4	4	Y	Y			
4B	TB4-11,12	I6L	45	7	14	4	Y	Y			10
5A	TB3-1,2	J1U	55	17	5	5	Y	Y			3
6A,6B	TB3-5,6	J2U	40	2	6	6	Y	Y		1.8	
6C,6D	TB3-7,8	J2L	44	6	16	6	Y	Y			
6E	TB3-9,10	J3U	64	26	36	6	Y	Y			
8A	TB5-9,10	J6U	42	4	8	8	Y	Y			5

INPUT FILE POSITION LEGEND: J2L

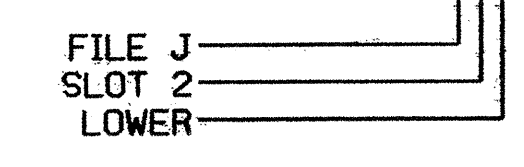

DYNAMIC BACK-UP CONTROL PROGRAMMING

(program controller as shown below)

- From Main Menu press '2' (Phase Control), then '1' (Phase Control Functions). Scroll to the bottom of the menu and enable Dynamic/Backup Control Function 1.
- From Phase Control Functions Menu press '2' (Dynamic/Backup Control Functions).

DYNAMIC/BACKUP CONTROL FUNCTION #01
 OVERLAPS:;ABCDEFGHIJKLMNOP
 IF OVERLAPS ARE ACTIVE ;
 OR PHASES:;12345678910111213141516
 IF PHASES ARE ON: ; X
 OMIT PHASES ; ; X
 CALL PHASES ; ; X

BACKUP PROTECTION PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 12-0096
 DESIGNED: January 2005
 SEALED: 2/7/05
 REVISED:

Signal Upgrade

ELECTRICAL AND PROGRAMMING DETAILS FOR: **SR 2466 (Garrison Blvd.) at Chestnut Street**

Division 12 Gaston County Gastonia

PLAN DATE: January 2005 REVIEWED BY: T. Joyce

PREPARED BY: William Hairston REVIEWED BY:

REVISIONS: _____ INIT. DATE

222 N. McDowell St., Raleigh, NC 27603

SEAL: GEORGE C. BROWN, PROFESSIONAL ENGINEER, SEAL 022013

Sig. INVENTORY NO. 12-0096

12-MAY-2005 16:21 c:\documents and settings\wkok\workspace\topgastonia\ew2009e_20050209e.dgn