
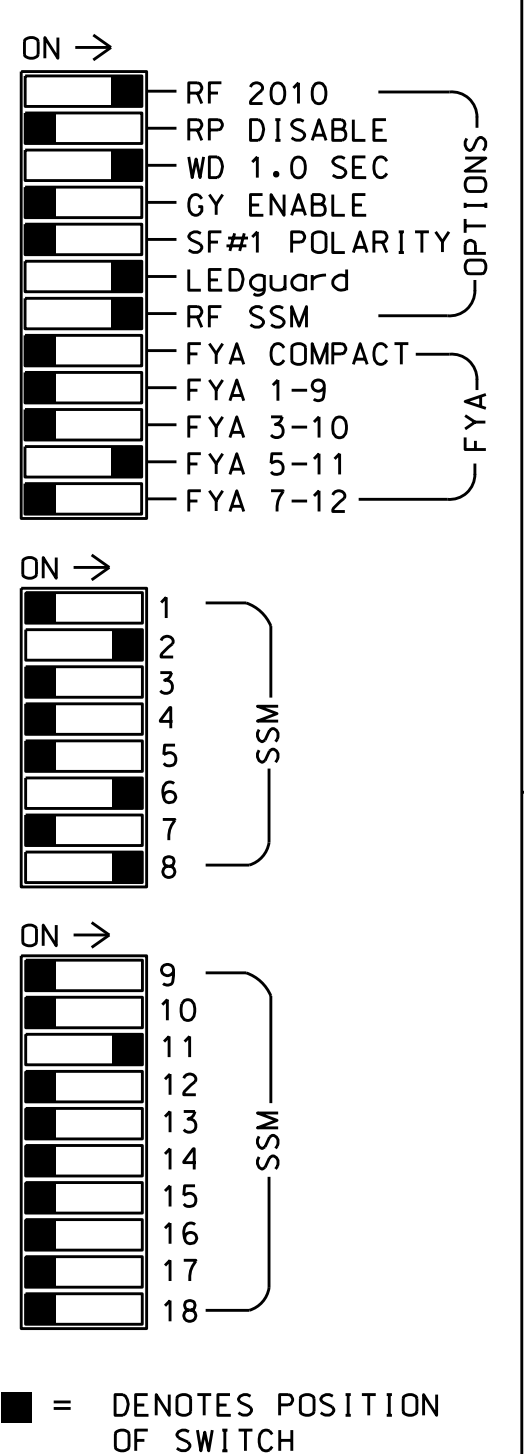
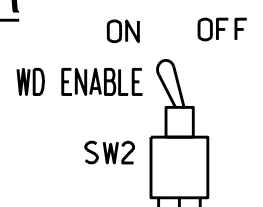


**EDI MODEL 2018ECLip-NC CONFLICT MONITOR PROGRAMMING DETAIL**

(remove jumpers and set switches as shown)

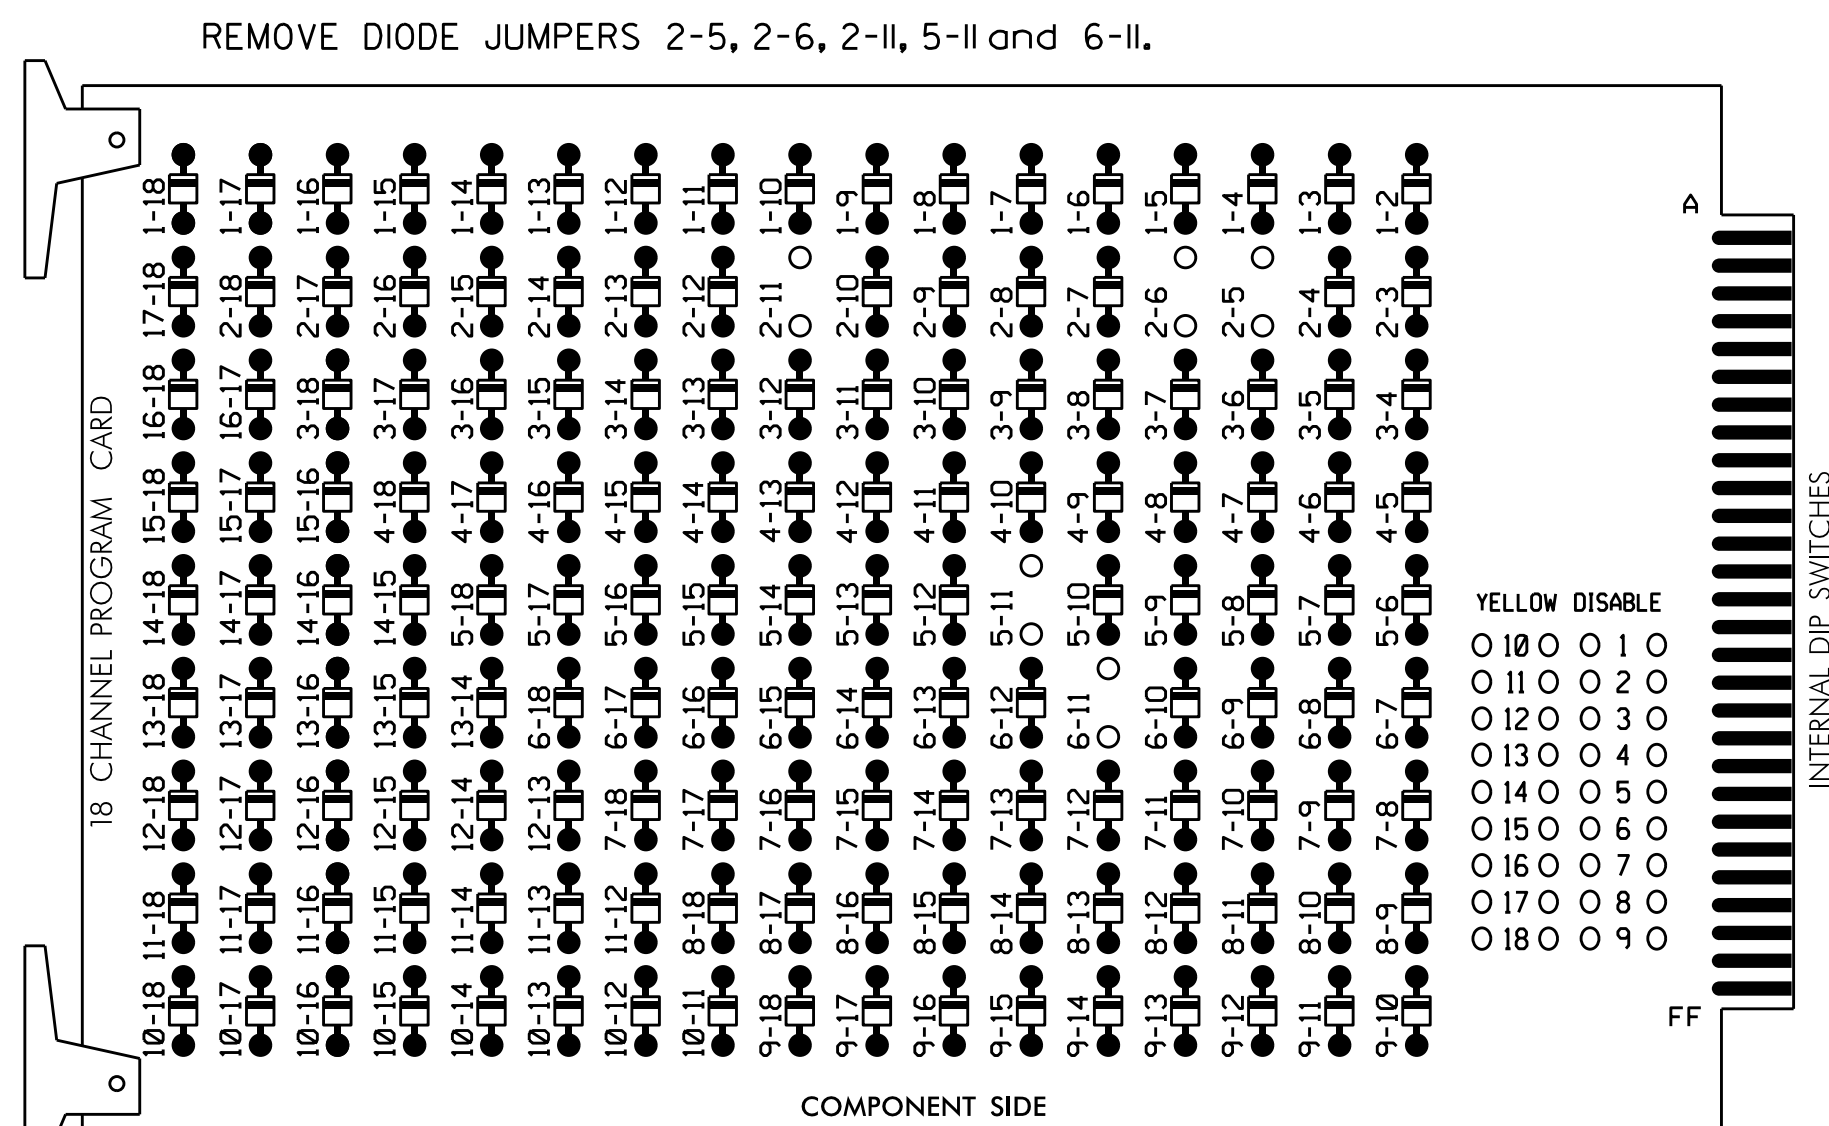

- NOTES:**
- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
  - Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
  - Ensure that Red Enable is active at all times during normal operation.
  - Integrate monitor with Ethernet network in cabinet.

**NOTES**

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Enable Simultaneous Gap-Out for all phases.
- Program phases 2 and 6 for Start Up In Green.
- Program phases 2 and 6 for Yellow Flash.
- The cabinet and controller are part of the High Point Signal System.

**EQUIPMENT INFORMATION**


CONTROLLER.....2070  
 CABINET.....332 /W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S2,S7,S8,S11,AUX S4  
 PHASES USED.....2,5,6,8  
 OVERLAP "A".....NOT USED  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....5+6  
 OVERLAP "D".....NOT USED

**SIGNAL HEAD HOOK-UP CHART**

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	NU	21,22	NU	NU	NU	NU	51	61,62	NU	NU	81,82	NU	NU	NU	NU	51	NU	NU
RED		128						134			107							
YELLOW		129					*	135			108							
GREEN		130						136			109							
RED ARROW																		A114
YELLOW ARROW																		A115
FLASHING YELLOW ARROW																		A116
GREEN ARROW								133										

NU = Not Used  
 \* Denotes install load resistor. See load resistor installation detail this sheet.  
 \* See pictorial of head wiring in detail below.

**4 SECTION FYA PPLT SIGNAL WIRING DETAIL**

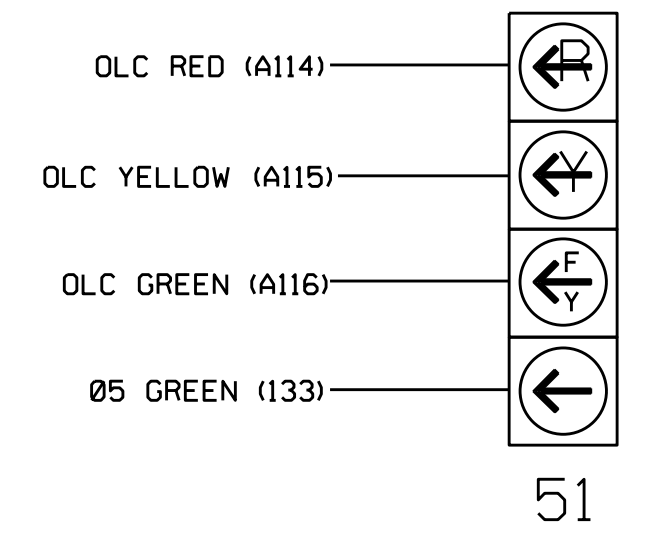

- NOTE**
- The sequence display for this signal requires special logic programming. See sheet 2 of 2 for programming instructions.

**INPUT FILE POSITION LAYOUT**

(front view)


FILE	U	1	2	3	4	5	6	7	8	9	10	11	12	13	14
"I"	U	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2
	L	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2	∅ 2
"J"	U	∅ 5	∅ 6	∅ 6	∅ 6	∅ 6	∅ 8	∅ 8	∅ 8	∅ 8	∅ 8	∅ 8	∅ 8	∅ 8	∅ 8
	L	NOT USED	∅ 6	∅ 6	∅ 6	∅ 6	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED

EX.: 1A, 2A, ETC. = LOOP NO.'S  
 FS = FLASH SENSE  
 ST = STOP TIME  
 ⊗ Wired Input - Do not populate slot with detector card

**INPUT FILE CONNECTION & PROGRAMMING CHART**

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
2A	TB2-5,6	I2U	39	1	2	2	Y	Y			
2B	TB2-7,8	I2L	43	5	12	2	Y	Y			
5A'	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	I4U	47	9	22	2	Y	Y			
6A	TB3-5,6	J2U	40	2	6	6	Y	Y			
6B	TB3-7,8	J2L	44	6	16	6	Y	Y			
8A	TB5-9,10	J6U	42	4	8	8	Y	Y			


\*Add jumper from J1-W to I4-W, on rear of input file.

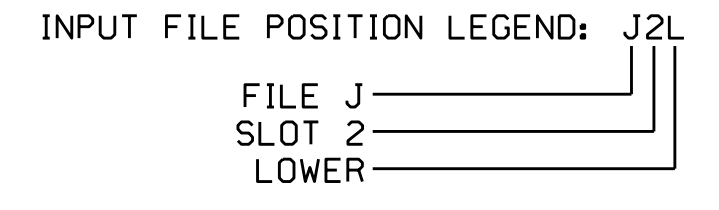

**LOAD RESISTOR INSTALLATION DETAIL**

(install resistors as shown below)

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

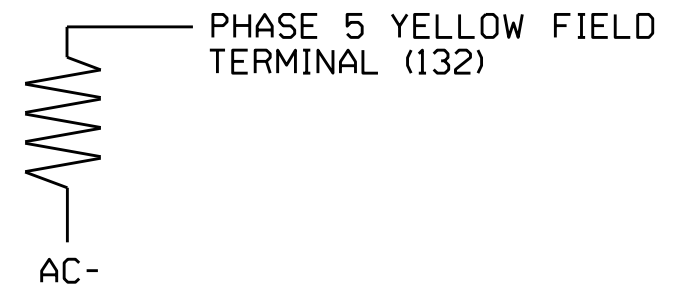

Electrical Detail - Sheet 1 of 2

ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared in the Offices of:  750 N. Greenfield Pkwy, Garner, NC 27529	Brentwood Street at I-85 Bus./US 29 SB-US 70 WB Ramps		SEAL NORTH CAROLINA PROFESSIONAL ENGINEER SEAL 022013 GEORGE C. BROWN	
	Division 7 PLAN DATE: July 2014 PREPARED BY: B. SIMMONS	Guilford County High Point REVIEWED BY: T. Joyce		DocuSigned by: George C. Brown 4/9/2015 DATE
	REVISIONS	INIT. DATE		SIG. INVENTORY NO. 07-1363
	Electrical Detail - Sheet 1 of 2			

09-APR-2015 07:50  
 S:\MT\SASU\15\_Signal\working\cupas\51g\_Maps\Simmons\working\_Folder\High\_Point\071363\_sml.e...xxx.dgn  
 bis-simmons