

FYA SIGNAL OUTPUT REMAPPING ASSIGNMENT PROGRAMMING DETAIL FOR SIGNAL HEAD 21

(program controller as shown below)

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN
'1' (OUTPUT ASSIGNMENTS).
WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION, ENTER "30"

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

STEP 1

```

PAGE:1 C1 PIN:32 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....30
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

THE OUTPUT IS SET AS A VEHICLE PHASE BY DEFAULT. THIS
"Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.
ENTER A "Y" FOR VEHICLE OVERLAP.

```

PAGE:1 C1 PIN:32 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...3
SELECT COLOR(0=RED,1=YEL,2=GRN)...0
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'
THE SCREEN SHOWN ABOVE WILL APPEAR.
ENTER DATA AS SHOWN.
PRESS THE 'ENT' KEY AFTER INPUTTING DATA,
THEN 'ESC'.

```

PAGE:1 C1 PIN:32 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....30
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

PRESS "+" KEY FOR OUTPUT 31

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

STEP 2

```

PAGE:1 C1 PIN:33 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....31
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

THE OUTPUT IS SET AS A VEHICLE PHASE BY DEFAULT. THIS
"Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.
ENTER A "Y" FOR VEHICLE OVERLAP.

```

PAGE:1 C1 PIN:33 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...3
SELECT COLOR(0=RED,1=YEL,2=GRN)...1
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'
THE SCREEN SHOWN ABOVE WILL APPEAR.
ENTER DATA AS SHOWN.
PRESS THE 'ENT' KEY AFTER INPUTTING DATA,
THEN 'ESC'.

```

PAGE:1 C1 PIN:33 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....31
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

PRESS "+" KEY FOR OUTPUT 32

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

STEP 3

```

PAGE:1 C1 PIN:34 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....32
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

THE OUTPUT IS SET AS A VEHICLE PHASE BY DEFAULT. THIS
"Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.
ENTER A "Y" FOR VEHICLE OVERLAP.

```

PAGE:1 C1 PIN:34 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...3
SELECT COLOR(0=RED,1=YEL,2=GRN)...2
    
```

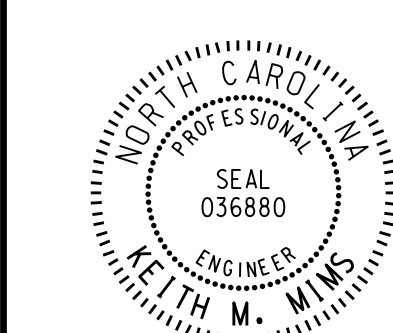
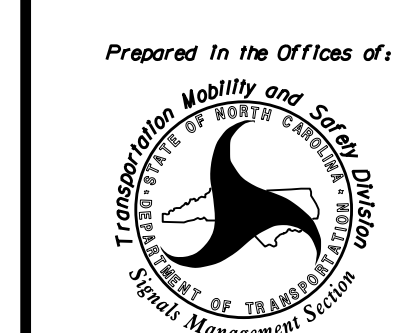
WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'
THE SCREEN SHOWN ABOVE WILL APPEAR.
ENTER DATA AS SHOWN.
PRESS THE 'ENT' KEY AFTER INPUTTING DATA,
THEN 'ESC'.

```

PAGE:1 C1 PIN:34 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....32
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 03-0137
DESIGNED: February 2016
SEALED: 3-24-16
REVISED: N/A

ELECTRICAL DETAIL SHEET 4 OF 4

REVISION SEAL 	ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared In the Offices of: 	US 117 (N. Norwood Street) at SR 1173 (E Southerland Street) Division 03 Duplin County Wallace PLAN DATE: January 2014 REVIEWED BY: JTR PREPARED BY: James Peterson REVIEWED BY: REVISIONS Added loops and switched on FYA 5-11 on the conflict monitor. (UP) KMM 3/31/2016 SIGNATURE DATE SIG. INVENTORY NO. 03-0137	SEAL Not a certified document as to the Original Document but only as to the Revisions - This document originally issued and sealed by John T. Rowe, PE #008453, on 1/29/14. This document is only certified as to the revisions.
--	--	--	--