


**EDI MODEL 2018ECLIP-NC CONFLICT MONITOR PROGRAMMING DETAIL**

(remove jumpers and set switches as shown)

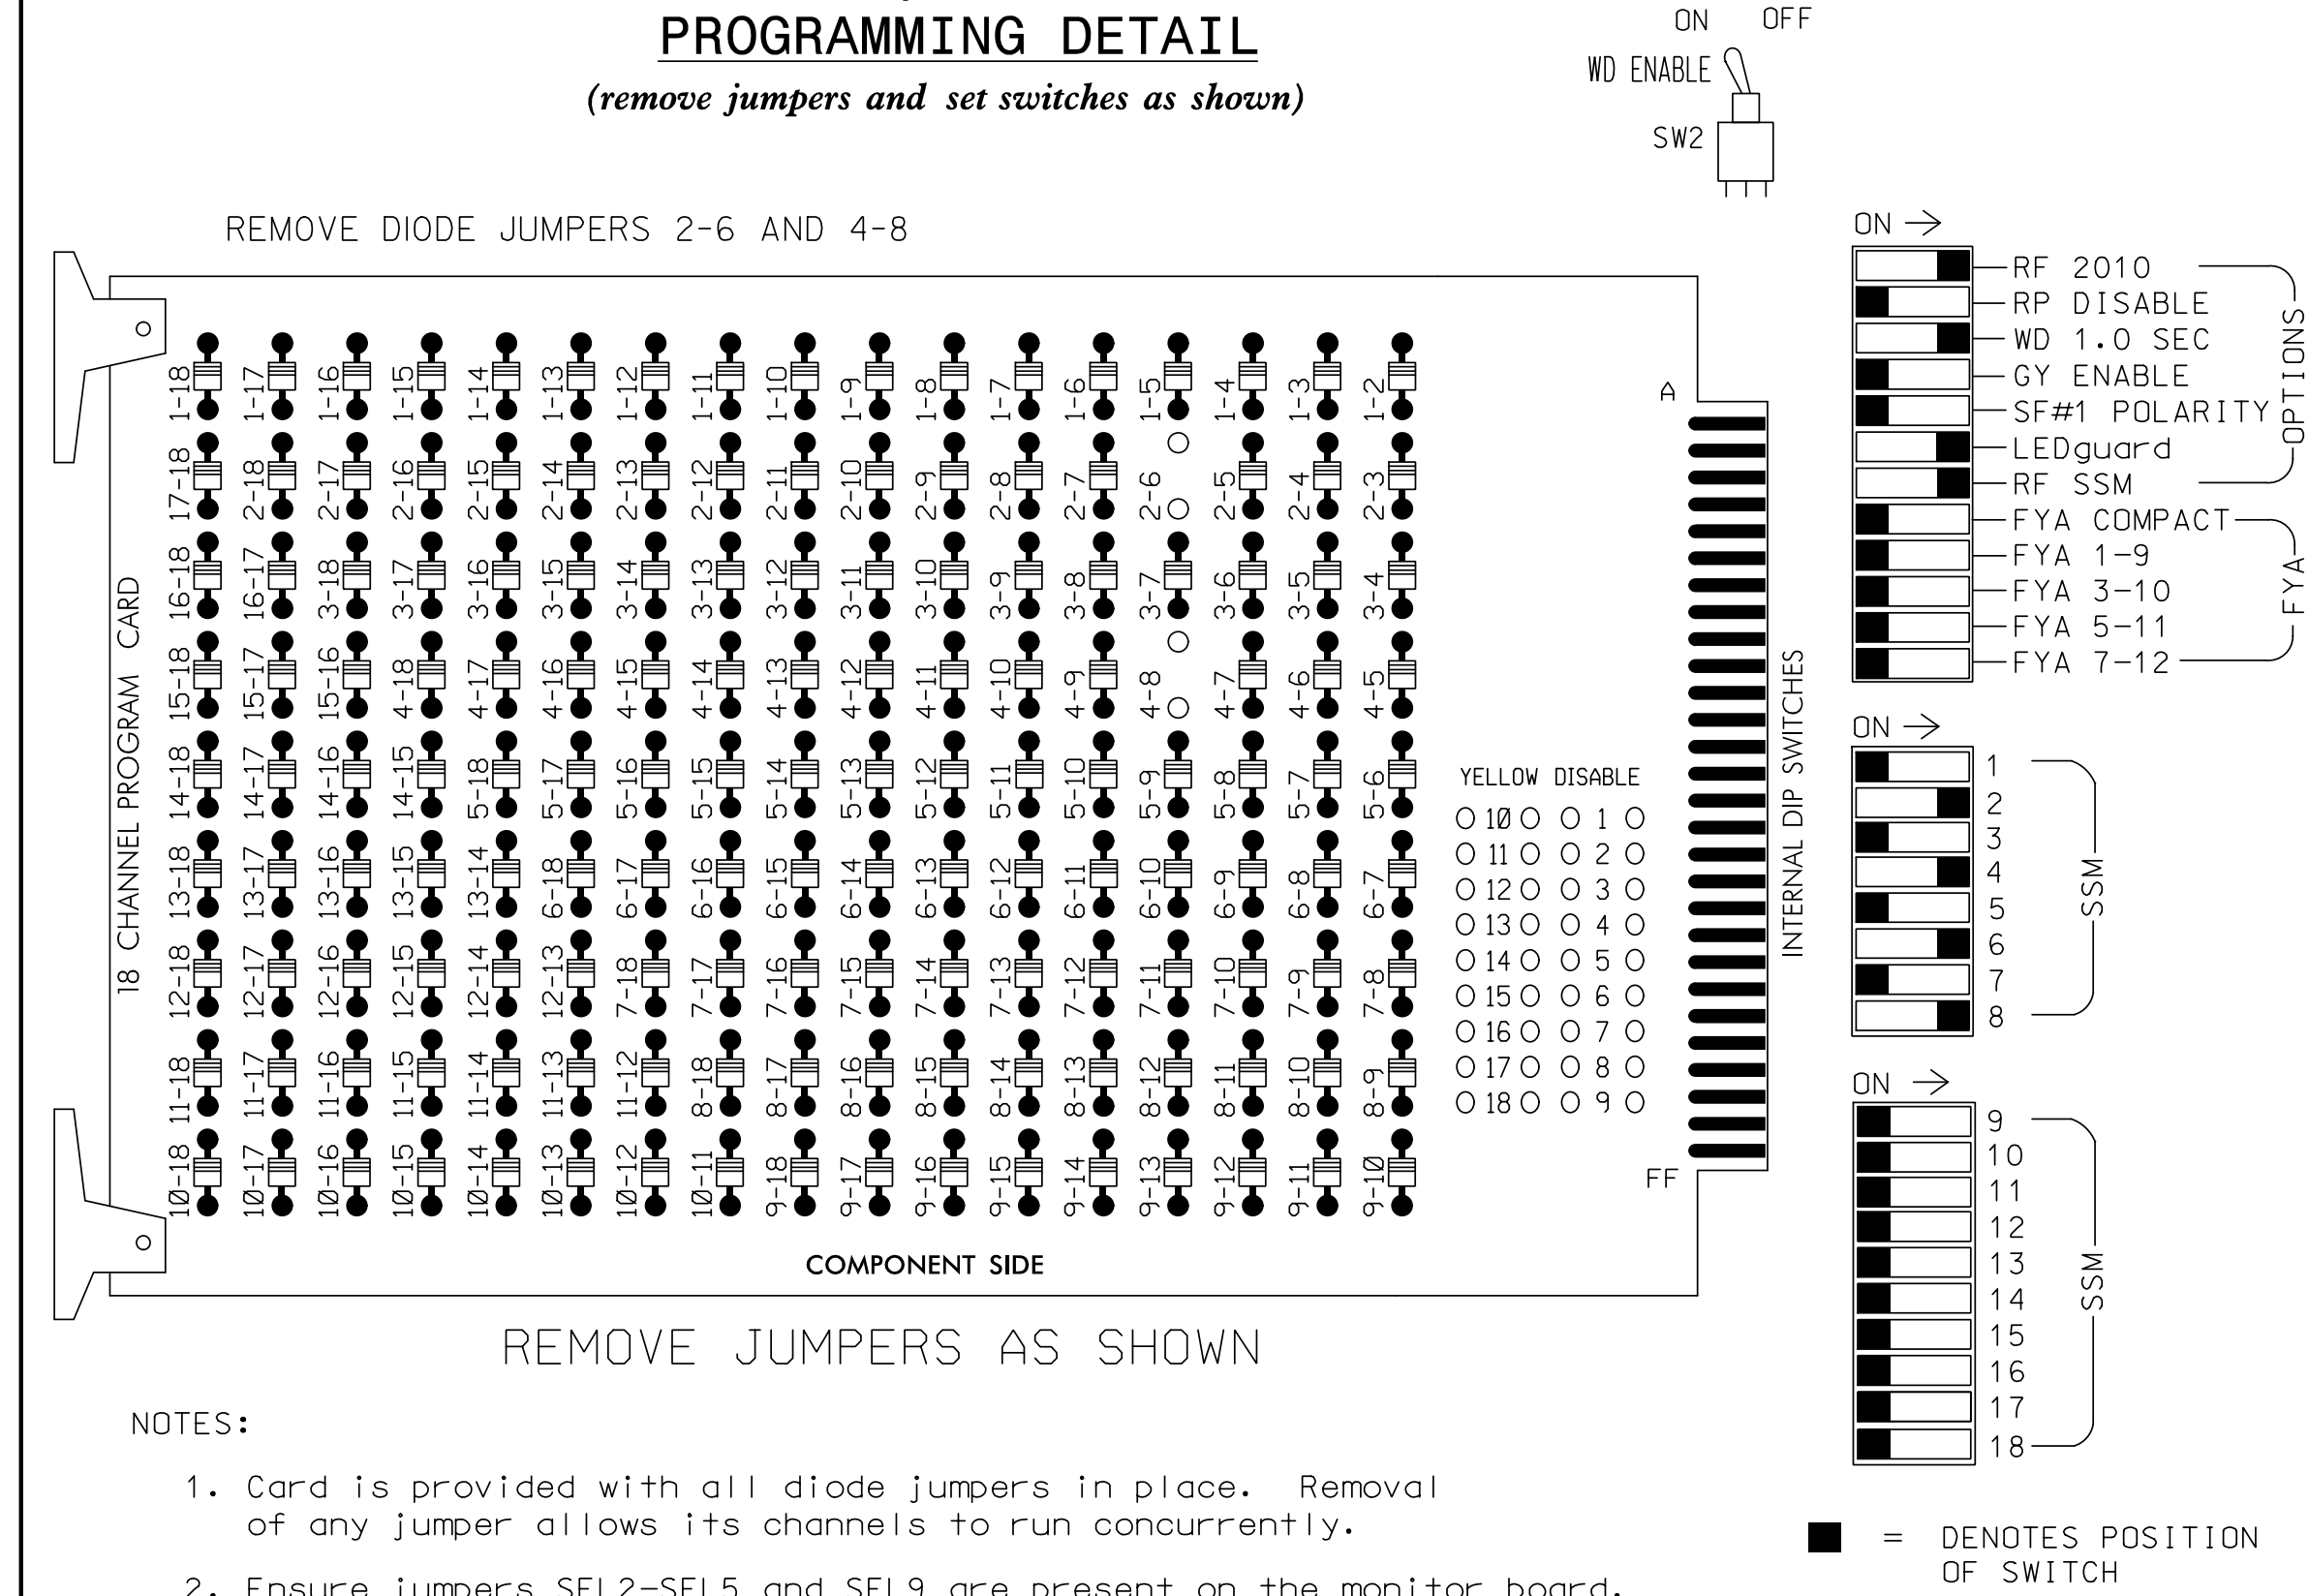

- NOTES:**
- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
  - Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
  - Ensure that Red Enable is active at all times during normal operation.
  - Integrate monitor with Ethernet network in cabinet.

**NOTES**

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Program phases 4 and 8 for Dual Entry.
- Enable Simultaneous Gap-Out for all phases.
- Program phases 2 and 6 for volume density operation.
- Program controller to start up in phase 2 Green and 6 Green.
- The cabinet and controller are part of the Fayetteville Signal System.

**EQUIPMENT INFORMATION**

CONTROLLER.....2070E  
 CABINET.....332 W/AUX  
 SOFTWARE.....ECONOLITE ASC/3-2070  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S2,S5,S8,S11  
 PHASES USED.....2,4,6,8  
 OVERLAP "A".....NOT USED  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....NOT USED  
 OVERLAP "D".....NOT USED

**SIGNAL HEAD HOOK-UP CHART**

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	NU	21,22 23	NU	NU	41,42	NU	NU	61,62 63	NU	NU	81,82	NU	NU	NU	NU	NU	NU	NU
RED		128			101			134			107							
YELLOW		129			102			135			108							
GREEN		130			103			136			109							
RED ARROW																		
YELLOW ARROW																		
GREEN ARROW																		

NU = Not Used

**INPUT FILE POSITION LAYOUT**

(front view)


	1	2	3	4	5	6	7	8	9	10	11	12	13	14
FILE U	S	∅ 2	∅ 2	S	S	∅ 4	S	S	S	S	S	S	S	FS
"I"	2A	2C				4A								DC ISOLATOR
L	2B	NOT USED				4B								ST
FILE U	S	∅ 6	∅ 6	S	S	∅ 8	∅ 8	S	S	S	S	S	S	S
"J"	6A	6C				8A	8C							DC ISOLATOR
L	6B	NOT USED				8B	NOT USED							ST

EX. : 1A, 2A, ETC. = LOOP NO.'S  
 FS = FLASH SENSE  
 ST = STOP TIME

**INPUT FILE CONNECTION & PROGRAMMING CHART**

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND TIME	DELAY TIME	DETECTOR TYPE
2A	TB2-5,6	I2U	39	2	2	YES			S
2B	TB2-7,8	I2L	43	12	2	YES			S
2C	TB2-9,10	I3U	63	32	2	YES		5	G
4A	TB4-9,10	I6U	41	4	4	YES		3	S
4B	TB4-11,12	I6L	45	14	4	YES		10	S
6A	TB3-5,6	J2U	40	6	6	YES			S
6B	TB3-7,8	J2L	44	16	6	YES			S
6C	TB3-9,10	J3U	64	36	6	YES		5	G
8A	TB5-9,10	J6U	42	8	8	YES		3	S
8B	TB5-11,12	J6L	46	18	8	YES		10	S
8C	TB7-1,2	J7U	66	38	8	YES		15	S

**INPUT FILE POSITION LEGEND: J2L**

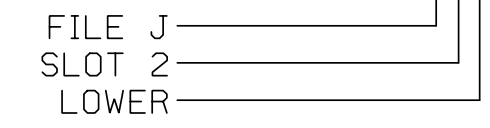

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 06-0535  
 DESIGNED: June 2016  
 SEALED: 7/8/2016  
 REVISED:

**Electrical Detail**

**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

Prepared For: **Kimley-Horn**

PLANS PREPARED IN THE OFFICE OF:  
**Kimley-Horn**  
 NC License #F-0102  
 421 Fayetteville Street, Suite 600  
 Raleigh, NC 27601  
 (919) 677-2000

NC Hwy 24 at SR 1839 (N. Plymouth St.)

Division 6 Cumberland County Fayetteville

PLAN DATE: August 2016 REVIEWED BY: SL Phillips

PREPARED BY: SP Pennington REVIEWED BY: KP Baumann

REVISIONS: INIT. DATE

9/22/2016

SIG. INVENTORY NO. 06-0535

9/21/2016 K:\REAL\_T\PROJECTS\EDISIGNALS\4011036345\_Foyette\1111111111.dwg 0535-2016e.dgn Susan Pennington