

ADVANCE BEACON for PHASE 2 APPROACH OUTPUT ASSIGNMENT PROGRAMMING DETAIL

(program controller as shown below)

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS). PRESS '+' UNTIL OUTPUT #33 (PIN 35) IS REACHED.

```

PAGE:1 C1 PIN:35 NOT ENABLED .....33
OUTPUT ASSIGNMENT #.....33
FREQUENCY (0=DEFAULT) (0-25.5 HZ)....1.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...50
MODE (0=SOLID,1=FLASH).....1
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

THE FIRST THREE PROGRAMMING ROWS DEFINE THE OUTPUT TO FLASH, ALONG WITH THE RATE IN WHICH IT WILL FLASH.

THE NOT ENABLED 'Y' WILL REMAIN UNTIL THE FUNCTION OF THIS OUTPUT IS CHANGED. DO NOT ENTER AN 'N'.

```

PAGE:1 C1 PIN:35 NOT ENABLED .....1
SELECT BEACON INDEX (1-4).....1
    
```

WHEN A 'Y' IS ENTERED FOR 'ADVANCE BEACON' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN.

PRESS THE 'ENT' KEY AFTER INPUTTING DATA. THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'ADVANCE BEACON' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:35 ADVANCE BEACON .....33
OUTPUT ASSIGNMENT #.....33
FREQUENCY (0=DEFAULT) (0-25.5 HZ)....1.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...50
MODE (0=SOLID,1=FLASH).....1
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS). PRESS '+' UNTIL OUTPUT #35 (PIN 37) IS REACHED.

```

PAGE:1 C1 PIN:37 NOT ENABLED .....35
OUTPUT ASSIGNMENT #.....35
FREQUENCY (0=DEFAULT) (0-25.5 HZ)....0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

THE NOT ENABLED 'Y' WILL REMAIN UNTIL THE FUNCTION OF THIS OUTPUT IS CHANGED. DO NOT ENTER AN 'N'.

```

PAGE:1 C1 PIN:37 NOT ENABLED .....33
SELECT OUTPUT ASSIGNMENT (1-64).....33
    
```

WHEN A 'Y' IS ENTERED FOR 'OUT OF PHASE FLASHER' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN.


PRESS THE 'ENT' KEY AFTER INPUTTING DATA. THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'OUT OF PHASE FLASHER' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:37 OUT OF PHASE FLASHER .....35
OUTPUT ASSIGNMENT #.....35
FREQUENCY (0=DEFAULT) (0-25.5 HZ)....0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

ADVANCE BEACON WIRING DETAIL (wire flashers as shown below)

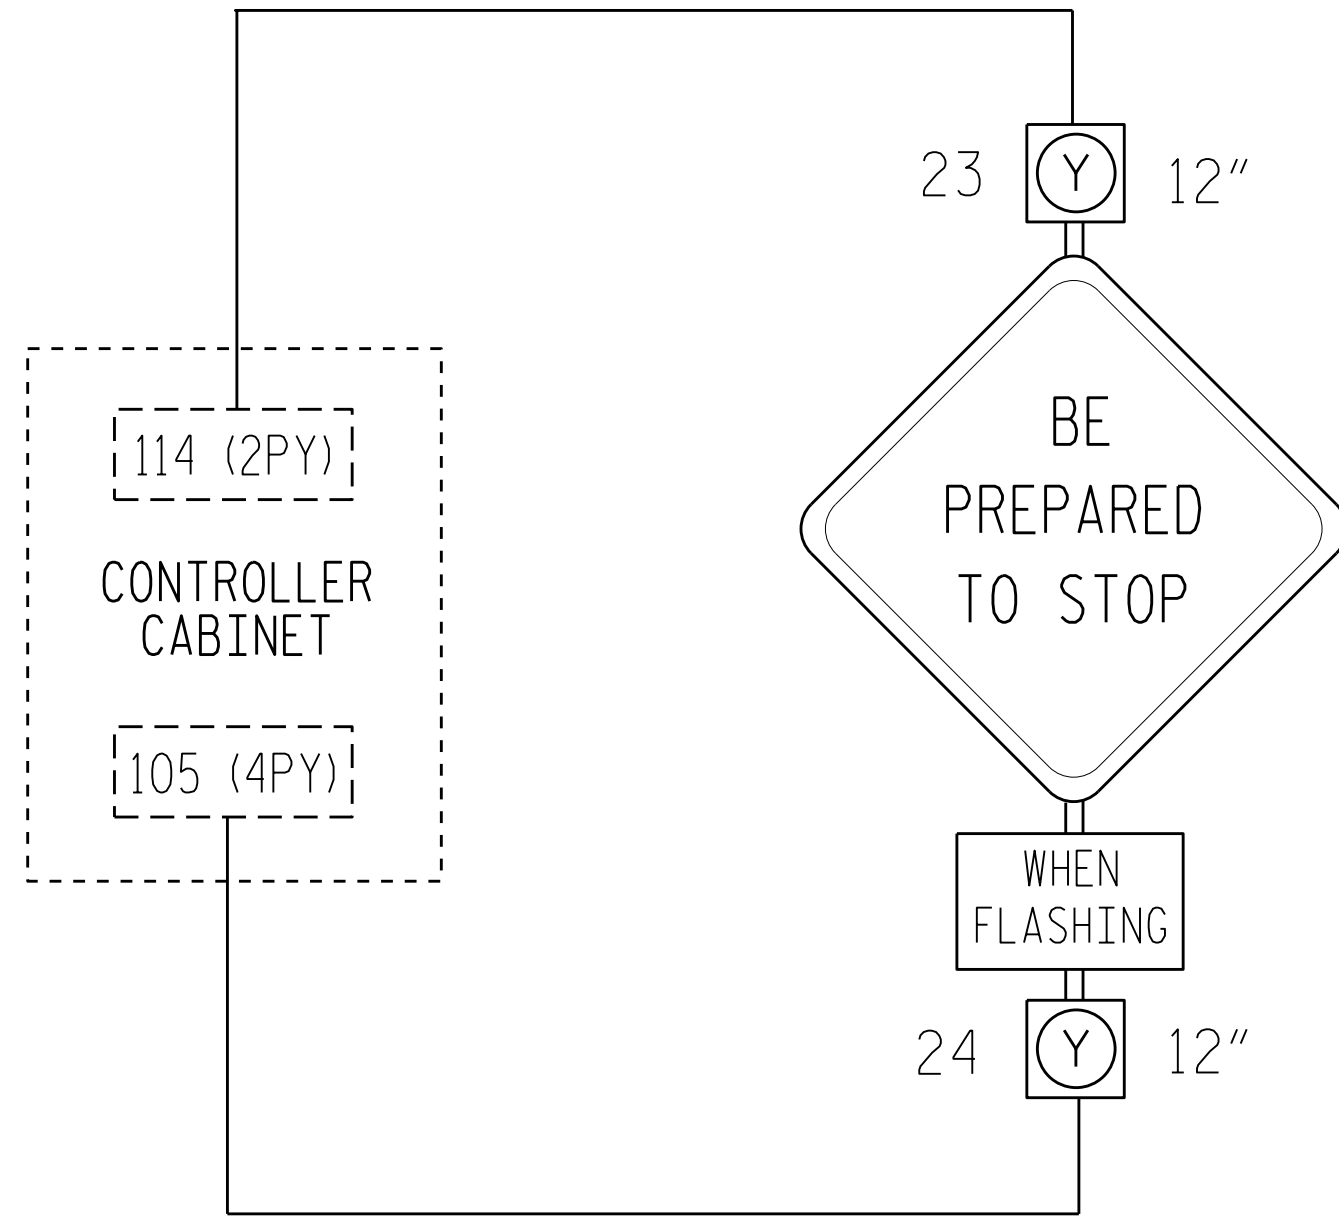

IMPORTANT

1. Ensure that the white keyed plug located behind rear panel of output file labeled 2PY-4PY-6PY-8PY is disconnected. This will disconnect conflict monitor wires from field signal terminals 114 and 105 shown on flasher wiring detail on this sheet.
2. Install loadswitches in output file slots S3 and S6.
3. To activate the Advance Beacon operation as indicated on the signal plan, program outputs 33 and 35 as shown on this sheet, and the phase 2 approach as per the Advance Beacon Programming Detail as shown on this sheet.

ADVANCE BEACON PROGRAMMING DETAIL

(program controller as shown below)

1. FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '2' (OUTPUT BEACON SETTINGS).

```

          OUTPUT BEACON SETTINGS
TRIGGER PHASES: 12345678910111213141516
BEACON #1 OFF   X
BEACON #2 OFF
BEACON #3 OFF
BEACON #4 OFF

          BEACON  | 1  2  3  4
OFF DELAY TIME (0-255); 0  0  0  0
ON DELAY TIME (0-255);  0  0  0  0
STOP-TIME HOLD (0-255); 0  0  0  0
    
```


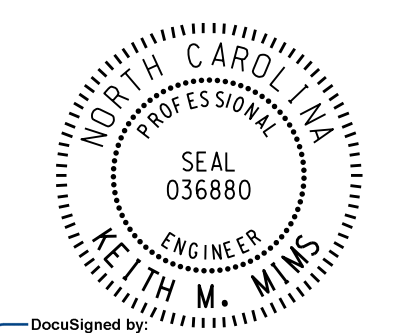
SCROLL DOWN TO VIEW ALL DATA

ADVANCE BEACON PROGRAMMING COMPLETE

NOTE: AN OUTPUT HAS TO BE ASSIGNED AS AN ADVANCE BEACON IN ORDER FOR PROPER OPERATION TO OCCUR. SEE OUTPUT ASSIGNMENT DETAIL ON THIS SHEET.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 13-0059
DESIGNED: January 2016
SEALED: 12-16-16
REVISED: N/A

Electrical Detail - Sheet 2 of 2

ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared In the Offices of:  750 N. Greenfield Pkwy, Garner, NC 27529	US 25 (Hendersonville Road) at Linamar North Carolina Ent. Division 13 Buncombe County Skyland PLAN DATE: December 2016 REVIEWED BY: DTJ PREPARED BY: James Peterson REVIEWED BY:	SEAL  KEITH M. MINIS ENGINEER								
REVISIONS <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>NO.</th> <th>DESCRIPTION</th> <th>INIT.</th> <th>DATE</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> <td> </td> </tr> </tbody> </table>		NO.	DESCRIPTION	INIT.	DATE					DocuSigned by: Keith M. Minis 12/19/2016 DATE
NO.	DESCRIPTION	INIT.	DATE							
		SIG. INVENTORY NO. 13-0059								

13-0059-2016-12-19
S:\MITSAS\13-0059\Sig. Management\130059_smc.e...xxx.dgn
J. Peterson