

INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 7A

(program controller as shown below)

- NOTES:
- THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.
 - THE TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 58 TO INPUT #4 SO THAT THE DELAY ON LOOP 7A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 4 IS REACHED.

```

PAGE: 2 C1 PIN:42 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....4
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....-
VEHICLE DETECTOR (1-64).....8
PEDESTRIAN DETECTOR (1-16).....-
ALTERNATE PED DETECTOR (1-16).....-
PREEMPT (1-10).....-
INVERTED PREEMPT (1-10).....-
STOP TIME (Y/N).....-
FLASH SENSE (Y/N).....-
DOOR OPEN (Y/N).....-
MANUAL CONTROL ENABLE (Y/N).....-
MANUAL CONTROL ADVANCE (Y/N).....-
SPECIAL FUNCTION ALARM (1-8).....-
TOD HOUR SYNCHRONIZATION (0-23).....-
FORCE OFF RING (1-4).....-
HOLD PHASES (1-16).....-
PLAN (65=FLSH,66=FREE).._ OFFSET#...
CHANGE PHASE SEQUENCE PAGE (1-12)...
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)...
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..
    
```

ENTER "58" TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

```

PAGE: 2 C1 PIN:42 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....4
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....-
VEHICLE DETECTOR (1-64).....58
PEDESTRIAN DETECTOR (1-16).....-
ALTERNATE PED DETECTOR (1-16).....-
PREEMPT (1-10).....-
INVERTED PREEMPT (1-10).....-
STOP TIME (Y/N).....-
FLASH SENSE (Y/N).....-
DOOR OPEN (Y/N).....-
MANUAL CONTROL ENABLE (Y/N).....-
MANUAL CONTROL ADVANCE (Y/N).....-
SPECIAL FUNCTION ALARM (1-8).....-
TOD HOUR SYNCHRONIZATION (0-23).....-
FORCE OFF RING (1-4).....-
HOLD PHASES (1-16).....-
PLAN (65=FLSH,66=FREE).._ OFFSET#...
CHANGE PHASE SEQUENCE PAGE (1-12)...
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)...
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..
    
```

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 7A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #58.

```

VEHICLE DETECTOR #58 SETTINGS (+,-,1-64)
SETTING: (Y/N)
ENABLE DETECTOR.....N
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATE DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED :
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....0
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0
    
```

ENTER "Y" FOR ENABLE DETECTOR

ENTER "7" FOR PHASES ASSIGNED

ENSURE DELAY IS 0

```

VEHICLE DETECTOR #58 SETTINGS (+,-,1-64)
SETTING: (Y/N)
ENABLE DETECTOR.....Y
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATE DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED : X
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....0
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0
    
```

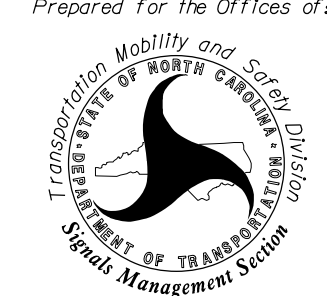

PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 10-2192
 DESIGNED: June 2015
 SEALED: August 30, 2016
 REVISED:

ELECTRICAL DETAIL SHEET 3 OF 4

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared for the Offices of:  TRANSPORTATION Mobility and Safety Division STATE OF NORTH CAROLINA SPECIAL MANAGEMENT SECTION	US 74 (Andrew Jackson Highway) Eastbound at Harris Teeter Distribution Cntr		SEAL  SEAL 022516 LISA M. MOON ENGINEER
	Division 10 Union County Indian Trail	PLAN DATE: June 2015 REVIEWED BY: B Humfleet PREPARED BY: LM Moon REVIEWED BY:	
DRMP, INC. 5950 FAIRVIEW ROAD, SUITE 320 CHARLOTTE, NC 28210 NC LICENSE NO. C-2213 • (704) 332-2289		Lisa M. Moon 12/12/2016 DATE SIG. INVENTORY NO. 10-2192	

09-DEC-2016 14:16
 N:\Projects\c65\pauls\des\gn\m\11\ing\102192-20160808ea.dgn
 r lawton AT CAR-RLAWTON-W7