

"PHASE 5" to OVERLAP "F" OUTPUT ASSIGNMENT PROGRAMMING DETAIL (program controller as shown below)

- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS).
- WITH CURSOR IN "OUTPUT ASSIGNMENT #" FIELD, USE + KEY TO FIND THE OUTPUT ASSIGNMENT NUMBER 30, AS SHOWN BELOW.
- PROGRAM CONTROLLER AS SHOWN:

```

PAGE:1 C1 PIN:32 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....30
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID, 1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....

```

SCROLL DOWN TO VIEW ALL DATA

```

PAGE:1 C1 PIN:32 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1, P=16)...6
SELECT COLOR (0=RED,1=YEL,2=GRN)...0

```

WHEN A "Y" IS ENTERED FOR "VEHICLE OVERLAP" THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS ENTER AFTER ENTERING DATA, THEN ESC.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS "VEHICLE OVERLAP" AS SHOWN BELOW:

```

PAGE:1 C1 PIN:32 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....30
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID, 1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....

```

VEHICLE OVERLAP F (RED) LOAD SWITCH S5

- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS).
- WITH CURSOR IN "OUTPUT ASSIGNMENT #" FIELD, USE + KEY TO FIND THE OUTPUT ASSIGNMENT NUMBER 32, AS SHOWN BELOW.
- PROGRAM CONTROLLER AS SHOWN:

```

PAGE:1 C1 PIN:34 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....32
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID, 1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....

```

SCROLL DOWN TO VIEW ALL DATA

```

PAGE:1 C1 PIN:34 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1, P=16)...6
SELECT COLOR (0=RED,1=YEL,2=GRN)...2

```

WHEN A "Y" IS ENTERED FOR "VEHICLE OVERLAP" THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS ENTER AFTER ENTERING DATA, THEN ESC.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS "VEHICLE OVERLAP" AS SHOWN BELOW:

```

PAGE:1 C1 PIN:34 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....32
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID, 1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....

```

VEHICLE OVERLAP F (GREEN) LOAD SWITCH S5

- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS).
- WITH CURSOR IN "OUTPUT ASSIGNMENT #" FIELD, USE + KEY TO FIND THE OUTPUT ASSIGNMENT NUMBER 31, AS SHOWN BELOW.
- PROGRAM CONTROLLER AS SHOWN:

```

PAGE:1 C1 PIN:33 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....31
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID, 1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....

```

SCROLL DOWN TO VIEW ALL DATA

```

PAGE:1 C1 PIN:33 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1, P=16)...6
SELECT COLOR (0=RED,1=YEL,2=GRN)...1

```

WHEN A "Y" IS ENTERED FOR "VEHICLE OVERLAP" THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS ENTER AFTER ENTERING DATA, THEN ESC.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS "VEHICLE OVERLAP" AS SHOWN BELOW:

```

PAGE:1 C1 PIN:33 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....31
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID, 1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....

```

VEHICLE OVERLAP F (YELLOW) LOAD SWITCH S5

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 10-1505
DESIGNED: February 2017
SEALED: 02/07/2017
REVISED:

Electrical Detail - Sheet 3 of 3

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED


PLANS PREPARED BY:



DRMP
ENGINEERS · PLANNERS · SCIENTISTS

DRMP, INC.
5850 FAIRVIEW ROAD, SUITE 320
CHARLOTTE, NC 28210
NC LICENSE NO. C-2213 • (704) 332-2288


Prepared for the Offices of:

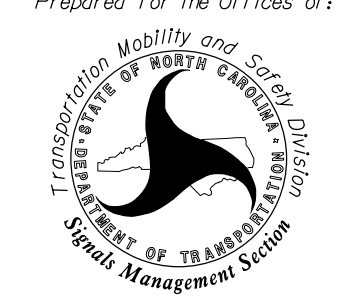

750 N. Greenfield Pkwy, Garner, NC 27529

US 74 at SR 2356 (Chambers Drive)	
Division 10	Union County Indian Trail
PLAN DATE: January 2017	REVIEWED BY: L. Moon
PREPARED BY: R. Lawton	REVIEWED BY:
REVISIONS	INIT. DATE
	GCB 6/29/15

SEAL



Lisa M. Moon
2/8/2017
DATE

SIG. INVENTORY NO. 10-1505

09-FEB-2017 15:21
N:\P\T\OFF\c451\0901\0901\01505_sml.eia.20160112.dgn
lmoon AT CAR-LMOONI-W7