

OUTPUT REMAPPING ASSIGNMENT PROGRAMMING DETAIL
TO ASSIGN LOADSWITCH AUX S3 TO OVERLAP 'E'
(FOR SIGNAL HEAD 83)
(program controller as shown below)

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN
'1' (OUTPUT ASSIGNMENTS),
WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION, ENTER "45"

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1 C1 PIN:91 NOT ENABLED
OUTPUT ASSIGNMENT #.....45
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

OVERLAP "E" RED

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS
"Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1 C1 PIN:91 NOT ENABLED
SELECT VEHICLE OVERLAP (A=1,P=16)...5
SELECT COLOR(0=RED,1=YEL,2=GRN)....0
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'
THE SCREEN SHOWN ABOVE WILL APPEAR.
ENTER DATA AS SHOWN.
PRESS THE 'ENT' AFTER AFTER INPUTING DATA,
THEN 'ESC'.

PRESS '+' KEY FOR OUTPUT 46

```
PAGE:1 C1 PIN:91 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....45
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

```
PAGE:1 C1 PIN:93 NOT ENABLED
OUTPUT ASSIGNMENT #.....46
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

OVERLAP "E" GREEN

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS
"Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1 C1 PIN:93 NOT ENABLED
SELECT VEHICLE OVERLAP (A=1,P=16)...5
SELECT COLOR(0=RED,1=YEL,2=GRN)....2
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'
THE SCREEN SHOWN ABOVE WILL APPEAR.
ENTER DATA AS SHOWN.
PRESS THE 'ENT' AFTER AFTER INPUTING DATA,
THEN 'ESC'.

PRESS '+' KEY FOR OUTPUT 54

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1 C1 PIN:93 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....46
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

```
PAGE:1 C1 PIN:101 CONTROLLER FLASH
OUTPUT ASSIGNMENT #.....54
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....Y
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

OVERLAP "E" YELLOW

ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1 C1 PIN:101 CONTROLLER FLASH
SELECT VEHICLE OVERLAP (A=1,P=16)...5
SELECT COLOR(0=RED,1=YEL,2=GRN)....1
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'
THE SCREEN SHOWN ABOVE WILL APPEAR.
ENTER DATA AS SHOWN.
PRESS THE 'ENT' AFTER AFTER INPUTING DATA,
THEN 'ESC'.

THE OUTPUT IS SET AS CONTROLLER FLASH BY DEFAULT. THIS
"Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

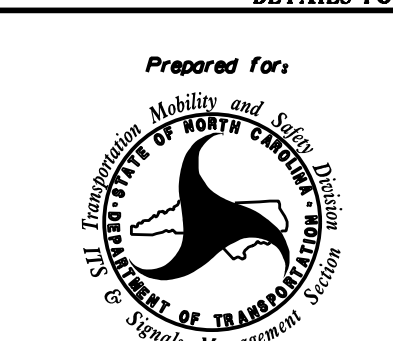
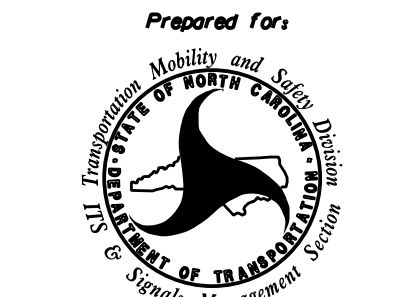
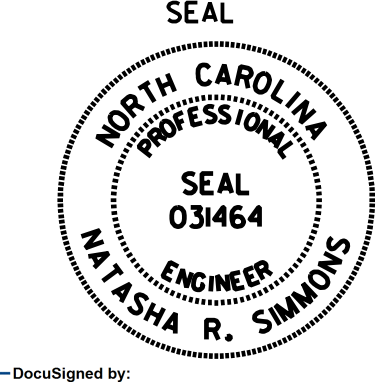
DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1 C1 PIN:101 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....54
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 03-0369T3
DESIGNED: February 2018
SEALED: 11/04/2020
REVISED: N/A

Electrical Detail - Sheet 7 of 8
Signal Upgrade
Temporary Design 3

DOCUMENT NOT CONSIDERED FINAL
UNLESS ALL SIGNATURES COMPLETED

	Prepared for: 		US 17 (Market Street) at SR 1363 (Bayshore Drive)/ SR 2717 (Torchwood Boulevard)		
	HNTB NORTH CAROLINA, P.C. 343 E. Six Forks Road, Suite 200 Raleigh, North Carolina 27609 License No: C-1564 (919) 546-8997		Division 03 New Hanover Co. Wilmington PLAN DATE: February 2018 REVIEWED BY: A.D. Klinksiek PREPARED BY: A.H. Thornburg REVIEWED BY: N.R. Simmons		
REVISIONS		INIT.	DATE	DocuSigned by: Natasha R. Simmons 11/4/2020	
Removed phase 3 4-section FYA. Added phase 3 protected dual left. Corrected loop 1A/5A delay to 10 sec.				SIGNATURE DATE SIG. INVENTORY NO. 03-0369T3	