

**OUTPUT REMAPPING ASSIGNMENT PROGRAMMING DETAIL
TO ASSIGN LOADSWITCH AUX S6 TO OVERLAP 'F'
(FOR SIGNAL HEAD 44)
(program controller as shown below)**

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS). WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION, ENTER "37"

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:83 NOT ENABLED
OUTPUT ASSIGNMENT #.....37
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

OVERLAP "F" RED

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

```

PAGE:1 C1 PIN:83 NOT ENABLED
SELECT VEHICLE OVERLAP (A=1,P=16)...6
SELECT COLOR(0=RED,1=YEL,2=GRN)....0
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN.

PRESS THE 'ENT' AFTER AFTER INPUTING DATA, THEN 'ESC'.

PRESS '+' KEY FOR OUTPUT 38

```

PAGE:1 C1 PIN:83 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....37
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

```

PAGE:1 C1 PIN:84 NOT ENABLED
OUTPUT ASSIGNMENT #.....38
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

OVERLAP "F" GREEN

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

```

PAGE:1 C1 PIN:84 NOT ENABLED
SELECT VEHICLE OVERLAP (A=1,P=16)...6
SELECT COLOR(0=RED,1=YEL,2=GRN)....2
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN.

PRESS THE 'ENT' AFTER AFTER INPUTING DATA, THEN 'ESC'.

PRESS '+' KEY FOR OUTPUT 53

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:84 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....38
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

```

PAGE:1 C1 PIN:100 NOT ENABLED
OUTPUT ASSIGNMENT #.....53
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

OVERLAP "F" YELLOW

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

```

PAGE:1 C1 PIN:100 NOT ENABLED
SELECT VEHICLE OVERLAP (A=1,P=16)...6
SELECT COLOR(0=RED,1=YEL,2=GRN)....1
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN.

PRESS THE 'ENT' AFTER AFTER INPUTING DATA, THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.


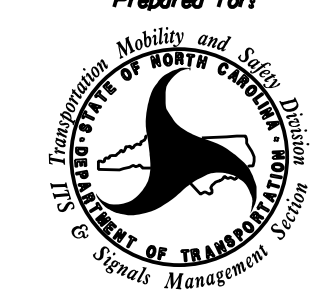

```

PAGE:1 C1 PIN:100 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....53
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0369T3
DESIGNED: February 2018
SEALED: 8-1-18
REVISED: N/A

Electrical Detail - Sheet 8 of 8
Signal Upgrade
Temporary Design 3

**DOCUMENT NOT CONSIDERED FINAL
UNLESS ALL SIGNATURES COMPLETED**

	Prepared for: 		
	US 17 (Market Street) at SR 1363 (Bayshore Drive)/ SR 2717 (Torchwood Boulevard)		
Division 03 New Hanover Co. Wilmington		PLAN DATE: February 2018 REVIEWED BY: A.D. Klinksiek	DocuSigned by: Natasha R. Simmons 8/1/2018
PREPARED BY: A.H. Thornburg REVIEWED BY: N.R. Simmons		REVISIONS INIT. DATE	
HNTB NORTH CAROLINA, P.C. 343 E. Six Forks Road, Suite 200 Raleigh, North Carolina 27609 No. License No.: C-1564 (919) 546-8997		750 N. Greenfield Pkwy, Corner, NC 27529	