
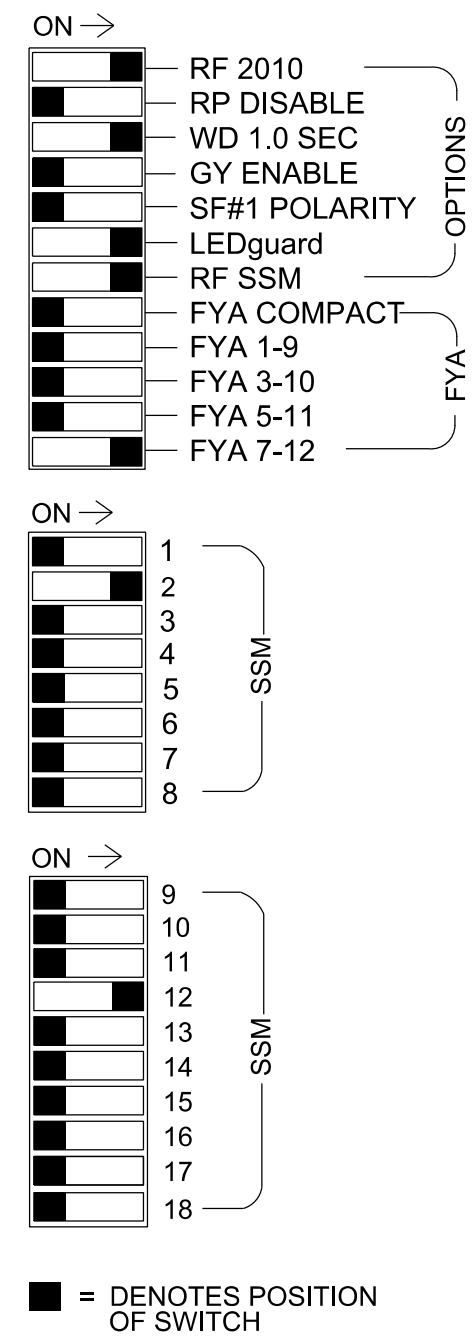


18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

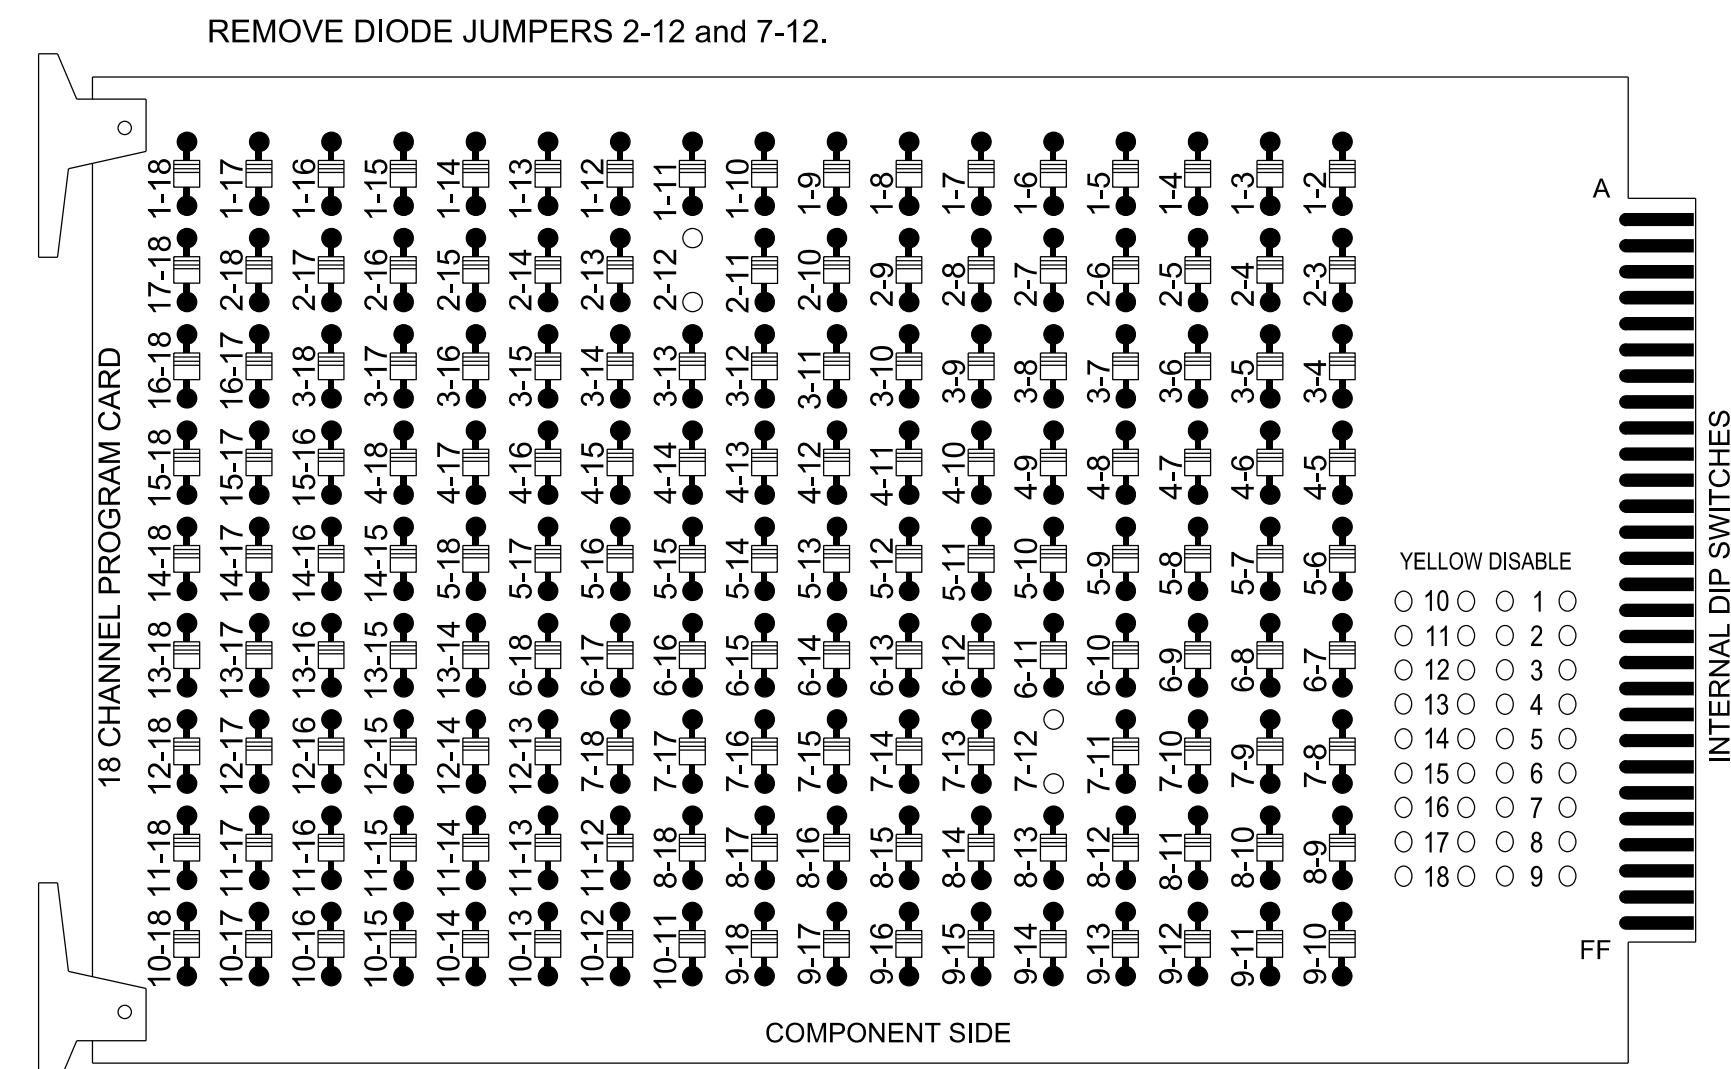

REMOVE JUMPERS AS SHOWN

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that the Red Enable is active at all times during normal operation.
4. Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the signal plan.
2. Program controller to start up in phase 2 Green No Walk.
3. If this signal will be managed by an ATMS software, enable controller and detector logging for all detectors used at this location.

EQUIPMENT INFORMATION

Controller.....2070LX
 Cabinet.....332 w/ Aux
 Software.....Q-Free MAXTIME
 Cabinet Mount.....Base
 Output File Positions.....18 With Aux. Output File
 Load Switches Used.....S2, S10, AUX S5
 Phases Used.....2,7
 Overlap "1".....NOT USED
 Overlap "2".....NOT USED
 Overlap "3".....NOT USED
 Overlap "4".....*

*See overlap programming detail on sheet 2.

SIGNAL HEAD HOOK-UP CHART


LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6	
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18	
PHASE	1	2	PED	3	4	PED	5	6	PED	7	8	PED	OL1	OL2	SPARE	OL3	OL4	SPARE	
SIGNAL HEAD NO.	NU	21,22	NU	NU	NU	NU	NU	NU	NU	71,72	*	NU	NU	NU	NU	NU	71,72	*	NU
RED		128																	
YELLOW		129								*									
GREEN		130																	
RED ARROW																			A101
YELLOW ARROW																			A102
FLASHING YELLOW ARROW																			A103
GREEN ARROW										124									

NU = Not Used

* Denotes install load resistor. See load resistor installation detail this sheet.
 * See pictorial of head wiring in detail this sheet.

INPUT FILE POSITION LAYOUT

(front view)

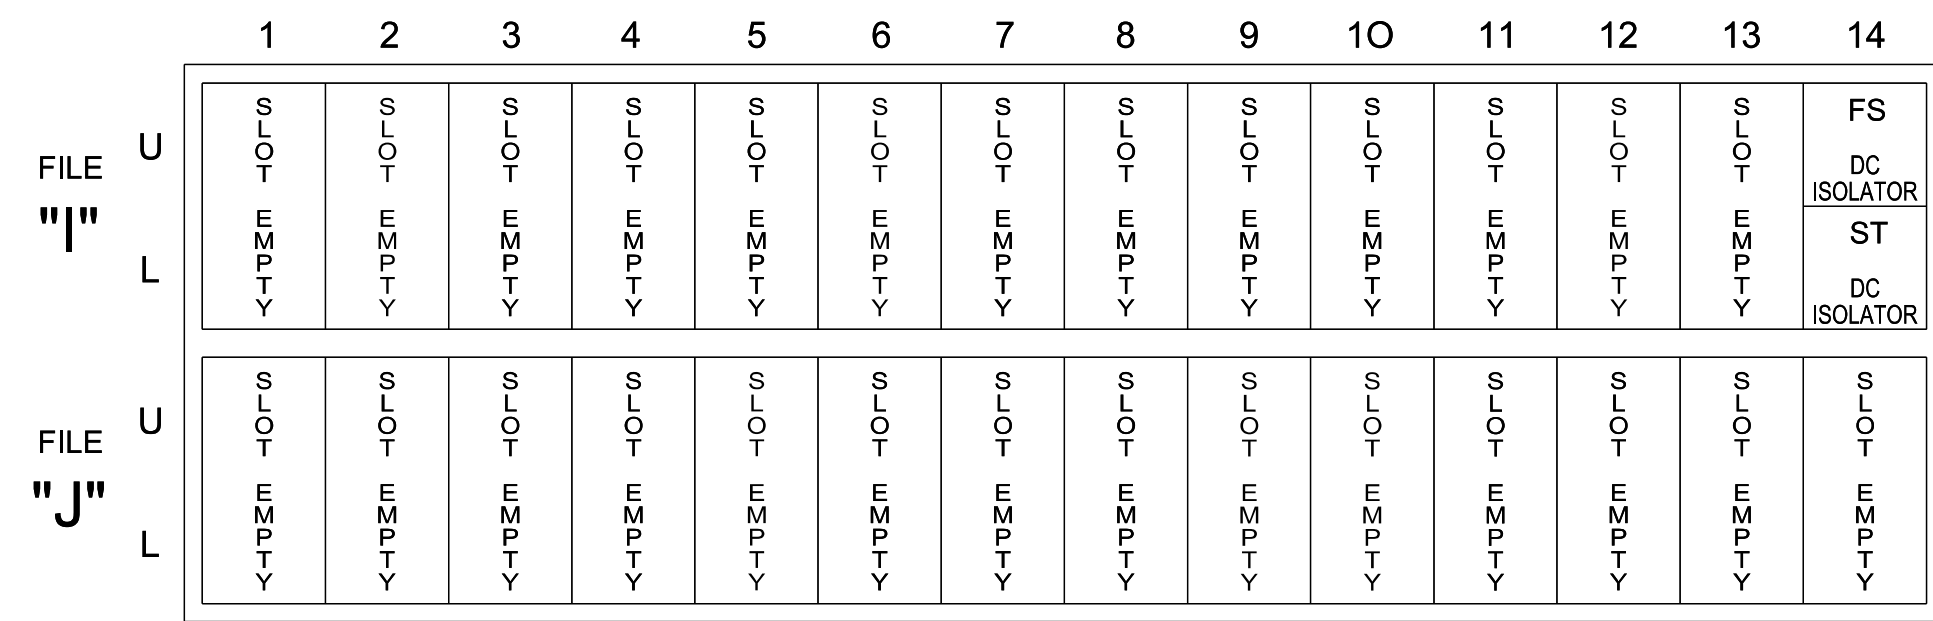


SPECIAL DETECTOR NOTE

Install a video detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer-approved mounting locations to accomplish the detection schemes shown on the Signal Design Plans.

FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

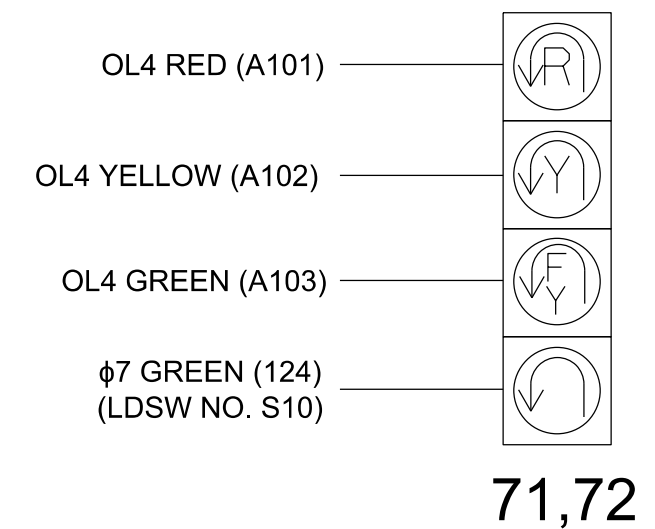

MAXTIME OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

Front Panel
 Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface
 Home >Controller >Overlap Configuration >Overlaps


Overlap Plan 1

Overlap	4
Type	FYA 4 - Section
Included Phases	2
Modifier Phases	7
Trail Green	0
Trail Yellow	0.0
Trail Red	0.0

LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown)

ACCEPTABLE VALUES	
Value (ohms)	Wattage
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

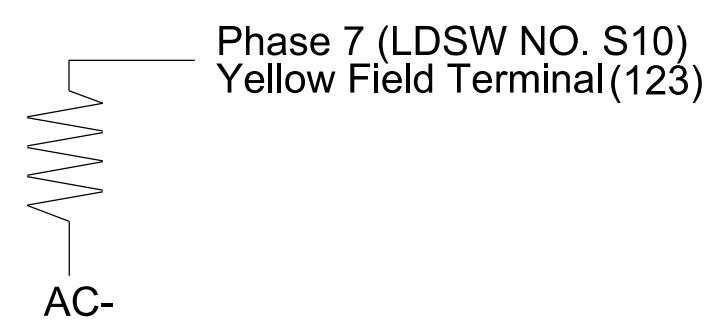

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 11-1467T
 DESIGNED: May 2023
 SEALED: 5/24/2023
 REVISED: N/A

Temporary Installation - Electrical Detail 1 of 1(Phase 9)

Prepared For the Offices of:

 750 N. Greenfield Pkwy, Garner, NC 27529

US 421 - NC 16 at
 SR 1323 (Dancy Road)/
 Lowe's Entrance
 West U-Turn
 Division 11 Wilkes County Wilkesboro
 PLAN DATE: May 2023 REVIEWED BY: M.L.Stygles
 PREPARED BY: S.R.Chiluka REVIEWED BY: J.Ma

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SEAL

 M.L. STYGLES
 ENGINEER
 DATE: 5/24/2023

VHB Engineering NC, P.C. (C-3705)
 940 Main Campus Drive, Suite 500
 Raleigh, NC 27606
 919.829.0328