


18 CHANNEL CONFLICT MONITOR
PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

REMOVE DIODE JUMPERS 1-6, 1-9, 1-15, 2-6, 2-9, 2-15, 4-14, 6-9, 6-15 and 9-15.

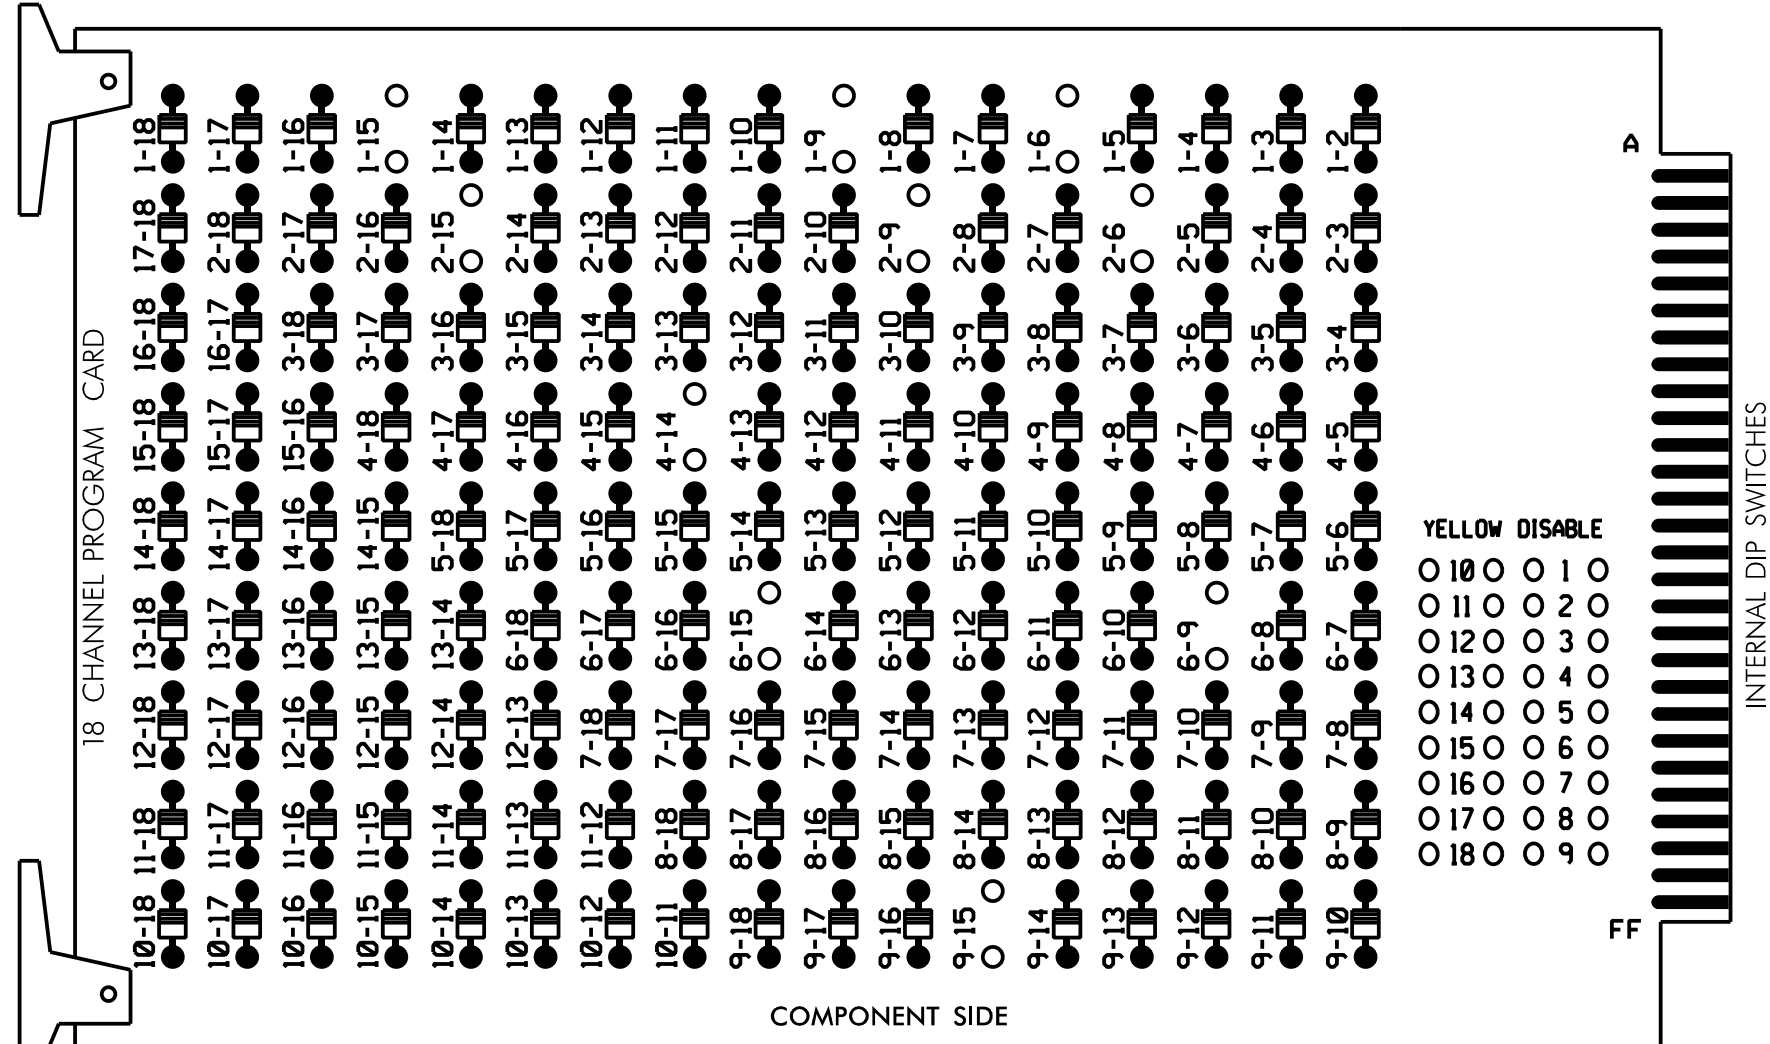

REMOVE JUMPERS AS SHOWN

NOTES:

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
- Ensure that Red Enable is active at all times during normal operation.
- Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

■ = DENOTES POSITION OF SWITCH

NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Program controller to start up in phases 2 and 6 Green/Don't Walk.
- Enable Simultaneous Gap-Out feature for all phases.
- The cabinet and controller are part of the Hickory City Signal System.

EQUIPMENT INFORMATION

CONTROLLER.....2070LX
CABINET.....332 W/ AUX
SOFTWARE.....SE-PAC2070 VER. 5.4
CABINET MOUNT.....BASE
OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
LOAD SWITCHES USED.....S1,S2,S5,S6,S8,S9,AUX S1
PHASES USED.....1,2,4,4 PED,6,6 PED
OVERLAP "A".....*
OVERLAP "B".....NOT USED
OVERLAP "C".....NOT USED
OVERLAP "D".....NOT USED
* See Sheet 2 for Overlap Programming.


SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11★	21	22	NU	NU	41,42	P43, P44	NU	61	62	P61, P62	NU	NU	NU	11★	NU	NU	NU
RED		128	128		101			134	134									
YELLOW	*	129	129		102			135	135									
GREEN			130		103			136										
RED ARROW													A121					
YELLOW ARROW													A122					
FLASHING YELLOW ARROW													A123					
GREEN ARROW	127	130						136										
Hand					104				119									
Walking					106				121									

NU = Not Used
* Denotes install load resistor. See load resistor installation detail this sheet.
★ See pictorial of head wiring in detail this sheet.

INPUT FILE POSITION LAYOUT

(front view)

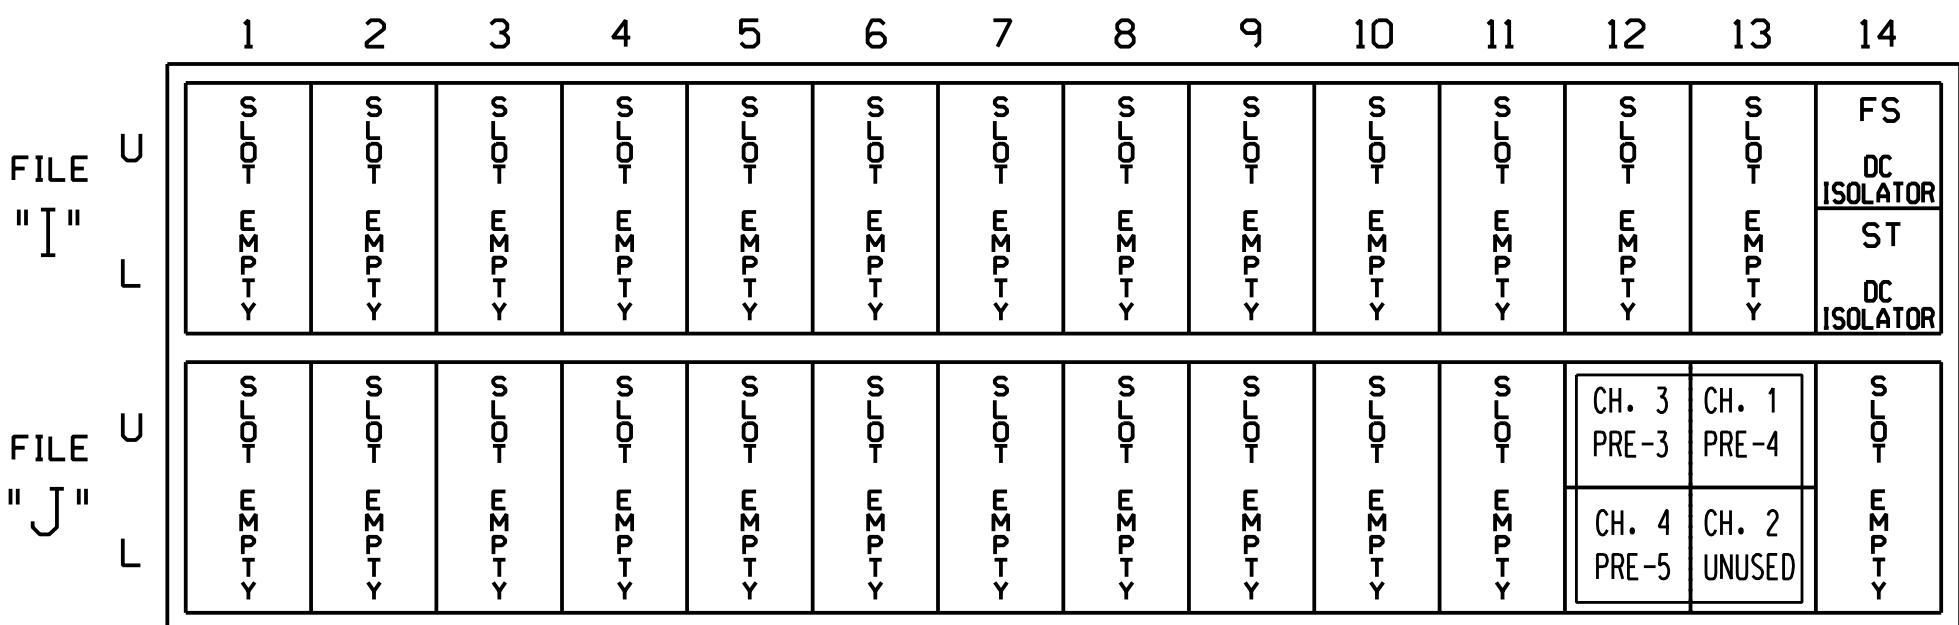

EX. : 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME
PRE = PREEMPT


4 CHANNEL EV OSP CARD
INSERT CARD INTO
SLOT J13

SPECIAL DETECTOR NOTE

Install a multizone microwave detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer-approved mounting locations to accomplish the detection schemes shown on the Signal Design Plans.

FYA SIGNAL WIRING DETAIL

(wire signal head as shown)

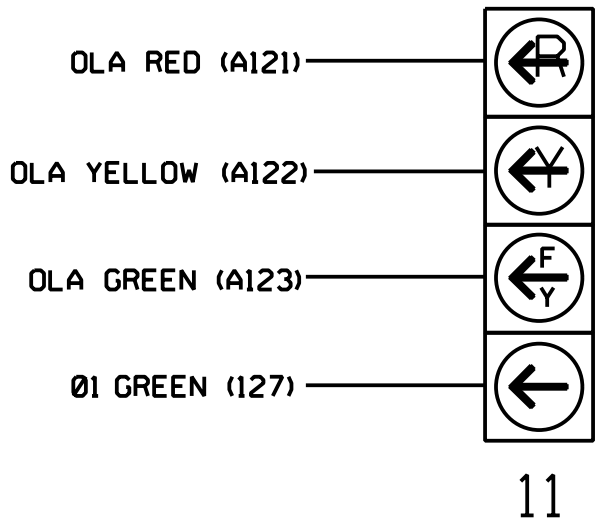

COUNTDOWN PEDESTRIAN SIGNAL OPERATION

Countdown Ped Signals are required to display timing only during Ped Clearance Interval. Consult Ped Signal Module user's manual for instructions on selecting this feature.

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 12-0945T3
DESIGNED: October 2023
SEALED: 09/06/2024
REVISED: N/A

Signal Upgrade-
Electrical Detail - Sheet 1 of 3
(Construction Phase 2)


DOCUMENT NOT CONSIDERED FINAL
UNLESS ALL SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared for: 750 N. Greenfield Pkwy, Garner, NC 27529	NC 127 SE at SR 2231 (2nd Ave SE) Catawba County Hickory		SEAL NORTH CAROLINA PROFESSIONAL ENGINEER SEAL 031464 W. J. SHA R. SIMMONS
	PLAN DATE: January 2024	REVIEWED BY: N.K. Vianich	
	PREPARED BY: E.E. Tiller	REVIEWED BY: N.R. Simmons	
	REVISIONS	INIT. DATE	
DocuSigned by: Natasha R. Simmons 9/6/2024		SIGNATURE DATE	
SIC. INVENTORY NO. 12-0945T3			

LOAD RESISTOR INSTALLATION DETAIL

(install resistor as shown below)

ACCEPTABLE VALUES	
VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

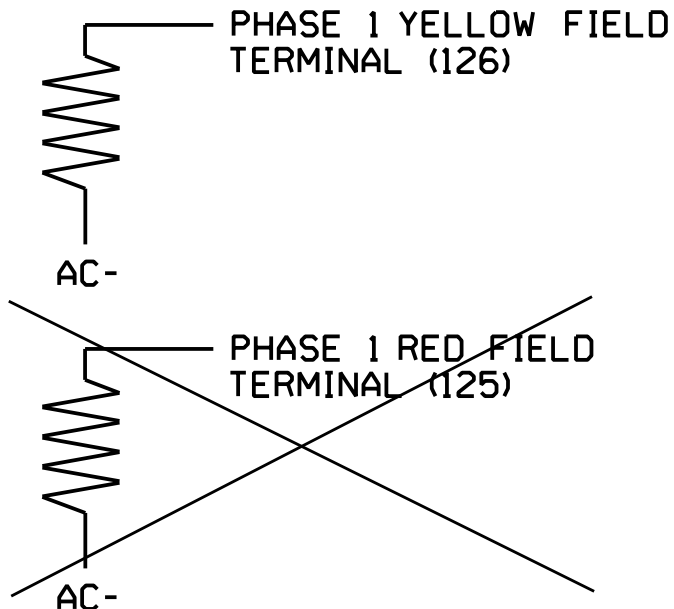

HNTB

HNTB NORTH CAROLINA, P.C.
4000 Center at North Hills St
Suite 500
Raleigh, North Carolina 27609
NC License No. C-1554
(919) 546-8997