PROJECT REFERENCE NO.	SHEET NO.
I-0914BA	Sig.3.1

EDI MODEL 2010ECL-NC CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)



REMOVE DIODE JUMPERS: I-2, I-5, I-6, I-11, 2-5, 2-6, 2-11, 4-8, 5-6, 5-9, 6-9 and 9-11.

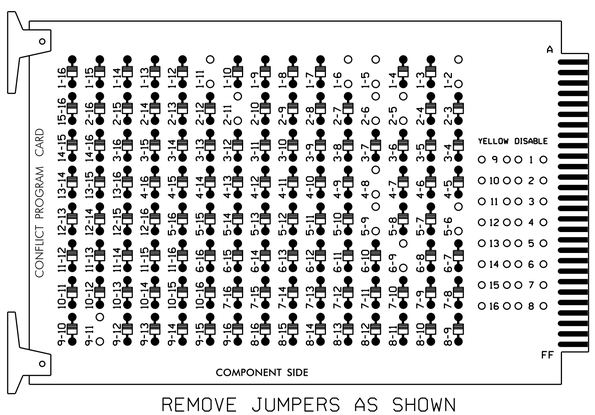

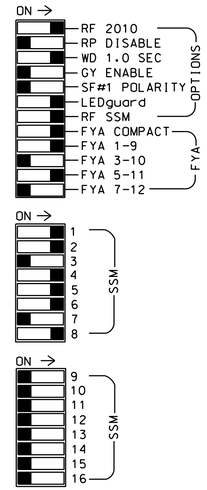

REMOVE JUMPERS AS SHOWN

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Make sure jumpers SEL2-SEL5 are present on the monitor board.
3. ! Special cabinet wiring is required to utilize FYA COMPACT mode. See Ped Yellow Conflict Monitor Wiring Detail on this sheet. !

■ = DENOTES POSITION OF SWITCH

INPUT FILE POSITION LAYOUT

(front view)

		1	2	3	4	5	6	7	8	9	10	11	12	13	14
FILE "I"	U	Ø 1	SLOT	SLOT	WIRED ⊗	SLOT	Ø 4	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	FS
		1A	EMPTY	EMPTY	INPUT	EMPTY	4A	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	DC ISOLATOR
	L	NOT USED					NOT USED								ST
															DC ISOLATOR
FILE "J"	U	Ø 5	Ø 6	SLOT	WIRED ⊗	SLOT	Ø 8	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT
		5A	6A	EMPTY	INPUT	EMPTY	8A	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY
	L	NOT USED	NOT USED				Ø 8 8B								

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

⊗ Wired Input - Do not populate slot with detector card

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A[1]	TB2-1,2	I1U	56	18	1	1	Y	Y			15
	-	J4U	48	10	26	6	Y	Y	Y		3
4A	TB4-9,10	I6U	41	3	4	4	Y	Y			
5A[2]	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	I4U	47	9	22	2	Y	Y			
6A	TB3-5,6	J2U	40	2	6	6	Y	Y			
8A	TB5-9,10	J6U	42	4	8	8	Y	Y			3
8B	TB5-11,12	J6L	46	8	18	8	Y	Y			

[1] Add jumper from I1-W to J4-W, on rear of input file.
[2] Add jumper from J1-W to I4-W, on rear of input file.

INPUT FILE POSITION LEGEND: J2L
FILE J
SLOT 2
LOWER

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Ensure that Red Enable is active at all times during normal operation. To prevent Red Failures on unused monitor channels, tie unused red monitor inputs 3,7,9,10, 11,12,13,14,15 & 16 to load switch AC+ per the cabinet manufacturer's instructions.
3. Program phases 4 and 8 for Dual Entry.
4. Enable Simultaneous Gap-Out for all phases.
5. Program phase 6 for Variable Initial and Gap Reduction.
6. Program phases 2 and 6 for Start Up In Green.
7. Program phases 2 and 6 for Yellow Flash, and overlap 1 as Wag Overlaps.

EQUIPMENT INFORMATION

CONTROLLER.....2070L
CABINET.....332
SOFTWARE.....ECONOLITE OASIS
CABINET MOUNT.....BASE
OUTPUT FILE POSITIONS...12
LOAD SWITCHES USED.....S1,S2,S2P,S4,S5,S6,S6P,S8
PHASES USED.....1,2,4,5,6,8
OVERLAP "A".....1+2
OVERLAP "B".....NOT USED
OVERLAP "C".....5+6
OVERLAP "D".....NOT USED

PED YELLOW CONFLICT MONITOR WIRING DETAIL

(make cabinet wiring changes as shown below)

In order to use FYA COMPACT mode on the 2010ECL-NC Monitor, the cabinet must be wired such that the (unused) Ped Yellow load switch outputs are wired to the conflict monitor as follows: From 2 PY (field term. 114) to chan. 9 green (monitor pin 13), and from 6 PY (field term. 120) to chan. 10 green (monitor pin R).

Follow the instructions below to make the appropriate connections:

STEP 1: Fold down rear panel of output file.

STEP 2: Find unused wiring harness from conflict monitor card edge connector (which should be tied and bundled together).

STEP 3: Find the conductors that correspond to the following conflict monitor card edge pins and solder wire to the appropriate terminal on the rear of the output file as shown below:

CMU-13 ———————— 2PY (term. 114)
CMU-R ———————— 6PY (term. 120)

NOTE: Some cabinet manufacturers use a keyed plug to accomplish this wiring configuration. If connectors are used, simply plug the two connectors together that are labeled with the pin-out as shown above.

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 05-1265T2
DESIGNED: December 2014
SEALED: 1/15/2015
REVISED: N/A

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S2P		S3	S4	S4P	S5	S6	S6P		S7	S8	S8P
PHASE	OLA	2	1 GRN	2 PED	3	4	4 PED	OLC	6	5 GRN	6 PED	7	8	8 PED
SIGNAL HEAD NO.	★ 11	22,23	★ 11	NU	NU	41,42	NU	★ 51	62,63	★ 51	NU	NU	81,82	NU
RED		128				101			134				107	
YELLOW		129				102			135				108	
GREEN		130				103			136				109	
RED ARROW	125							131						
YELLOW ARROW	126							132						
FLASHING YELLOW ARROW	127							133						
✋														
GREEN ARROW			114							120				
🚶				*							*			

NU = Not Used

* Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail below.

NOTE: Load Switches S1, S2P, S5, S6P require output remapping. See sheets 3 and 4 of this electrical detail for instructions.

FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

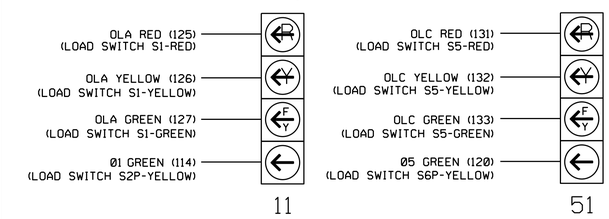

NOTE

The sequence display for this signal heads 11 and 51 require special logic programming. See sheet 2 for programming instructions.

LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown below)

ACCEPTABLE VALUES

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

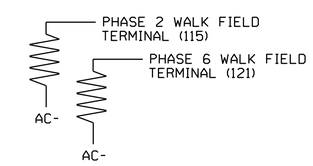

Electrical Detail - Temporary Design 2 (TMP Phase 3) - Sheet 1 of 4

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared in the Offices of:
Transportation Mobility and Safety Division
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
Signals Management Section
750 N.Greenfield Pkwy,Garner,NC 27529

US 158 Bypass
at
SR 1310 (Ross Mill Road) and
Prosperity Drive

Division 5 Vance County DS Henderson

PLAN DATE:	January 2015	REVIEWED BY:	JTR
PREPARED BY:	S. Armstrong	REVIEWED BY:	

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 008453 ENGINEER JOHN T. ROWE, JR.

DocuSigned by: John T. Rowe, Jr. 1/16/2015
641D60C145EE4F5...
DATE

SIG. INVENTORY NO. 05-1265T2

15-JAN-2015 08:21
S:\TMDASGN\TS\Signals\Workgroups\Sig Mgmt\Armstrong\051265_smale.xxx.dgn
sarmstrong