PROJECT REFERENCE NO.	SHEET NO.
I-5972	Sig. 8.1

18 CHANNEL IP CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

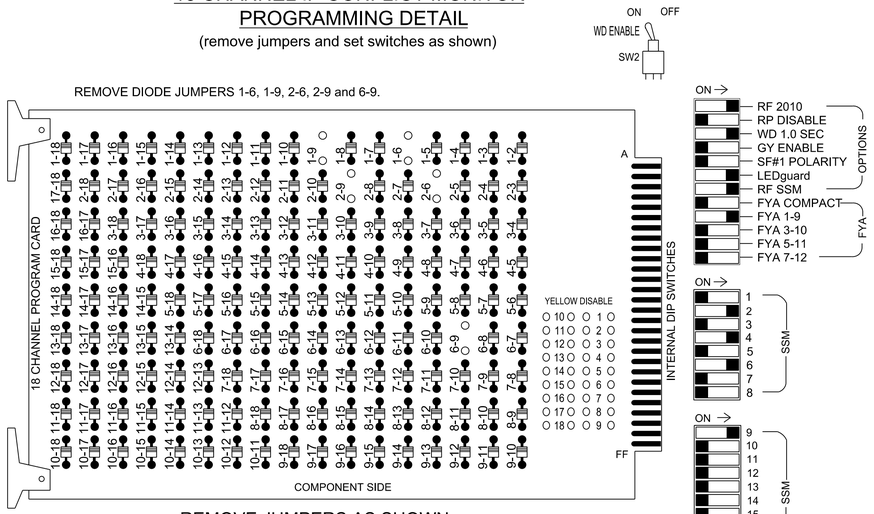

REMOVE JUMPERS AS SHOWN

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that the Red Enable is active at all times during normal operation.
4. Integrate monitor with Ethernet network in cabinet.

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the signal plan.
2. Program controller to start up in phase 2 Green No Walk and 6 Green No Walk.
3. If this signal will be managed by an ATMS software, enable controller and detector logging for all detectors used at this location.
4. The cabinet and controller are part of the D04_07 Smithfield Signal System.

EQUIPMENT INFORMATION

Controller.....2070LX
Cabinet.....332 w/ Aux
Software.....Q-Free MAXTIME
Cabinet Mount.....Base
Output File Positions.....18 With Aux. Output File
Load Switches Used.....S1,S2,S5,S8,AUX S1
Phases Used.....1,2,4,6
Overlap "1".....*
Overlap "2".....NOT USED
Overlap "3".....NOT USED
Overlap "4".....NOT USED

*See overlap programming detail on this sheet

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5		S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4		14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4		4 PED	5	6	6 PED	7	8	8 PED	OL1	OL2	SPARE	OL3	OL4	SPARE
SIGNAL HEAD NO.	11★	21,22	NU	NU	41	42	NU	NU	61,62	NU	NU	NU	NU	11★	NU	NU	NU	NU	NU
RED	·	128	·	·	101	101	·	·	134	·	·	·	·	·	·	·	·	·	·
YELLOW	*	129	·	·	102	102	·	·	135	·	·	·	·	·	·	·	·	·	·
GREEN	·	130	·	·	103	103	·	·	136	·	·	·	·	·	·	·	·	·	·
RED ARROW	·	·	·	·	·	·	·	·	·	·	·	·	·	A121	·	·	·	·	·
YELLOW ARROW	·	·	·	·	·	·	·	·	·	·	·	·	·	A122	·	·	·	·	·
FLASHING YELLOW ARROW	·	·	·	·	·	·	·	·	·	·	·	·	·	A123	·	·	·	·	·
GREEN ARROW	127	·	·	·	103	·	·	·	·	·	·	·	·	·	·	·	·	·	·
✋	·	·	·	·	·	·	·	·	·	·	·	·	·	·	·	·	·	·	·
🚶	·	·	·	·	·	·	·	·	·	·	·	·	·	·	·	·	·	·	·

NU = Not Used
*Denotes install load resistor. See load resistor installation detail this sheet.
★See pictorial of head wiring in detail this sheet.

OVERLAP PROGRAMMING

Front Panel
Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface
Home >Controller >Overlap Configuration >Overlaps

Overlap Plan 1

Overlap	1	2	3	4
Type	FYA 4 - Section	OFF	OFF	OFF
Included Phases	2	-	-	-
Modifier Phases	1	-	-	-
Modifier Overlaps	-	-	-	-
Trail Green	0	-	-	-
Trail Yellow	0.0	-	-	-
Trail Red	0.0	-	-	-

FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

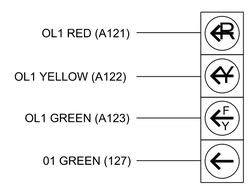

INPUT FILE POSITION LAYOUT

(front view)

		1	2	3	4	5	6	7	8	9	1O	11	12	13	14
FILE "I"	U	Ø 1 1A	Ø 2 2A	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	Ø 4 4A	Ø 4 4C	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	FS DC ISOLATOR
	L	NOT USED	Ø 2 2B				Ø 4 4B	NOT USED							ST DC ISOLATOR
FILE "J"	U	SLOT EMPTY	Ø 6 6A	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY
	L		Ø 6 6B												

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT POINT	DETECTOR NO.	CALL PHASE	DELAY TIME	EXTEND TIME	EXTEND	ADDED INITIAL	CALL	DELAY DURING GREEN
1A	TB2-1,2	I1U	56	18	1	1	15.0		X		X	
				-	29	6			X		X	
2A	TB2-5,6	I2U	39	1	2	2			X		X	
2B	TB2-7,8	I2L	43	5	3	2			X		X	
4A	TB4-9,10	I6U	41	3	8	4			X		X	
4B	TB4-11,12	I6L	45	7	9	4	15.0		X		X	
4C	TB6-1,2	I7U	65	31	10	4	15.0		X		X	
6A	TB3-5,6	J2U	40	2	16	6			X		X	
6B	TB3-7,8	J2L	44	6	17	6			X		X	

INPUT FILE POSITION LEGEND: J2L
FILE J
SLOT 2
LOWER

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 04-1454
DESIGNED: September 2023
SEALED: September 19, 2023
REVISED: N/A

LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown)

ACCEPTABLE VALUES	
Value (ohms)	Wattage
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

Electrical Detail - New Installation

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

RK&K
P: (919) 878-9560
8601 Six Forks Road Suite 700 | Raleigh, North Carolina 27615-2965
NC License No. F-0112
Engineers | Construction Managers | Planners | Scientists
www.rkk.com
Responsive People | Creative Solutions

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared for the Offices of:
Traffic Engineering, Mobility and Safety Division
Signals Management Section
750 N.Greenfield Pkwy,Garner,NC 27529

US 70 Business (E. Market St.)
at
I-95 SB Ramps

Division 04 Johnston County Smithfield

PLAN DATE: September 2023 REVIEWED BY: DT Sears
PREPARED BY: WP Erickson-Jones REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 044558 ENGINEER DAVID T SEARS

DocuSigned by: David T Sears
DB918BF28B97418...
SIGNATURE 9/19/2023 DATE

SIG. INVENTORY NO. 04-1454

9/19/2023
R:\Traffic\Signals\Designs\5972_04-1454e.dgn
dsears