Docusign Envelope ID: 7ADC4507-52B2-45A0-B0CD-8199998710CDE

PROJECT REFERENCE NO.	SHEET NO.
U-4758	Sig. 12.1

18 CHANNEL IP CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

REMOVE DIODE JUMPERS 1-3, 1-5, 1-6, 1-9, 1-10, 1-11, 1-15, 2-5, 2-6, 2-9, 2-11, 2-13, 2-15, 3-5, 3-6, 3-9, 3-10, 3-11, 3-15, 4-8, 4-10, 4-12, 4-16, 5-9, 5-10, 5-11, 5-13, 6-9, 6-10, 6-11, 6-13, 6-15, 8-10, 8-12, 8-16, 9-10, 9-11, 9-13, 9-15, 10-11, 10-12, 10-15, 10-16, 11-13, 11-15, 12-16 and 13-15.

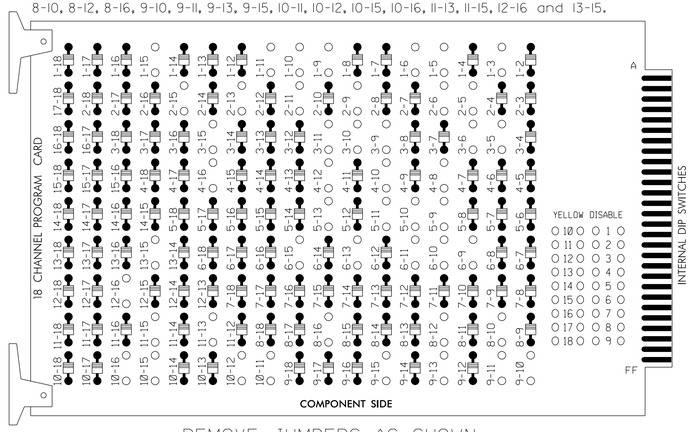

REMOVE JUMPERS AS SHOWN

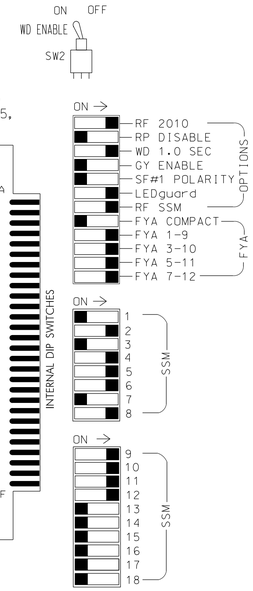

■ = DENOTES POSITION OF SWITCH

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that Red Enable is active at all times during normal operation.
4. Integrate monitor with Ethernet network in cabinet.

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Program phases 4 and 8 for Dual Entry.
3. Program controller to start up in phase 2 Green and 6 Green.
4. The cabinet and controller are part of the High Point Signal System.

EQUIPMENT INFORMATION

CONTROLLER.....2070LX
CABINET.....332 W/ AUX
SOFTWARE.....ECONOLITE ASC/3-2070
CABINET MOUNT.....BASE
OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
LOAD SWITCHES USED.....S1,S2,S3,S4,S5,S7,S8,S9,S11,S12, AUX S1,AUX S2,AUX S4,AUX S5
PHASES USED.....1,2,2 PED,4,5,6,6 PED,8,8 PED
OVERLAP "A".....*
OVERLAP "B".....*
OVERLAP "C".....*
OVERLAP "D".....*
OVERLAP "E".....NOT USED
OVERLAP "F".....NOT USED
OVERLAP "G".....*

* See overlap programming detail on sheet 2

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7		S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5		6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	OLG	4	4 PED	5		6	6 PED	7	8	8 PED	OLA	OLB	OLE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11★	21,22	P21, P22	84★	41,42	NU	42	51★	61,62	P61, P62	NU	82,83	P81, P82	11★	84★	NU	51★	81★	NU
RED		128			101		*		134			107			A124				
YELLOW	*	129		*	102				135			108							
GREEN		130			103				136			109							
RED ARROW														A121			A114	A101	
YELLOW ARROW							132							A122	A125		A115	A102	
FLASHING YELLOW ARROW														A123	A126		A116	A103	
GREEN ARROW	127			118			133	133											
✋			113							119			110						
🚶			115							121			112						

NU = Not Used

* Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail below.

FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

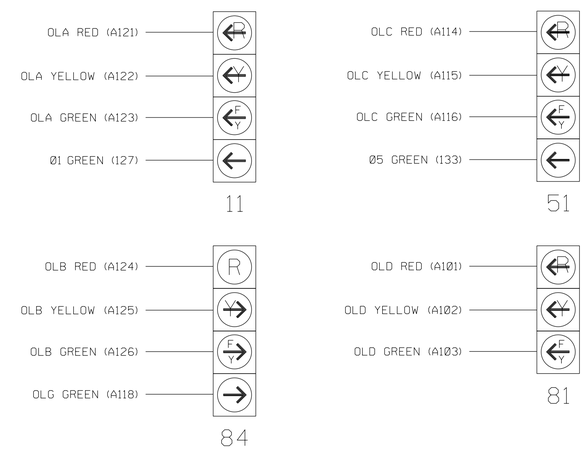

INPUT FILE POSITION LAYOUT

(front view)

		1	2	3	4	5	6	7	8	9	10	11	12	13	14
FILE "I"	U	Ø 1 1A	Ø 1 1B	Ø 2 2A	WIRED INPUT ⊗	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	Ø2 PED DC ISOLATOR	Ø6 PED DC ISOLATOR	FS DC ISOLATOR
	L	NOT USED	NOT USED	Ø 2 2B									NOT USED	Ø8 PED DC ISOLATOR	ST DC ISOLATOR
FILE "J"	U	Ø 5 5A	SLOT EMPTY	Ø 6 6A	WIRED INPUT ⊗	SLOT EMPTY	Ø 8 8A	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY	SLOT EMPTY
	L	NOT USED		Ø 6 6B			Ø 8 8B								

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE
ST = STOP TIME

⊗ Wired Input - Do not populate slot with detector card

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND TIME	DELAY TIME	ADDED INITIAL	DETECTOR TYPE
1A [1]	TB2-1,2	I1U	56	1★	1	YES		15.0		N
	-	J4U	48	26★	6	YES		3.0		G
1B	TB2-5,6	I2U	39	2	1	YES		15.0		N
2A	TB2-9,10	I3U	63	32	2	YES			X	N
2B	TB2-11,12	I3L	76	42	2	YES			X	N
5A [2]	TB3-1,2	J1U	55	5★	5	YES		15.0		N
	-	I4U	47	22★	2	YES		3.0		G
6A	TB3-9,10	J3U	64	36	6	YES			X	N
6B	TB3-11,12	J3L	77	46	6	YES			X	N
8A	TB5-9,10	J6U	42	8	8	YES		3.0		N
8B	TB5-11,12	J6L	46	18	8	YES				N
PED PUSH BUTTONS										
P21,P22	TB8-4,6	I12U	67	PED 2	2 PED					
P61,P62	TB8-7,9	I13U	68	PED 6	6 PED					
P81,P82	TB8-8,9	I13L	70	PED 8	8 PED					

NOTE:
INSTALL DC ISOLATORS IN INPUT FILE SLOTS I12 AND I13.

[1] Add jumper from I1-W to J4-W, on rear of input file.

[2] Add jumper from J1-W to I4-W, on rear of input file.

★ For the detectors to work as shown on the signal design plan. See the Vehicle Detector Setup Programming Detail for Alternate Phasing on sheet 2.

INPUT FILE POSITION LEGEND: J2L
FILE J
SLOT 2
LOWER

LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown below)

ACCEPTABLE VALUES

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

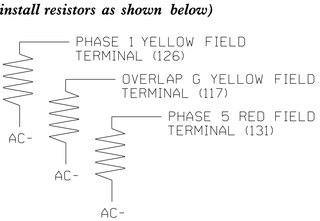

SPECIAL DETECTOR NOTE

Install a non-intrusive detection system for vehicle detection zones 4A and 5B. Perform installation according to manufacturer's directions and NCDOT engineer-approved mounting locations to accomplish the detection schemes shown on the Signal Design Plans.

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 07-1111
DESIGNED: January 2025
SEALED: 03-14-2025
REVISED: N/A

AtkinsRéalis
1616 EAST MILLBROOK ROAD, SUITE 160
RALEIGH, NORTH CAROLINA 27609
(919) 876-6888 NCBEES #F-0326

Electrical Detail - Sheet 1 of 4

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING DETAILS FOR:

SR 1850 (Sandy Ridge Road) at SR 1834 (Kendale Road)/ John Knox Drive

Division 7 Guilford County High Point

Prepared for the Offices of:
Transportation Mobility and Safety Division
Traffic Engineering Branch
Signals Management Section
STATE OF NORTH CAROLINA DEPARTMENT OF TRANSPORTATION
750 N.Greenfield Pkwy,Garner,NC 27529

PLAN DATE:	January 2025	REVIEWED BY:	AM Encarnacion
PREPARED BY:	JT Stiff	REVIEWED BY:	PL Alexander

REVISIONS	INIT.	DATE

SEAL
NORTH CAROLINA PROFESSIONAL SEAL 044476 ENGINEER ANTHONY M. ENCARNACION

DocuSigned by: Anthony Encarnacion 3/14/2025
SIGNATURE DATE

SIG. INVENTORY NO. 07-1111

13-MAR-2025 16:43
pw://SUSDOT36343.wsatkins.com:ATKNANC01/Documents/Roads and Bridges/Projects/100059632 JSSR Sig and ITS/Task 05.11.Signals/071111_sm_ele.2023mmdd.dgn
STIF4685 AT LUS491089