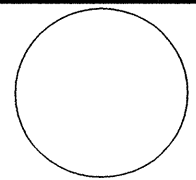



**GENERAL NOTES**

- BALLASTING SHALL BE ACHIEVED BY THE SAND BAG, TIRE-SIDEWALL BALLAST, OR PREFORMED WEIGHTED BASE BALLASTING METHODS. DO NOT PLACE BALLAST ON TOP OF THE DRUM.
- IF NECESSARY PLACE THE NAME OF THE AGENCY, CONTRACTOR, OR SUPPLIER ON NON-RETROREFLECTIVE DRUM SURFACES. SHOW THE LETTERS AND NUMBERS USING A NON-RETROREFLECTIVE COLOR AND NOT OVER 2" IN HEIGHT.

01-DEC-2005 13:50  
 \\DOT\DESIGN\GROUPS-WZ\TCCC\design\group4\resurfacing\div08\8cr101915etcedrums\_english030405.dgn  
 pseymore AT WZTCCC06-427

APPROVED: _____ DATE: _____	<b>REPLACEMENT DETAIL FOR RSD 1130.01</b>	
SEAL 		
SCALE: NONE		REVISIONS
DATE: 4/02		11/02
DWG. BY: MMM		
DESIGN BY: MMM		
REVIEWED BY: MMM		GOOD FILE