
PLANTING DETAILS


SEEDLING / LINER BAREROOT PLANTING DETAIL

HEALING IN


- 1. Locate a healing-in site in a shady, well
- 2. Excavate a flat bottom trench 12 inches deep and provide drainage.

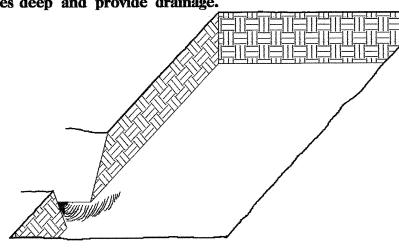


3. Backfill the trench with 2 inches well rotted sawdust. Place a 2 inch layer of well rotted sawdust at a sloping angle at one end of the trench.

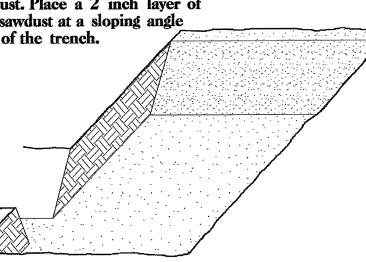


4. Place a single layer of plants against the sloping end so that the root collar is at ground level.

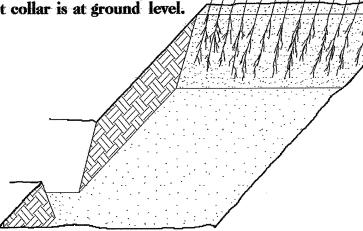

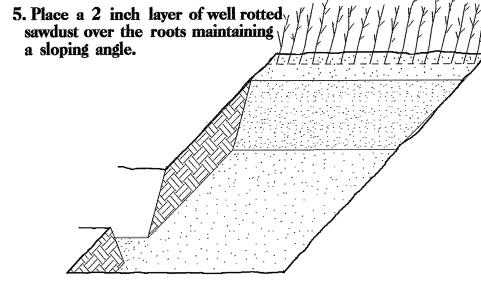


6. Repeat layers of plants and sawdust as necessary and water thoroughly.


DIBBLE PLANTING METHOD USING THE KBC PLANTING BAR

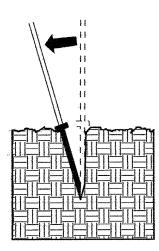


1. Insert planting bar as shown and pull handle toward planter.

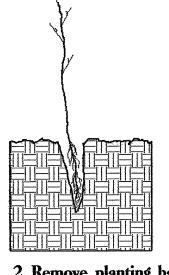


2. Remove planting bar and place seedling at correct depth.

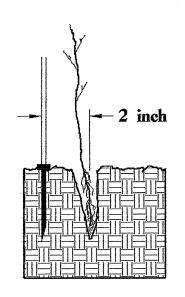


3. Insert planting bar 2 inches toward planter from seedling.

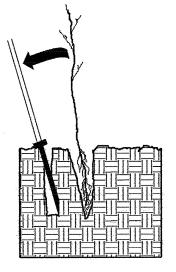

4. Pull handle of bar toward planter, firming soil at bottom.

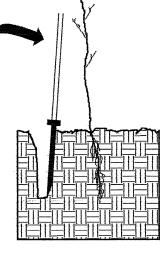

5. Push handle forward firming soil at top.

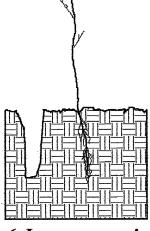


6. Leave compaction hole open. Water thoroughly.


PLANTING NOTES:

PLANTING BAG
During planting, seedlings
shall be kept in a moist
canvas bag or similar container to prevent the root systems from drying.



KBC PLANTING BAR
Planting bar shall have a
blade with a triangular
cross section, and shall
be 12 inches long,
4 inches wide and
1 inch thick at center.

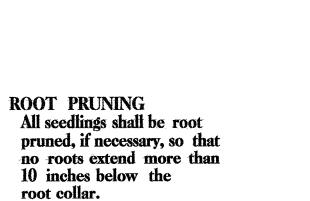

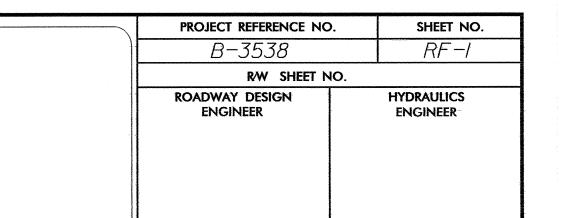

REFORESTATION

TREE REFORESTATION SHALL BE PLANTED 6 FT. TO 10 FT. ON CENTER, RANDOM SPACING, AVERAGING 8 FT. ON CENTER, APPROXIMATELY 680 PLANTS PER ACRE.

REFORESTATION

MIXTURE, TYPE, SIZE, AND FURNISH SHALL CONFORM TO THE FOLLOWING:

AMERICAN SYCAMORE 30% PLATANUS OCCIDENTALIS 12 in - 18 in BR

WATER OAK 12 in - 18 in BR **30% QUERCUS NIGRA** SOUTHERN RED OAK 12 in - 18 in BR 40% QUERCUS FALCATA

REFORESTATION DETAIL SHEET

N.C.D.O.T. - ROADSIDE ENVIRONMENTAL UNIT