
PLANTING DETAILS


SEEDLING / LINER BAREROOT PLANTING DETAIL


HEALING IN

1. Locate a healing-in site in a shady, well protected area.

2. Excavate a flat bottom trench
12 inches deep and provide drainage.

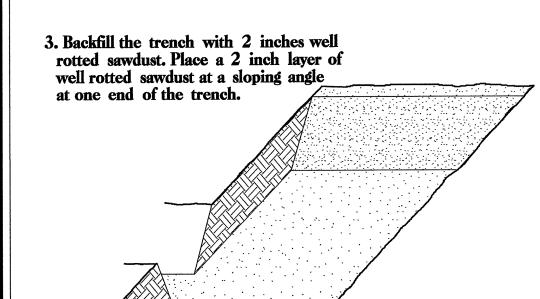


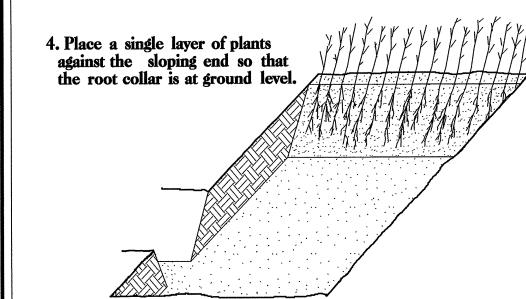

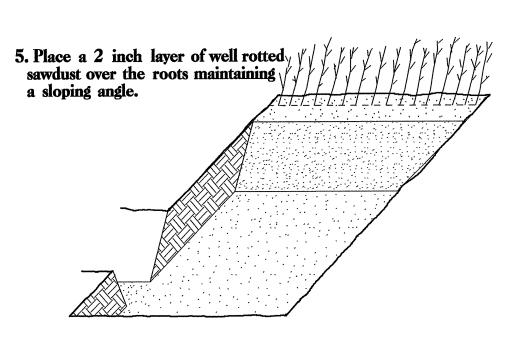


6. Repeat layers of plants and sawdust as necessary and water thoroughly.


DIBBLE PLANTING METHOD USING THE KBC PLANTING BAR

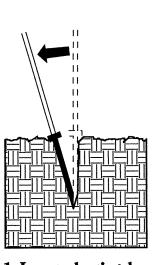


1. Insert planting bar as shown and pull handle toward planter.

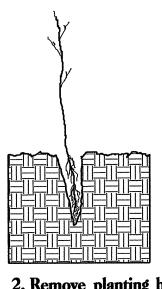


2. Remove planting bar and place seedling at

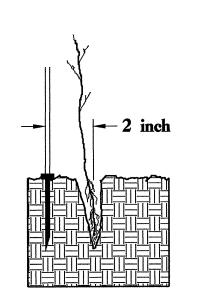


3. Insert planting bar
2 inches toward planter
from seedling.

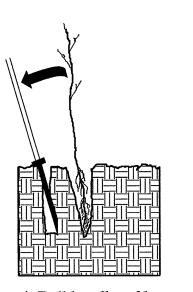

4. Pull handle of bar toward planter, firming soil at bottom.

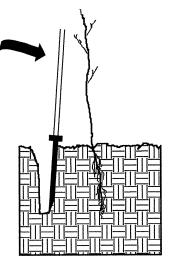

5. Push handle forward firming soil at top.

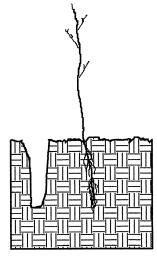


6. Leave compaction hole open. Water thoroughly.


PLANTING NOTES:

PLANTING BAG
During planting, seedlings
shall be kept in a moist
canvas bag or similar
container to prevent the
root systems from drying.



KBC PLANTING BAR
Planting bar shall have a
blade with a triangular
cross section, and shall
be 12 inches long,
4 inches wide and
1 inch thick at center.

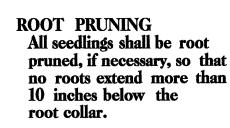

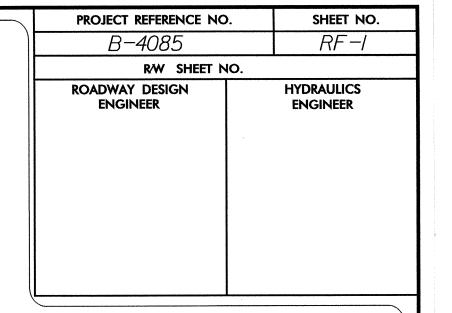

REFORESTATION

☐ TREE REFORESTATION SHALL BE PLANTED 6 FT. TO 10 FT. ON CENTER, RANDOM SPACING, AVERAGING 8 FT. ON CENTER, APPROXIMATELY 680 PLANTS PER ACRE.

REFORESTATION

MIXTURE, TYPE, SIZE, AND FURNISH SHALL CONFORM TO THE FOLLOWING:

25% CORNUS FLORIDA

25% QUERCUS NIGRA

FLOWERING DOGWOOD 12 in - 18 in BR

25% LIRIODENDRON TULIPIFERA

YELLOW POPLAR

12 in - 18 in BR

25% FRAXINUS PENNSYLVANICA

GREEN ASH

WATER OAK

12 in - 18 in BR

12 in - 18 in BR

REFORESTATION DETAIL SHEET

N.C.D.O.T. - ROADSIDE ENVIRONMENTAL UNIT