


Side Elevation.

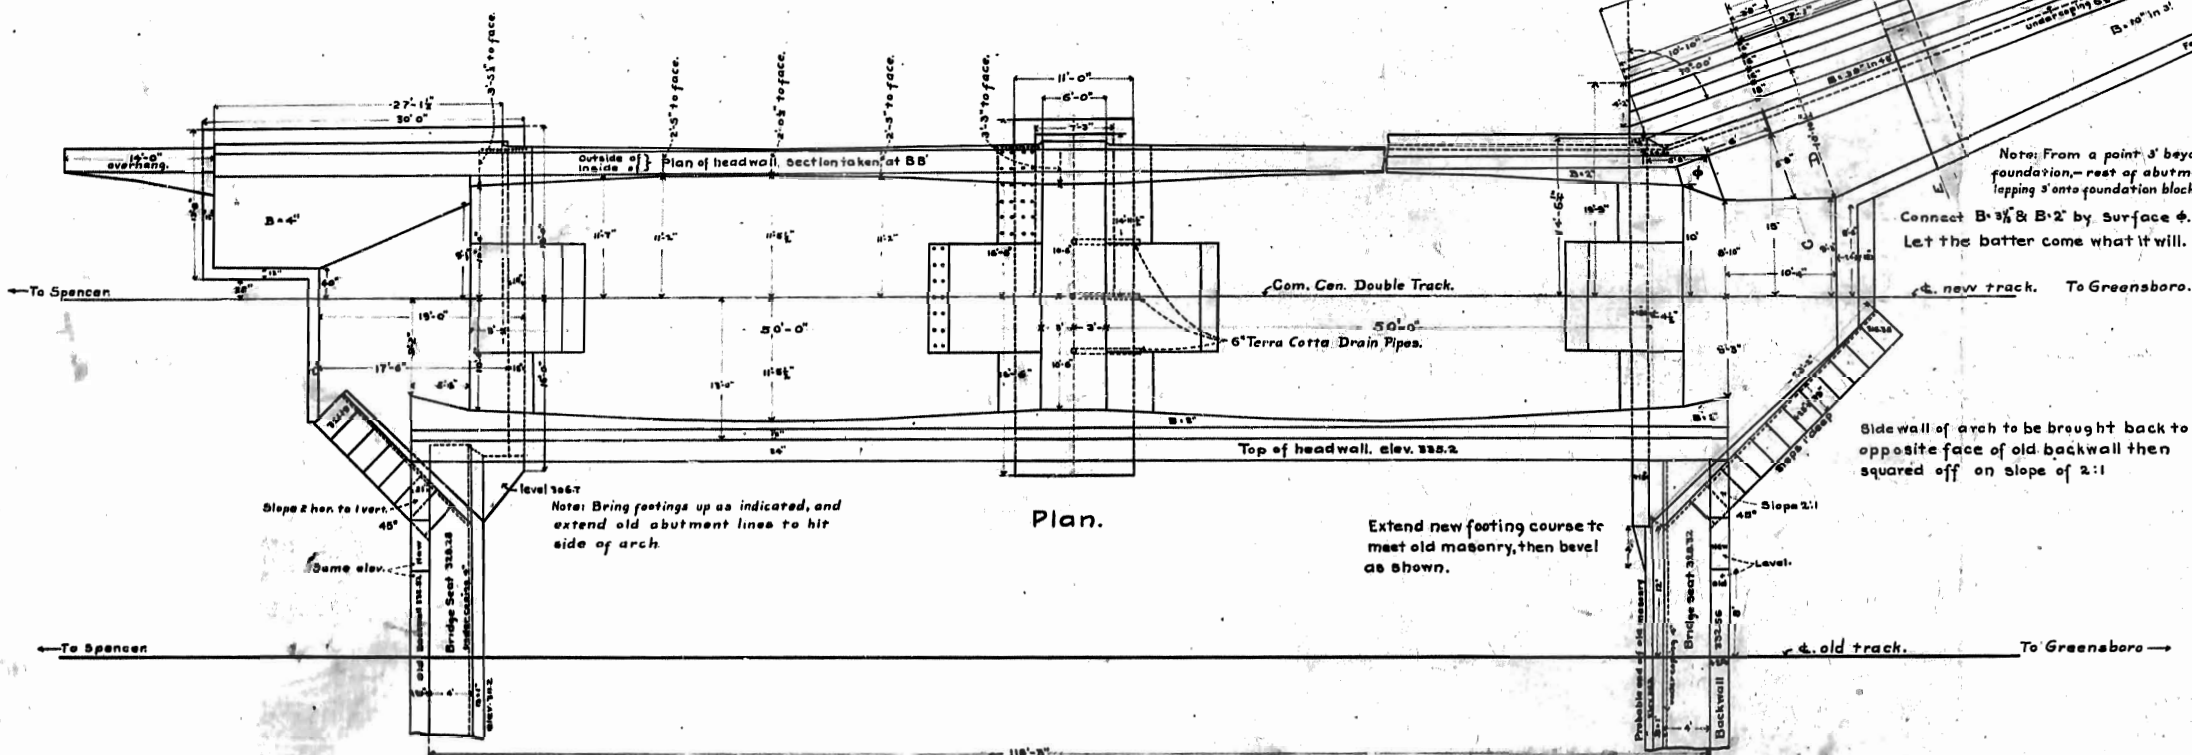


Plan.

Note: From a point 3' beyond line E-E, wing is to be on pile foundation, - rest of abutment on rock foundation, with wing footings lapping onto foundation block. Make full expansion joint at E-E.  
Connect B-1 & B-2 by Surface.  
Let the batter come what it will.

Side wall of arch to be brought back to opposite face of old backwall then squared off on slope of 2:1

Side Elevation Showing Reinforcement.

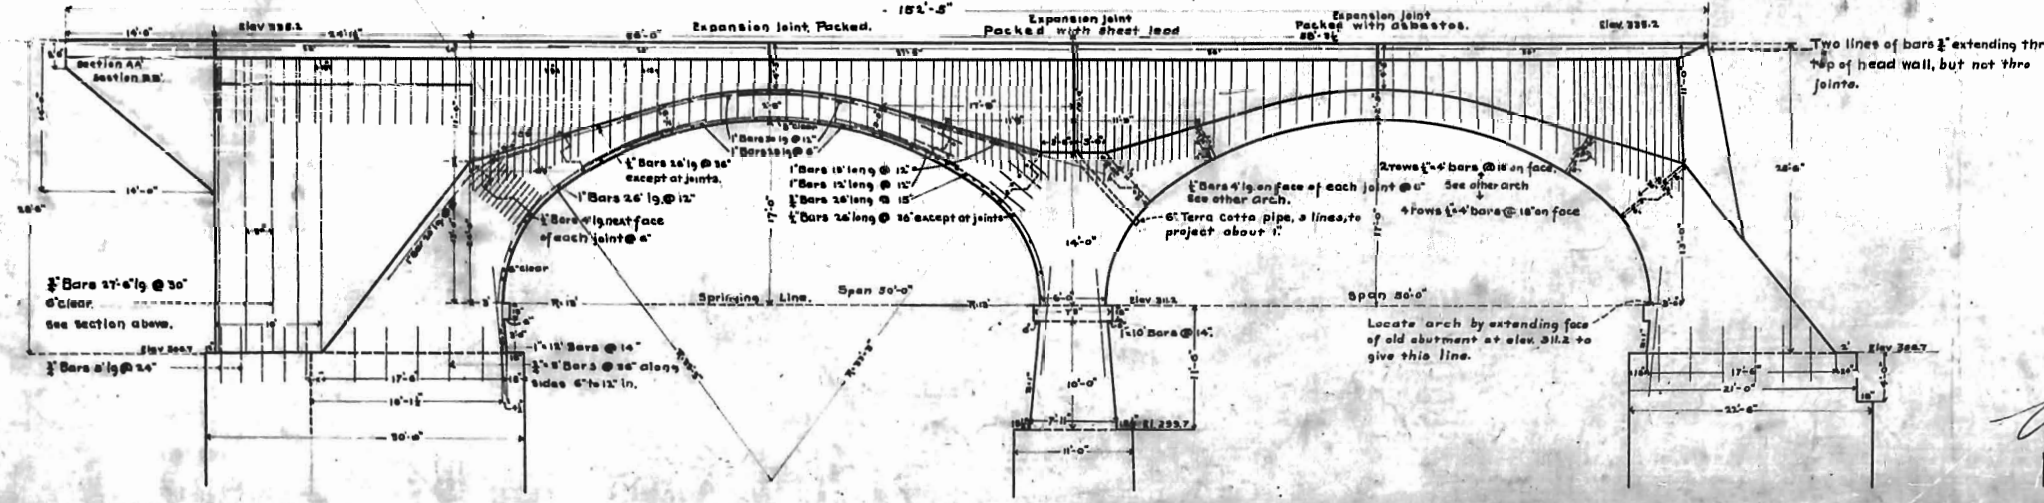

Section at CC

Section at DD

Section at EE

Section at FF

*Was not stepped out according to this plan*

MP 313.0

MA-92

Use dimensions only.