


# Detail for Temporary Containment of Contaminated Soil

## Cross-Section View

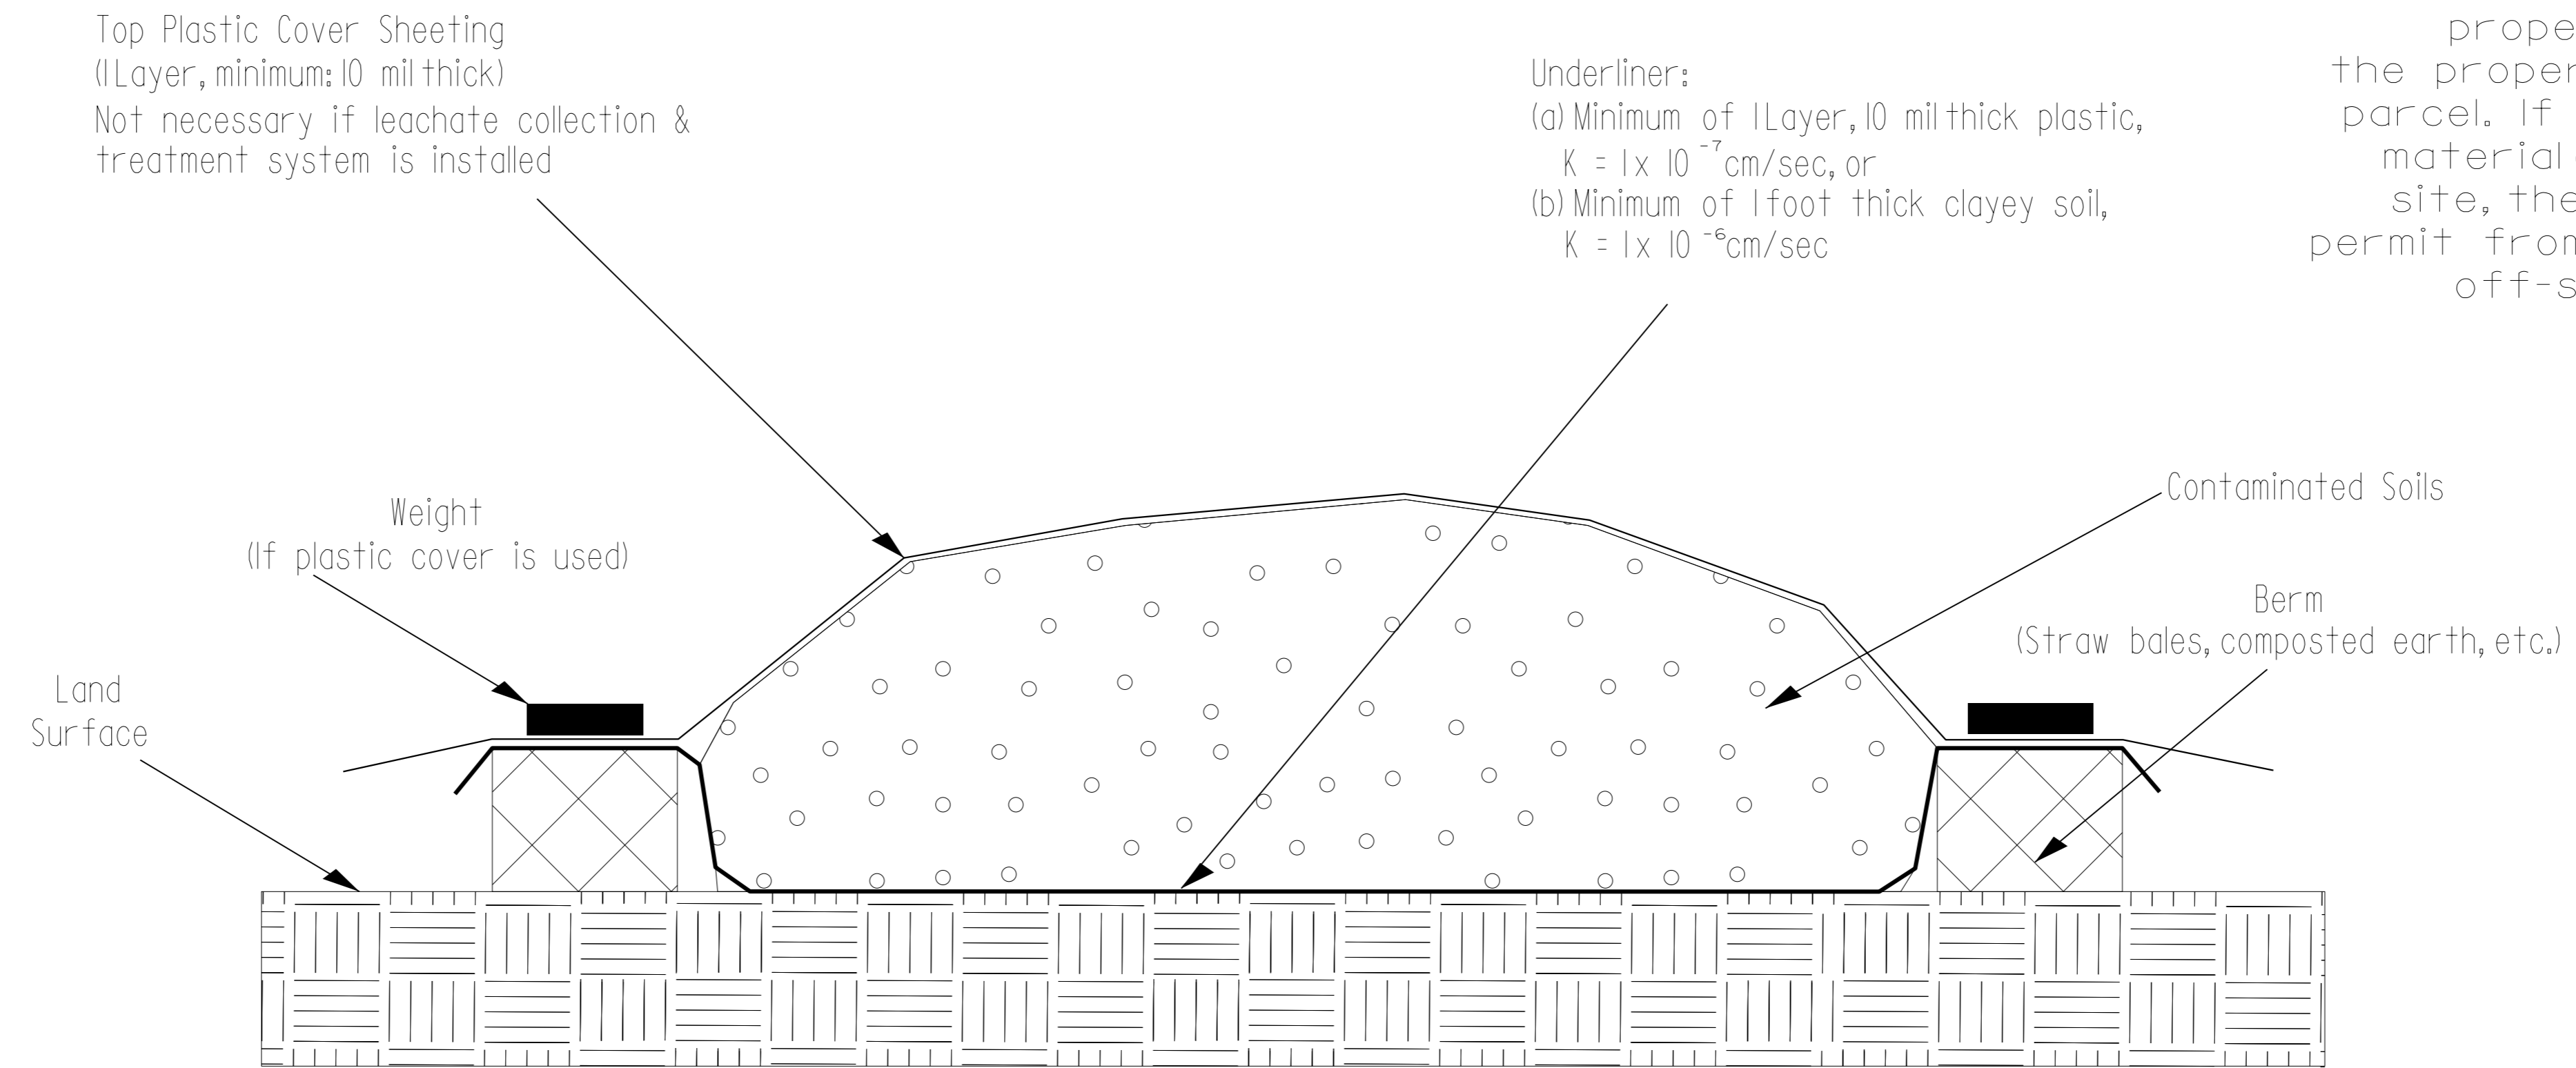

NOTE:  
The Contractor shall stockpile all contaminated soil excavated from a property in a location within the property boundaries of the source parcel. If the volume of contaminated material exceeds available space on site, the Contractor shall obtain a permit from the NCDENR UST Section for off-site temporary storage.

## Map View

