
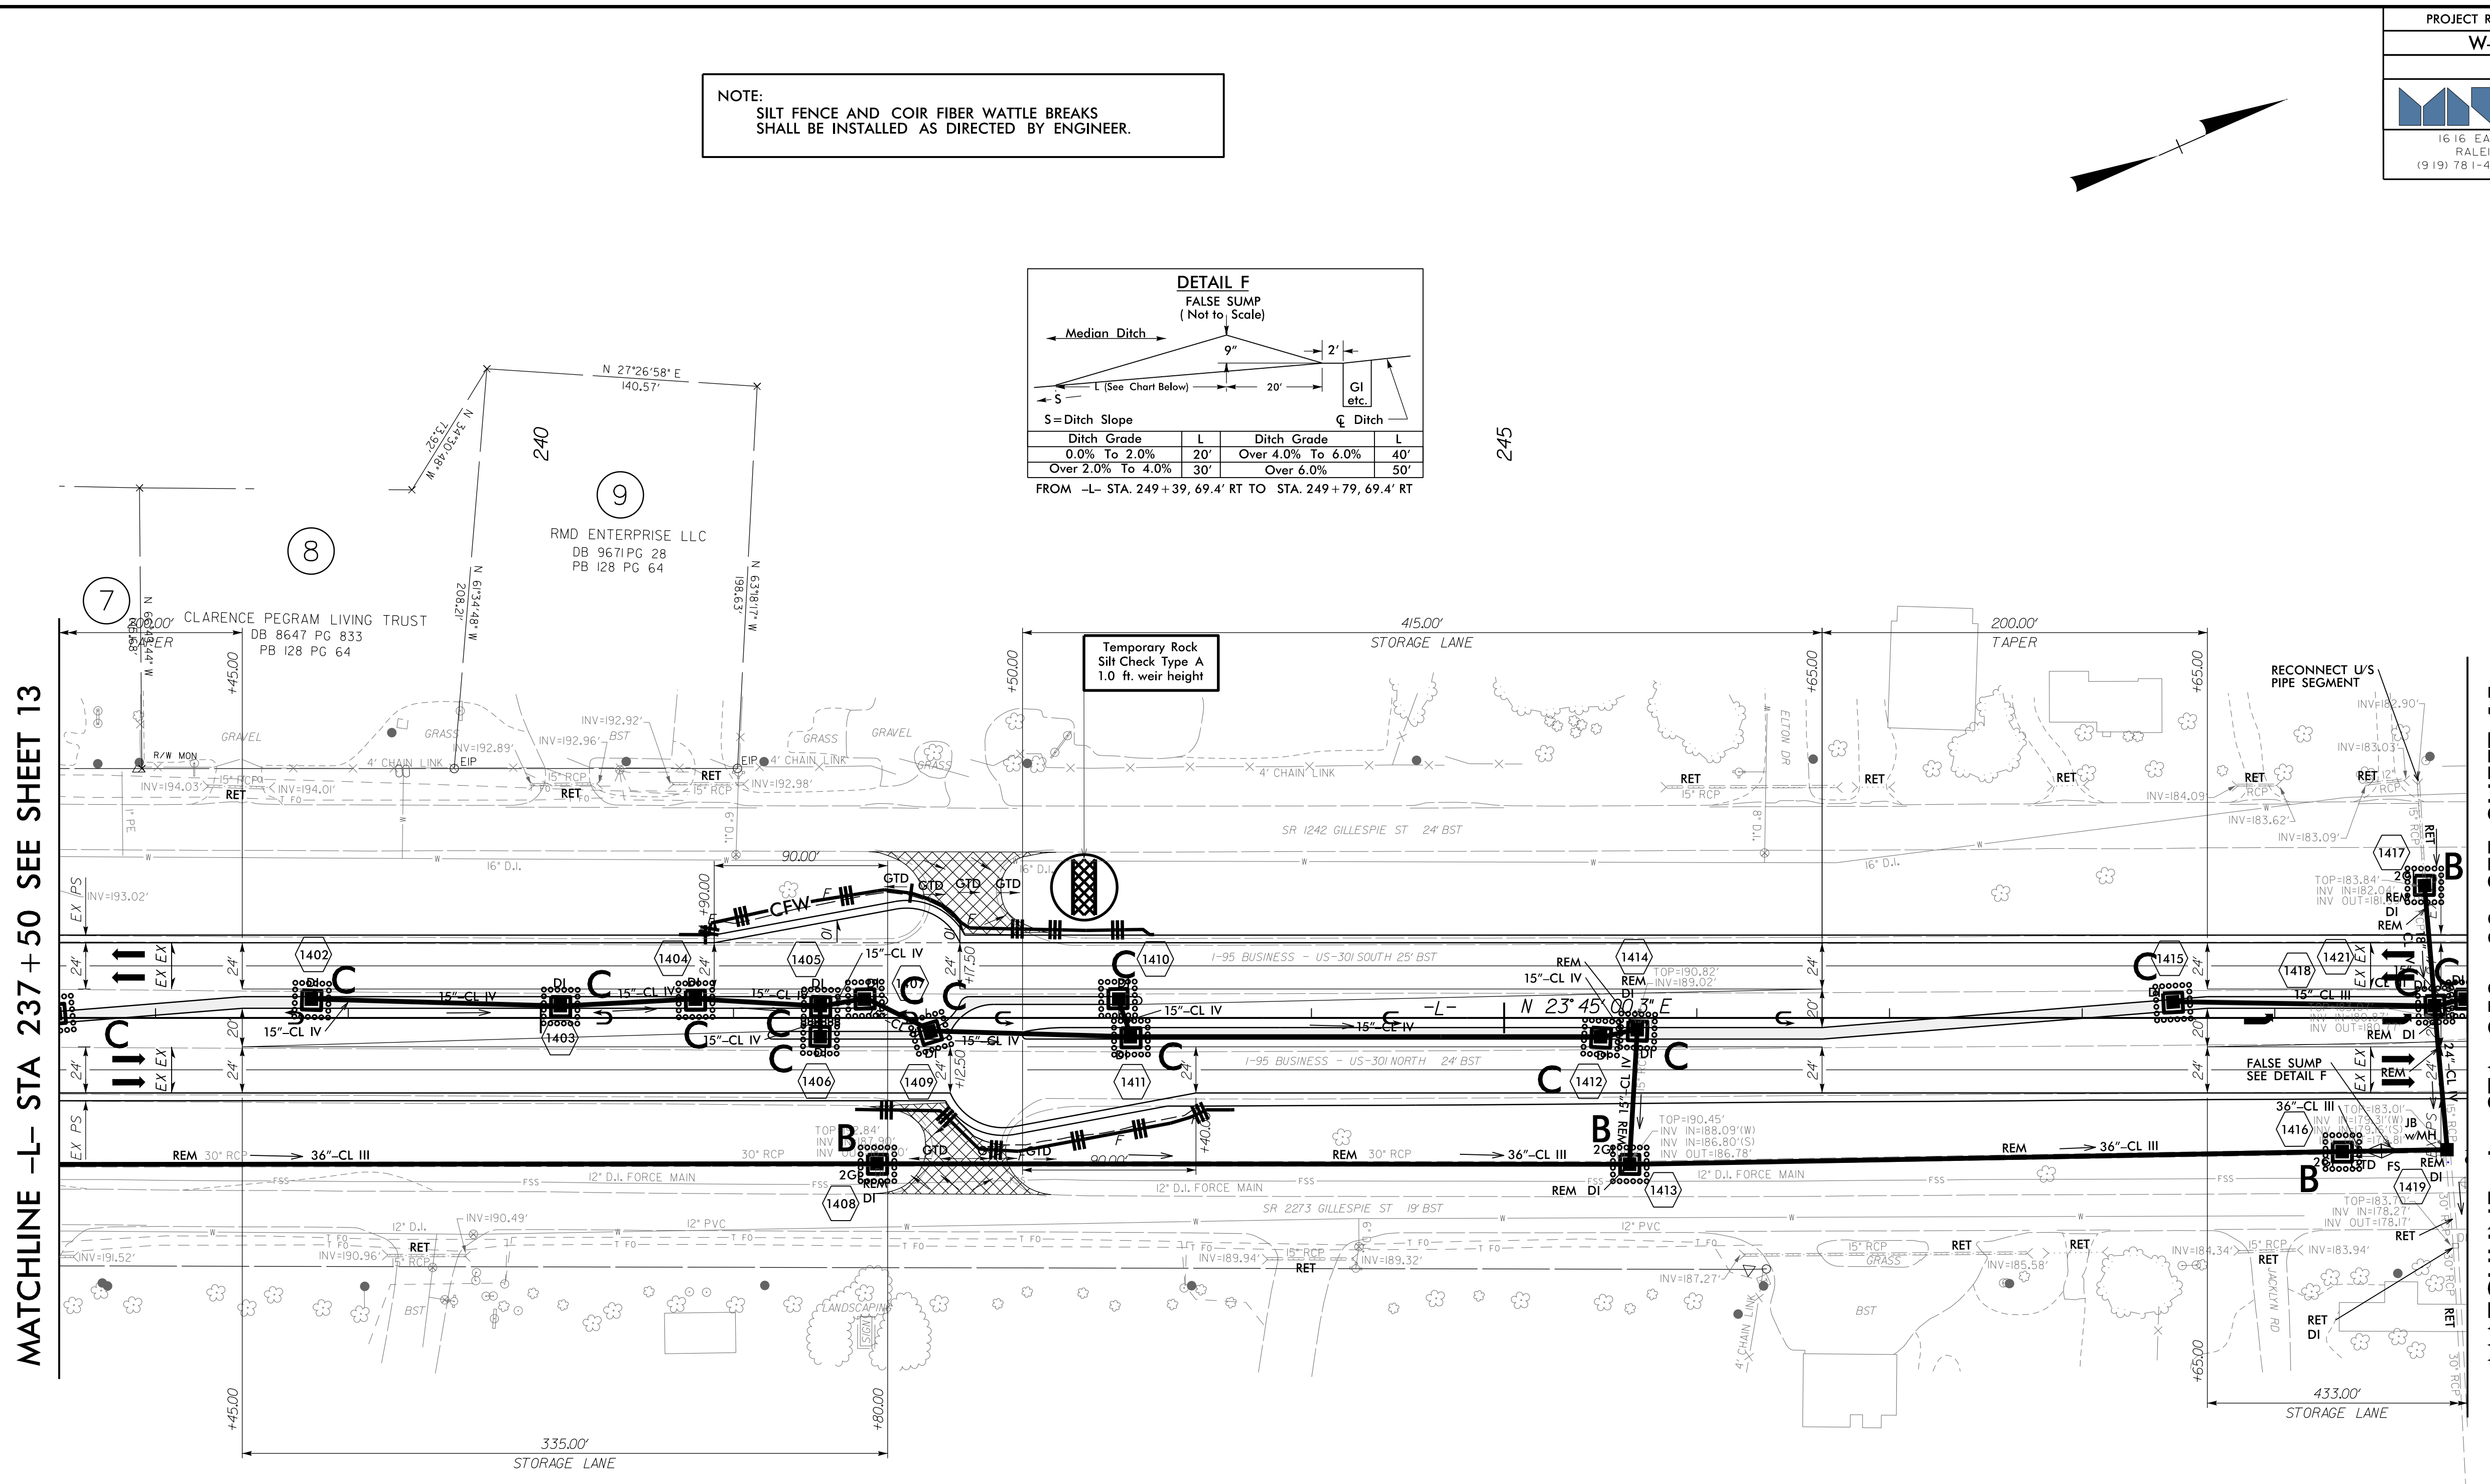
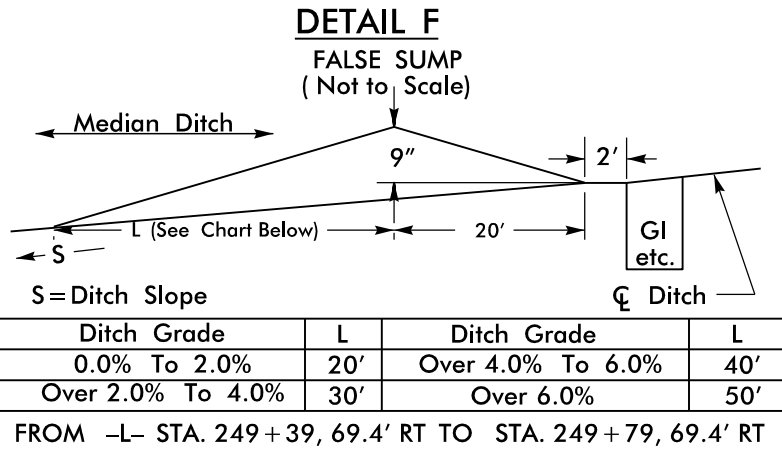


NOTE:
SILT FENCE AND COIR FIBER WATTLE BREAKS
SHALL BE INSTALLED AS DIRECTED BY ENGINEER.

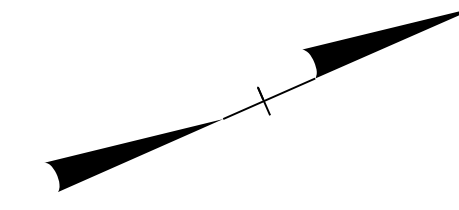

MATCHLINE -L- STA 237+50 SEE SHEET 13

MATCHLINE -L- STA 250+00 SEE SHEET 15

INSTALL MATTING FOR
EROSION CONTROL IN THE
PROPOSED DITCH LINE.

For Slopes Excavated Greater Than 10 feet
Install Matting for Erosion Control on
Entire Slope as Work Allows.