

## **COIR FIBER WATTLE BARRIER DETAIL**

NOTES:

WATTLE AND LENGTH OF 10 FT.

DO NOT PLACE WATTLES ON TOE OF SLOPE.

USE 2 FT. WOODEN STAKES WITH A 2 IN. BY 2 IN. NOMINAL CROSS SECTION.

INSTALL A MINIMUM OF 2 UPSLOPE STAKES AND 4 DOWNSLOPE STAKES AT AN ANGLE TO WEDGE WATTLE TO GROUND. PROVIDE STAPLES MADE OF 0.125 IN. DIAMETER STEEL WIRE


FORMED INTO A U SHAPE NOT LESS THAN 12" IN LENGTH.

INSTALL STAPLES APPROXIMATELY EVERY 1 LINEAR FOOT ON BOTH SIDES OF WATTLE AND AT EACH END TO SECURE IT TO THE SOIL.


FOR BREAKS ALONG LARGE SLOPES, USE MAXIMUM SPACING OF 25 FT.

FILL SLOPE

INSET A

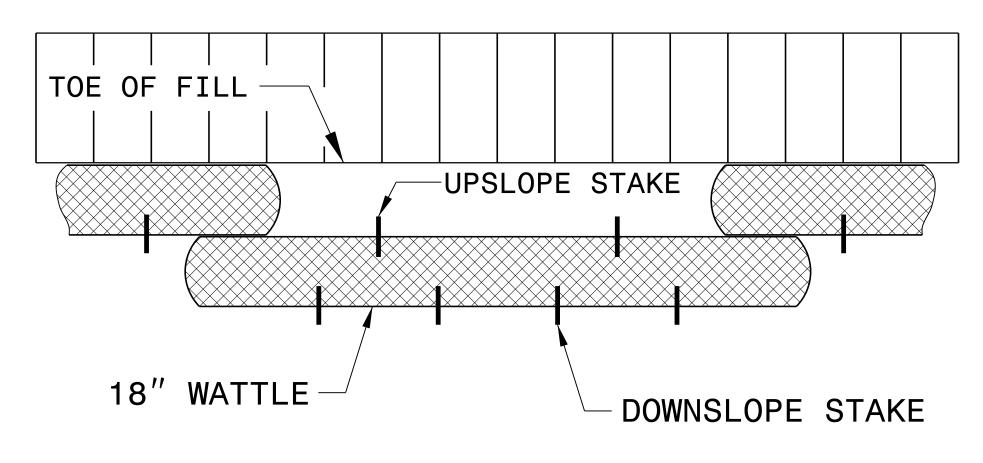

## TOP VIEW

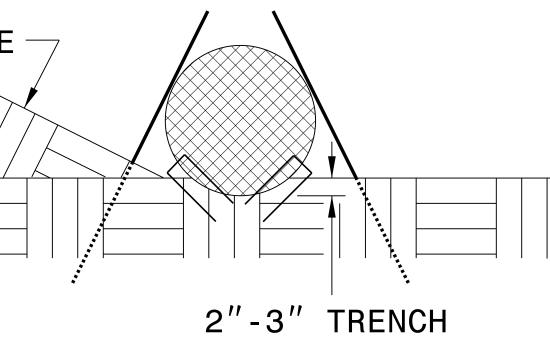

EXCAVATE A 2 TO 3 INCH TRENCH FOR WATTLE TO BE PLACED.

USE MINIMUM 18 IN. NOMINAL DIAMETER COIR FIBER (COCONUT)

ROADWAY DESIGN ENGINEER	HYDRAULICS ENGINEER

PROJECT REFERENCE NO

B-5404

R/W SHEET NO.

SHEET NO. EC-2B