

ECONOLITE ASC/3-2070 VEHICLE DETECTOR SETUP PROGRAMMING DETAIL

FOR ALTERNATE PHASING LOOPS 1A, 5A

(program controller as shown)

IMPORTANT!

Program detectors per the input file connection and programming chart shown on sheet 1 before proceeding.

- From Main Menu select **8. UTILITIES**
- From UTILITIES Submenu select **1. COPY/CLEAR**
- Copy from DETECTOR PLAN "1" to DETECTOR PLAN "2".

```

COPY / CLEAR UTILITY
FROM          TO
PHASE TIMING... > PHASE TIMING...
TIMING PLAN... > TIMING PLAN...
PH DET OPT PLAN. > PH DET OPT PLAN.
DETECTOR PLAN.. 1 > DETECTOR PLAN.. 2
TOGGLE TO SELECT A "FROM" AND A "TO"
THEN PRESS ENTER
    
```

- From Main Menu select **6. DETECTORS**
- From DETECTOR Submenu select **2. VEHICLE DETECTOR SETUP**
- Place cursor in VEH DET PLAN [] position and enter "2".

- Place cursor in VEH DETECTOR [] position and enter "1".
 - Set delay time to "0".

```

VEH DETECTOR [ 1]  VEH DET PLAN [ 2]
TYPE: S-STANDARD
TS2 DETECTOR..... ECPI LOG..... NO
DET PH - 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6
1 1
EXTEND TIME... 0.0 DELAY TIME... 0.0
USE ADDED INITIAL . CROSS SWITCH PH.. 0
LOCK IN..... NONE NTCIP VOL . OR OCC .
PMT QUEUE DELAY. NO
    
```

← NOTICE VEH DET PLAN 2

← ENSURE DELAY IS SET TO '0'

- Place cursor in VEH DETECTOR [] position and enter "26".
 - Set assigned phase to "0".

```

VEH DETECTOR [26]  VEH DET PLAN [ 2]
TYPE: G-GREEN EXTENSION/DELAY
TS2 DETECTOR..... ECPI LOG..... NO
DET PH - 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6
26 0
EXTEND TIME... 0.0 DELAY TIME... 0.0
USE ADDED INITIAL . CROSS SWITCH PH.. 0
LOCK IN..... NONE NTCIP VOL . OR OCC .
PMT QUEUE DELAY. NO
    
```

← NOTICE VEH DET PLAN 2

← ENSURE PHASE IS SET TO "0"

- Place cursor in VEH DETECTOR [] position and enter "5".
 - Set delay time to "0".

```

VEH DETECTOR [ 5]  VEH DET PLAN [ 2]
TYPE: S-STANDARD
TS2 DETECTOR..... ECPI LOG..... NO
DET PH - 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6
5 5
EXTEND TIME... 0.0 DELAY TIME... 0.0
USE ADDED INITIAL . CROSS SWITCH PH.. 0
LOCK IN..... NONE NTCIP VOL . OR OCC .
PMT QUEUE DELAY. NO
    
```

← NOTICE VEH DET PLAN 2

← ENSURE DELAY IS SET TO '0'

- Place cursor in VEH DETECTOR [] position and enter "22".
 - Set assigned phase to "0".

```

VEH DETECTOR [22]  VEH DET PLAN [ 2]
TYPE: G-GREEN EXTENSION/DELAY
TS2 DETECTOR..... ECPI LOG..... NO
DET PH - 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6
22 0
EXTEND TIME... 0.0 DELAY TIME... 0.0
USE ADDED INITIAL . CROSS SWITCH PH.. 0
LOCK IN..... NONE NTCIP VOL . OR OCC .
PMT QUEUE DELAY. NO
    
```

← NOTICE VEH DET PLAN 2

← ENSURE PHASE IS SET TO "0"

END PROGRAMMING

ECONOLITE ASC/3-2070 OVERLAP PROGRAMMING DETAIL

(program controller as shown)

- From Main Menu select **2. CONTROLLER**
- From CONTROLLER Submenu select **2. VEHICLE OVERLAPS**

OVERLAP A

Select TMG VEH OVLP [A] and 'PPLT FYA'

```

TMG VEH OVLP...[A] TYPE: ....[PPLT FYA]
PROTECTED LEFT TURN... PHASE 1
OPPOSING THROUGH..... PHASE 2

FLASHING ARROW OUTPUT....CH9 ISOLATE
DELAY START OF: FYA..0.0 CLEARANCE..0.0
ACTION PLAN SF BIT DISABLE..... 1
    
```

← NOTICE ACTION PLAN SF BIT "1"

Toggle Twice

OVERLAP C

Select TMG VEH OVLP [C] and 'PPLT FYA'

```

TMG VEH OVLP...[C] TYPE: ....[PPLT FYA]
PROTECTED LEFT TURN... PHASE 5
OPPOSING THROUGH..... PHASE 6

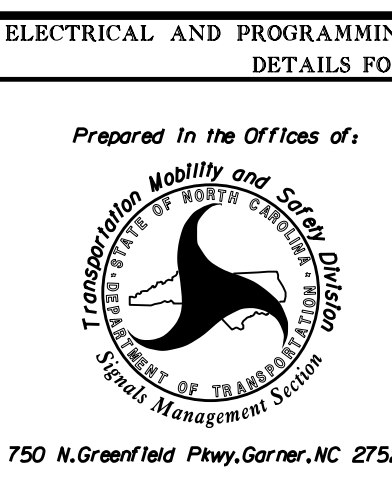
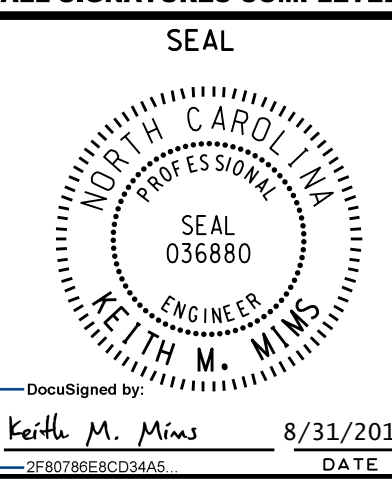
FLASHING ARROW OUTPUT....CH11 ISOLATE
DELAY START OF: FYA..0.0 CLEARANCE..0.0
ACTION PLAN SF BIT DISABLE..... 5
    
```

← NOTICE ACTION PLAN SF BIT "5"

END PROGRAMMING

THIS ELECTRICAL DETAIL IS FOR
 THE SIGNAL DESIGN: 06-0001
 DESIGNED: January 2016
 SEALED: 8-23-16
 REVISED: N/A

Electrical Detail Sheet 2 of 3

ELECTRICAL AND PROGRAMMING DETAILS FOR:	US 401 Bus. (Raeford Road) at Fairfield Road / United Methodist Church	DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED
	Division 6 Cumberland County Fayetteville PLAN DATE: August 2016 REVIEWED BY: BAS PREPARED BY: James Peterson REVIEWED BY:	
REVISIONS INIT. DATE		
DocuSigned by: Keith M. Mins 8/31/2016 2F6078682C0445 DATE		
SIG. INVENTORY NO. 06-0001		

06-0001-2016 13:50
 S:\TSS\06-0001\Sig\Work\ Peterson\060001_sml.ele_xxx.dgn
 J. Peterson