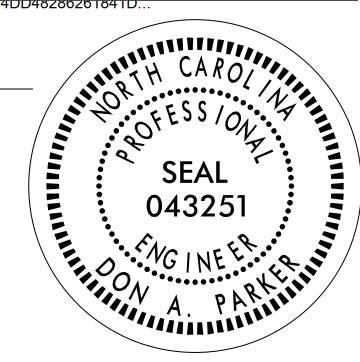



## ***BR-0115 PHASING***

- STEP 1. USING ROADWAY STANDARD DRAWINGS 1101.03, SHEET 1, AND TMP-2 INSTALL OFFSITE DETOUR SIGNS AND TRAFFIC CONTROL DEVICES AND CLOSE COOLBROOK ROAD (SR 1595) TO THROUGH TRAFFIC. MAINTAIN DRIVEWAY ACCESS AT ALL TIMES.
- STEP 2. COMPLETE THE FOLLOWING WITHIN THE ROAD CLOSURE:
- A) REMOVE THE EXISTING BRIDGE.
  - B) CONSTRUCT THE PROPOSED BRIDGE AND ROADWAY APPROACHES INCLUDING THE FINAL LAYER OF SURFACE COURSE AND FINAL PAVEMENT MARKINGS.
- STEP 3. REMOVE ALL TRAFFIC CONTROL DEVICES AND DETOUR SIGNS AND OPEN COOLBROOK ROAD (SR 1595) TO THROUGH TRAFFIC.

11/5/2020  
C:\Users\maddock\OneDrive\Work\BR-0115 - Copy\BR-0115\_0114\_TC\_TMP\_3.dgn  
User:maddock

APPROVED: <span style="border: 1px solid black; border-radius: 50%; padding: 2px;">Don A. Parker</span> <small>402462892819410</small> DATE: 11/9/2020			<h3 style="margin: 0;">BR-0115 PHASING</h3>
<b>DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED</b>			