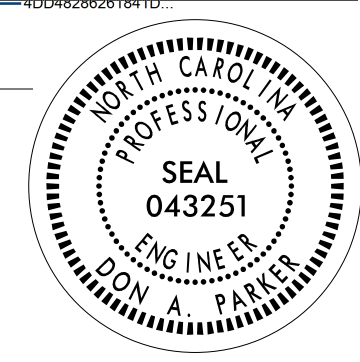



BR-0114 PHASING

- STEP 1. USING ROADWAY STANDARD DRAWINGS 1101.03, SHEET 1, AND TMP-3 INSTALL OFFSITE DETOUR SIGNS AND TRAFFIC CONTROL DEVICES AND CLOSE BRANTON ROAD (SR 1601) TO THROUGH TRAFFIC.
- STEP 2. COMPLETE THE FOLLOWING WITHIN THE ROAD CLOSURE:
- A) REMOVE THE EXISTING BRIDGE.
 - B) CONSTRUCT THE PROPOSED BRIDGE AND ROADWAY APPROACHES INCLUDING THE FINAL LAYER OF SURFACE COURSE AND FINAL PAVEMENT MARKINGS.
- STEP 3. REMOVE ALL TRAFFIC CONTROL DEVICES AND DETOUR SIGNS AND OPEN BRANTON ROAD (SR 1601) TO THROUGH TRAFFIC.

11/5/2020
C:\Users\maddock\OneDrive\Work\BR-0115 - Copy\BR-0115_0114_TC_TMP_5.dgn
User:maddock

APPROVED: _____ <small>DocuSigned by: Don A. Parker 400462820210410</small> DATE: 11/9/2020			BR-0114 PHASING
DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED			