


PROJECT REFERENCE NO.	SHEET NO.
BR-0125	EC-2B
RW SHEET NO.	
ROADWAY DESIGN ENGINEER	HYDRAULICS ENGINEER

PUMP-AROUND OPERATION DETAIL

NOTES:
 1) All excavation shall be performed in only dry or isolated areas of the work zone.
 2) Impervious dikes are to be used to isolate work from stream flow when necessary.
 3) Maintenance of stream flow operations shall be incidental to the work. This includes polyethylene sheeting, diversion pipes, pumps and hoses.
 4) Pumps and hoses shall be of sufficient size to dewater the work area.

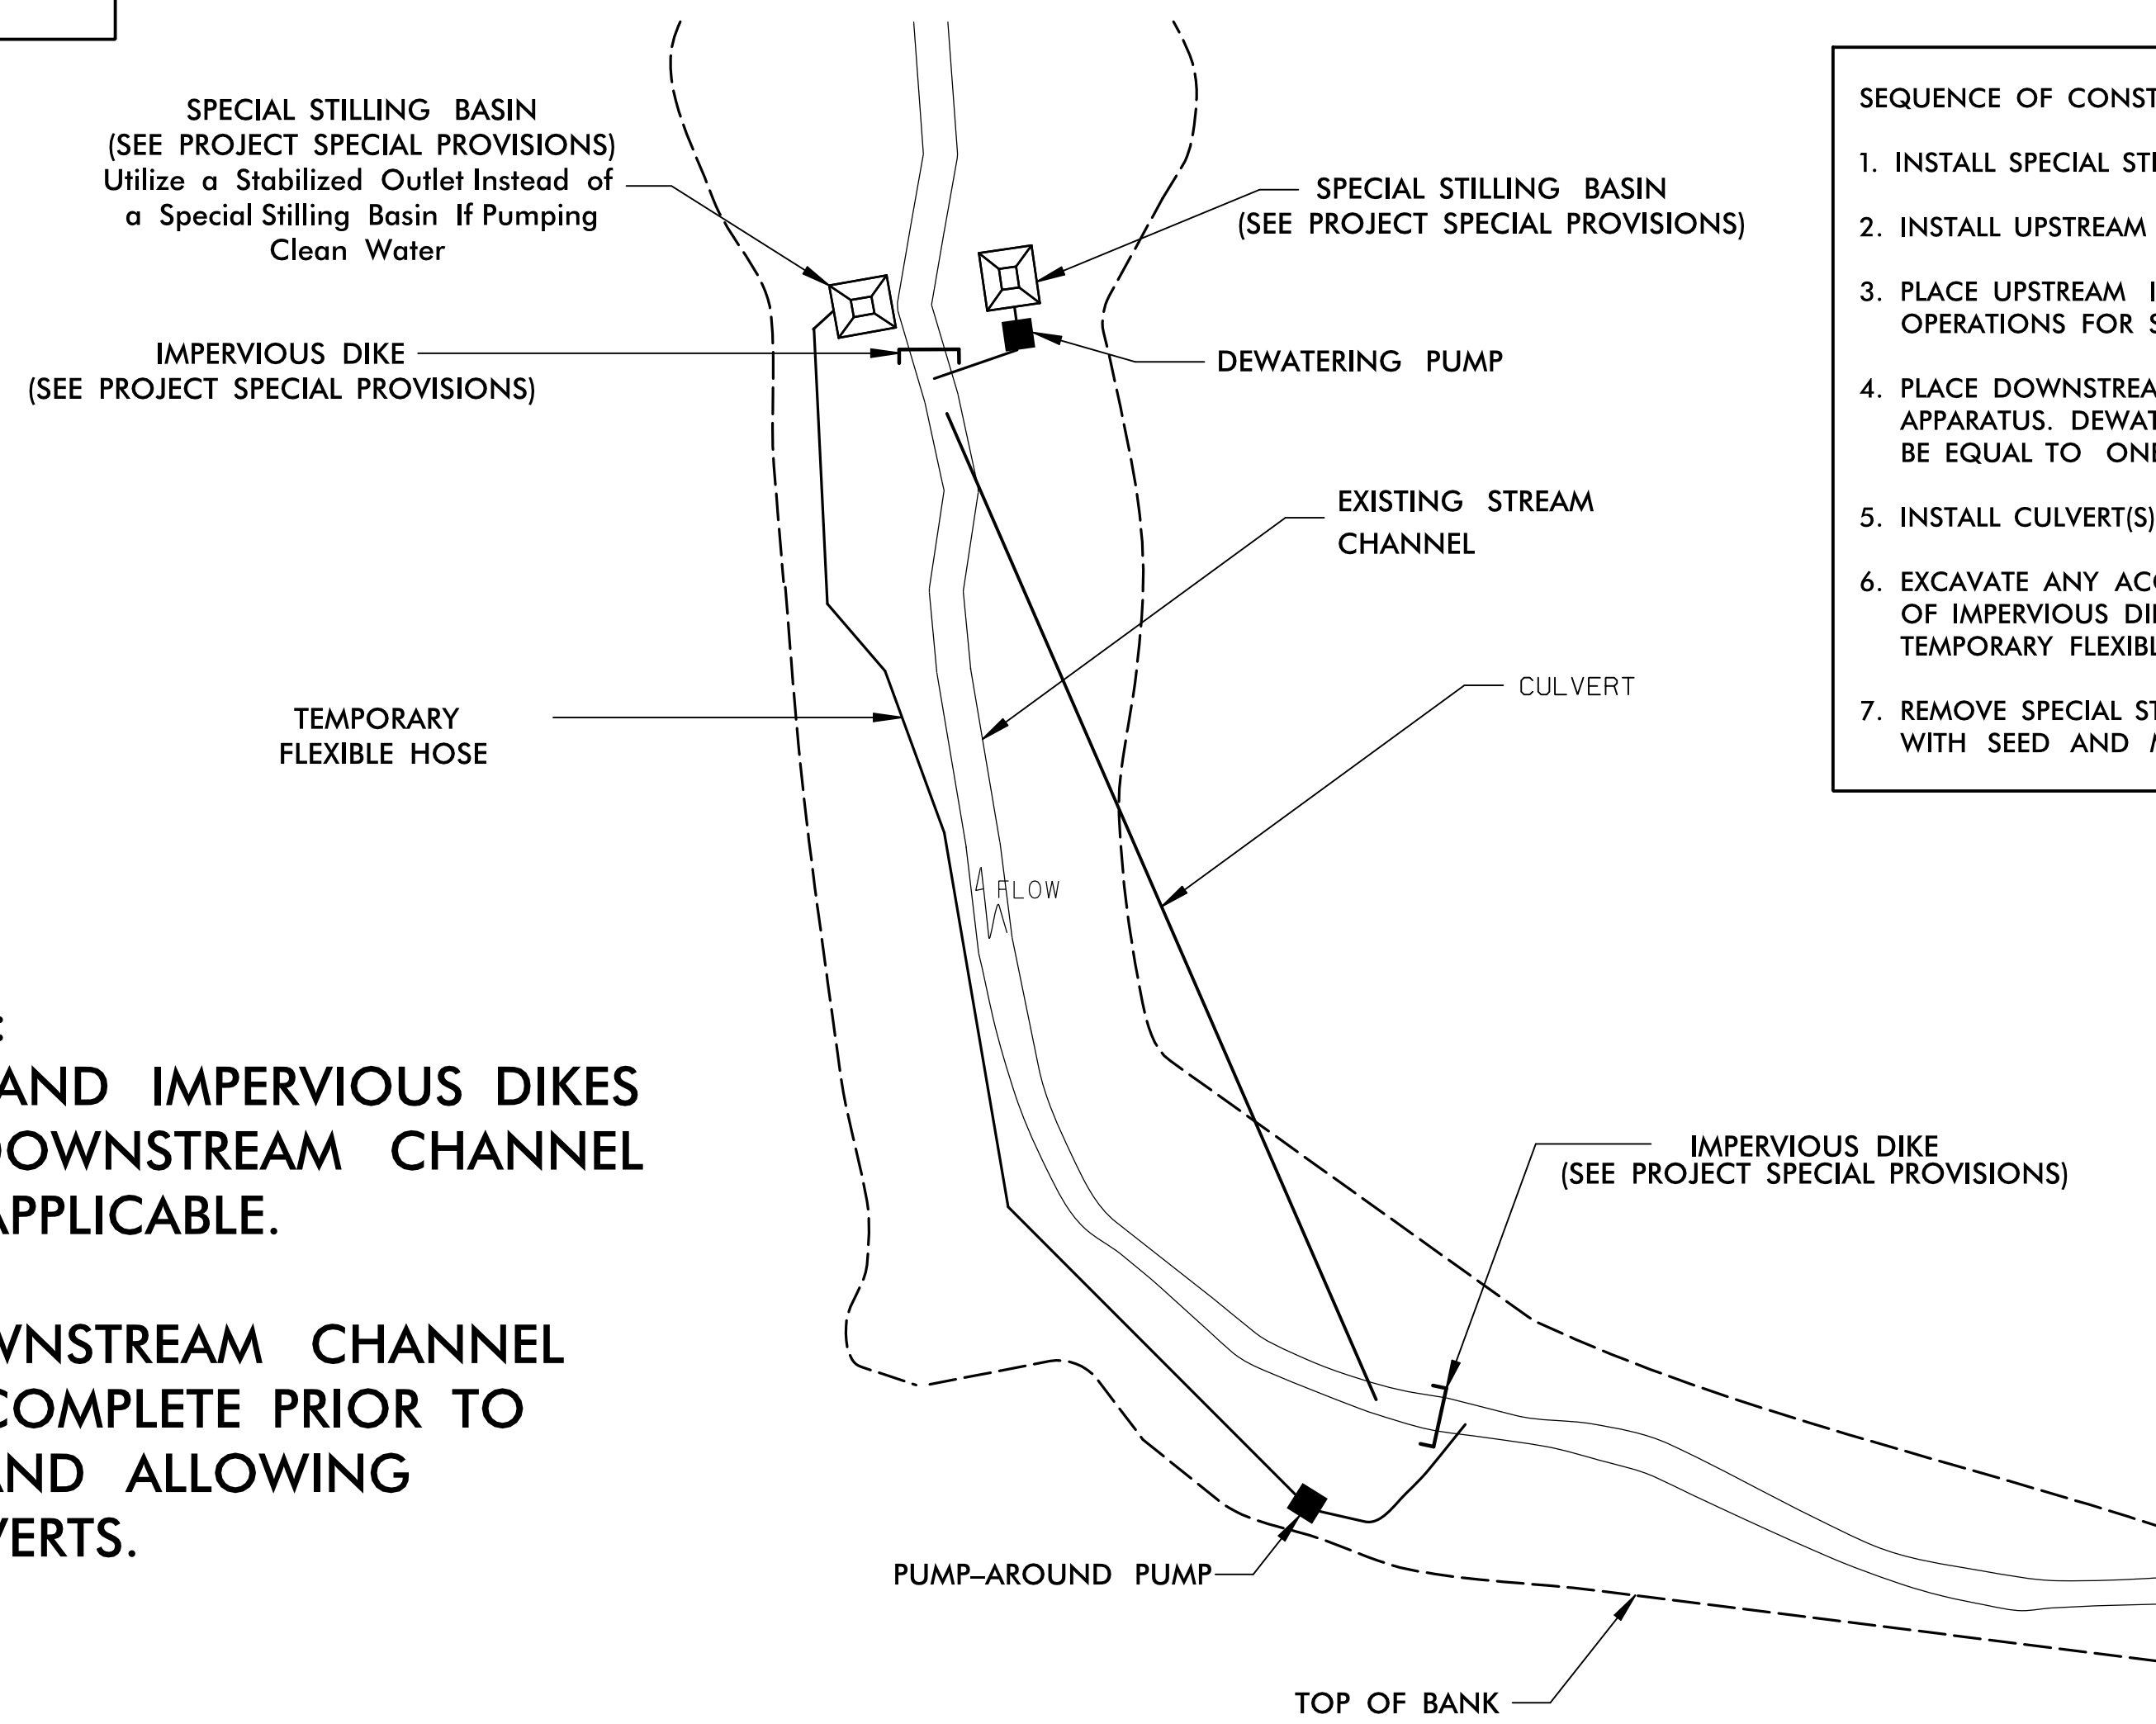

SEQUENCE OF CONSTRUCTION FOR TYPICAL WORK AREA

1. INSTALL SPECIAL STILLING BASIN(S).
2. INSTALL UPSTREAM PUMP AND TEMPORARY FLEXIBLE HOSE.
3. PLACE UPSTREAM IMPERVIOUS DIKE AND BEGIN PUMPING OPERATIONS FOR STREAM DIVERSION.
4. PLACE DOWNSTREAM IMPERVIOUS DIKE AND PUMPING APPARATUS. DEWATER ENTRAPPED AREA. AREA TO BE DEWATERED SHALL BE EQUAL TO ONE DAY'S WORK.
5. INSTALL CULVERT(S) IN ACCORDANCE WITH THE PLANS.
6. EXCAVATE ANY ACCUMULATED SILT AND DEWATER BEFORE REMOVAL OF IMPERVIOUS DIKES. REMOVE IMPERVIOUS DIKES, PUMPS, AND TEMPORARY FLEXIBLE HOSE. (DOWNSTREAM IMPERVIOUS DIKES FIRST).
7. REMOVE SPECIAL STILLING BASIN(S) AND BACKFILL. STABILIZE DISTURBED AREA WITH SEED AND MULCH.

****ADDITIONAL PROJECT-SPECIFIC NOTES:**

- 1) USE PUMP-AROUND OPERATION AND IMPERVIOUS DIKES TO COMPLETE UPSTREAM AND DOWNSTREAM CHANNEL IMPROVEMENTS/PROTECTIONS AS APPLICABLE.
- 2) ENSURE ALL UPSTREAM AND DOWNSTREAM CHANNEL IMPROVEMENT/PROTECTIONS ARE COMPLETE PRIOR TO REMOVAL OF IMPERVIOUS DIKES AND ALLOWING STREAM FLOW INTO NEW CULVERTS.