

CLOSE LANE
VIA RSD 1101.02
REFER TO INSET FOR
MERGE TAPER SETUP

DRUMS @ 110 FT
SPACING


MIN 240'
CLEAR AREA

TANGENT LENGTH OF PCB
LESS THAN OR EQUAL TO 1 MILE

250'± CHANNELIZED
ACCELERATION LANE

DRUMS @ 25 FT
SPACING

CLOSE LANE
VIA RSD 1101.02
REFER TO INSET FOR
MERGE TAPER SETUP

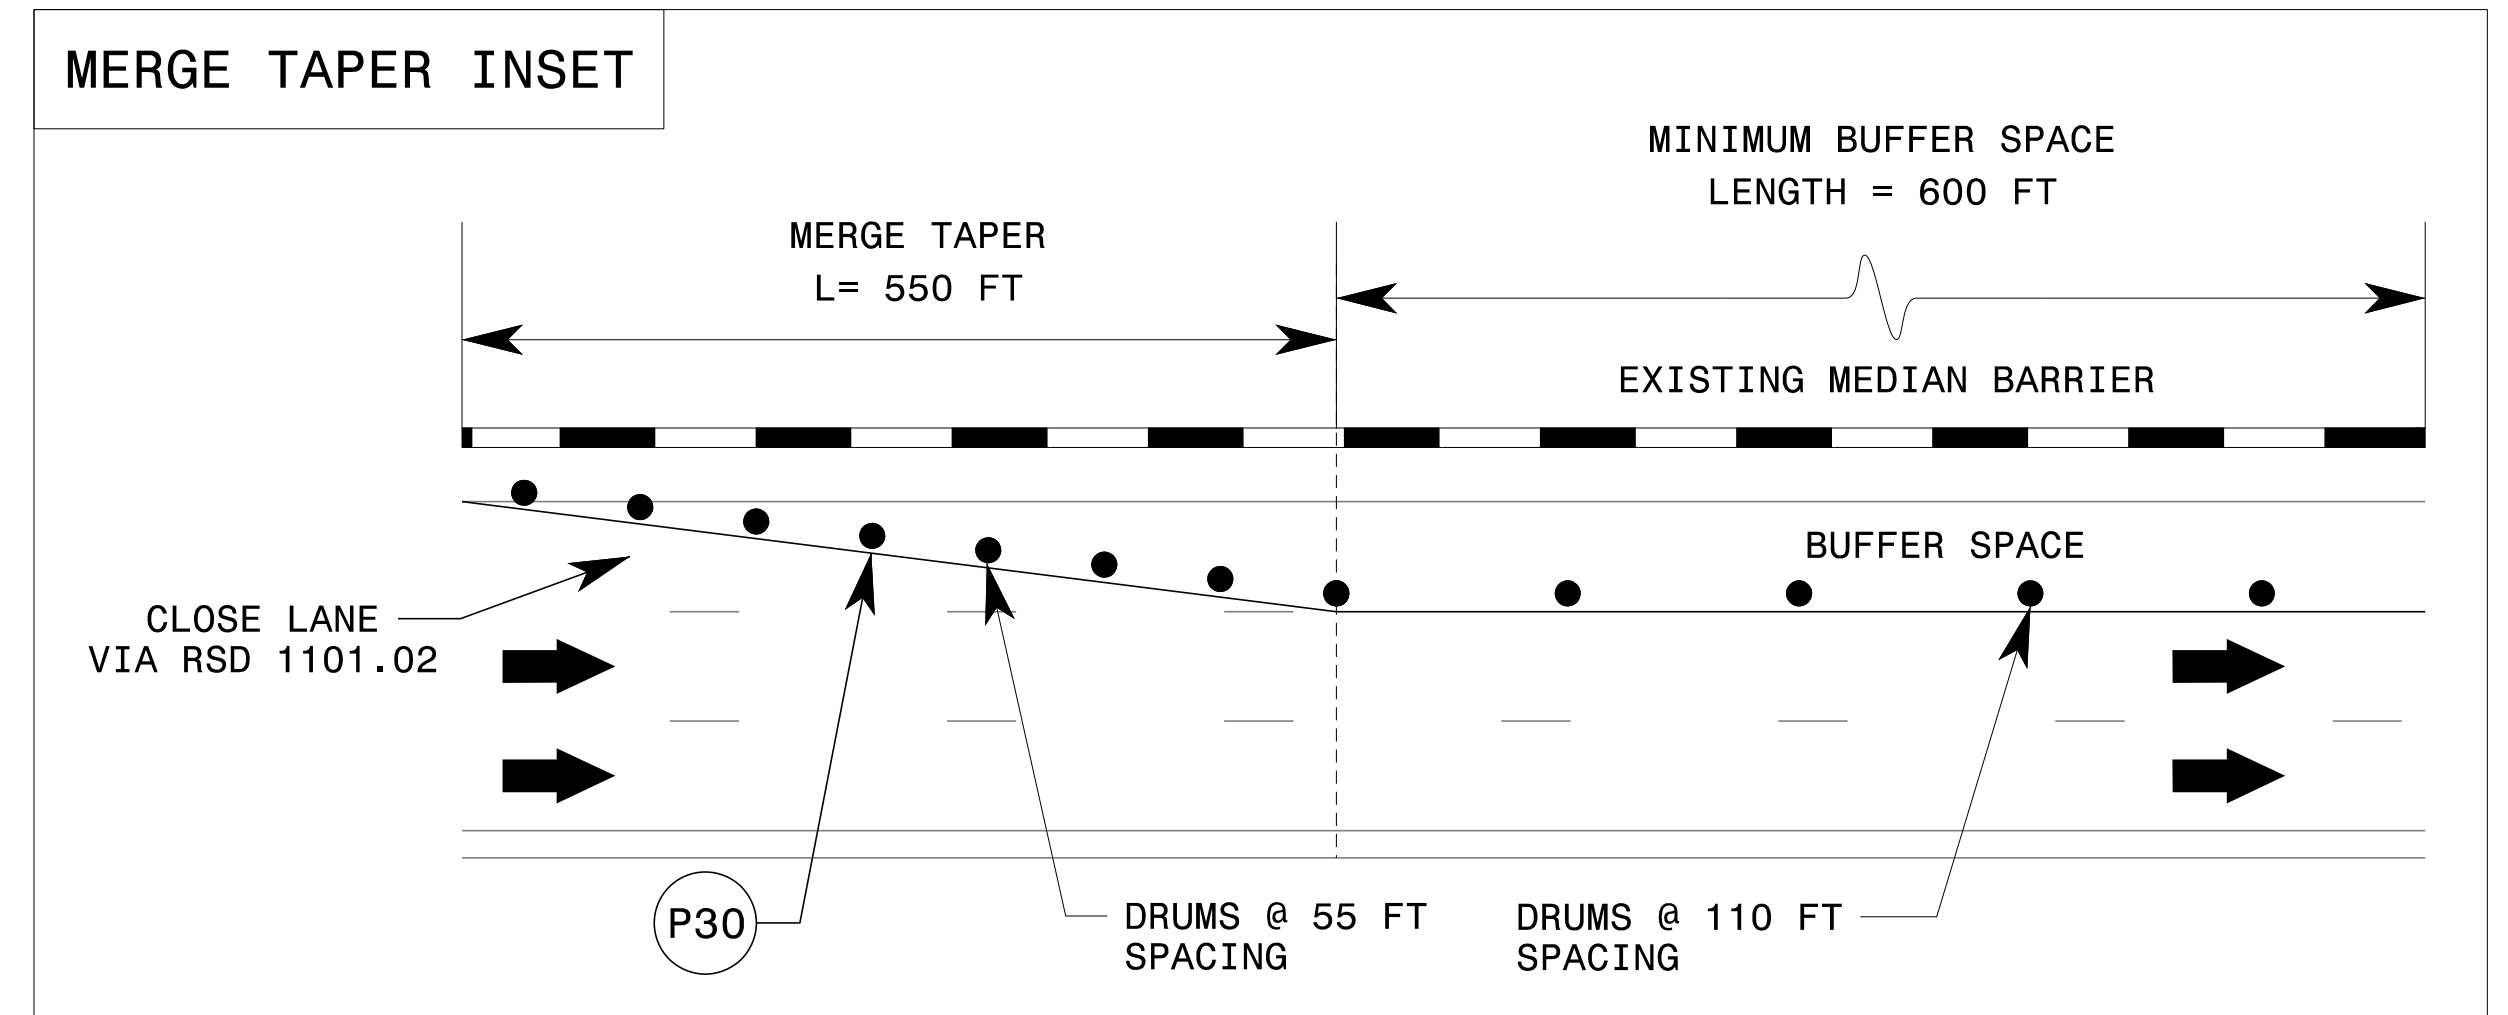

NOTES


1. MAINTAIN AN OFFSET OF 2 FT FROM PCB TO EDGELINE OF OPEN TRAVEL LANE AND A MINIMUM BUFFER DISTANCE OF 600 FT.
2. INSTALL ADVANCE WARNING STATIONARY SIGNS FOR LONG TERM LANE CLOSURE USING RSD 1101.02 SHEET 3 OF 14.
3. INSTALL SHOULDER CLOSURE SIGNS USING RSD 1101.04 SHEET 1 OF 1.
4. DO NOT INSTALL MORE THAN 1 MILE OF PORTABLE CONCRETE BARRIER IN EITHER DIRECTION UNLESS OTHERWISE DIRECTED BY THE ENGINEER.
5. REMOVE CONFLICTING MARKINGS, SHIFT STATIONARY SIGNS FOR LANE CLOSURES AND REVISE TEMPORARY PAVEMENT MARKINGS AS NECESSARY AFTER RESETTING BARRIER.

APPROVED: *Zachary T. Clark*
DATE: 04/12/2023

DocuSigned by:
Zachary T. Clark
0C4DA7F17F0420

SEAL
045090
ZACHARY T. CLARK
ENGINEER

**DOCUMENT NOT CONSIDERED FINAL
UNLESS ALL SIGNATURES COMPLETED**

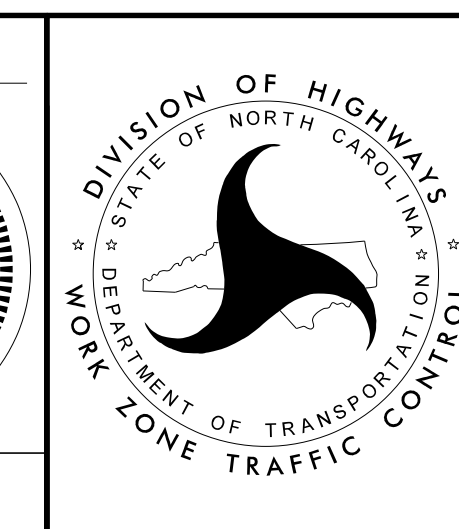

LONG-TERM LANE CLOSURE
PCB LAYOUT DETAIL
(FOR 3 LANE SECTIONS)