

#### NOTES:


- 1) DETAIL DOES NOT APPLY TO OGAFC AND ULTRA-THIN BONDED WEARING COURSE.
- 2) BACKFILL SHOULDER WITH APPROVED MATERIAL.
- 3) THE SHOULDER WEDGE DEVICE MAY BE DISENGAGED AT PAVED DRIVEWAYS, SIDE STREETS, HIGH SHOULDERS, AND OTHER LOCATIONS NOT FEASIBLE TO CONSTRUCT AS APPROVED BY THE ENGINEER.

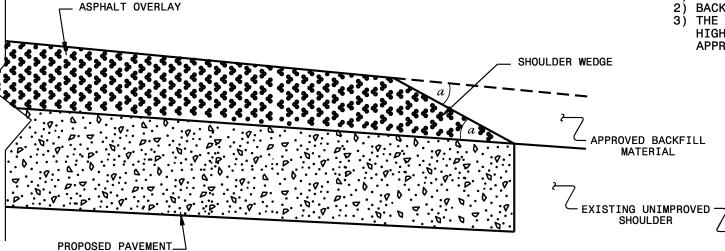

### SHOULDER WEDGE DETAIL

(Resurfacing Projects w/ Widening or with Existing Paved Shoulder having no dropoffs)

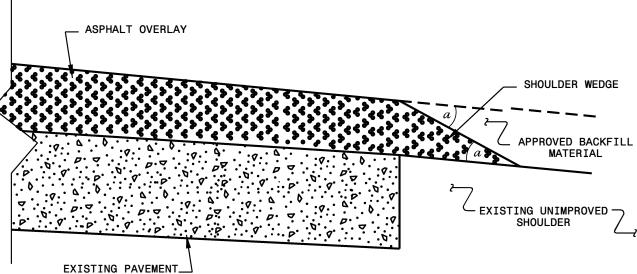

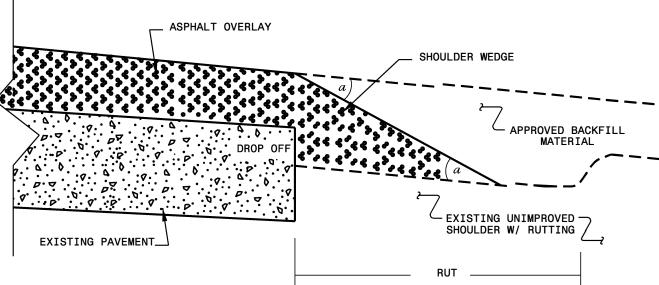

#### SHOULDER WEDGE DETAIL

(Resurfacing Projects w/ NO Widening)

- SHOULDER WEDGE ANGLE = 30°

## CONTRACT STANDARDS AND DEVELOPMENT UNIT Office 919-707-6950 FAX 919-250-4119

# SHOULDER WEDGE DETAILS

ORIGINAL BY:	
MODIFIED BY:	
CHECKED BY:	DATE:
FILE SPEC.:	s:usr/details/stand/shoulderwedgedetail.dgn

### SHOULDER WEDGE DETAIL

(Resurfacing Adjacent to Rutted Shoulder)