

WATTLE BARRIER DETAIL

NOTES:

USE MINIMUM 18 IN. NOMINAL DIAMETER EXCELSIOR WATTLE AND LENGTH OF 10 FT.

EXCAVATE A 2 TO 3 INCH TRENCH FOR WATTLE TO BE PLACED.

DO NOT PLACE WATTLES ON TOE OF SLOPE.

CROSS SECTION.

INSTALL A MINIMUM OF 2 UPSLOPE STAKES AND 4 DOWNSLOPE STAKES AT AN ANGLE TO WEDGE WATTLE TO GROUND.


PROVIDE STAPLES MADE OF 0.125 IN. DIAMETER STEEL WIRE FORMED INTO A U SHAPE NOT LESS THAN 12" IN LENGTH.

INSTALL STAPLES APPROXIMATELY EVERY 1 LINEAR FOOT ON BOTH SIDES OF WATTLE AND AT EACH END TO SECURE IT TO THE SOIL.

FOR BREAKS ALONG LARGE SLOPES, USE MAXIMUM SPACING OF 25 FT.


FILL SLOPE

INSET A

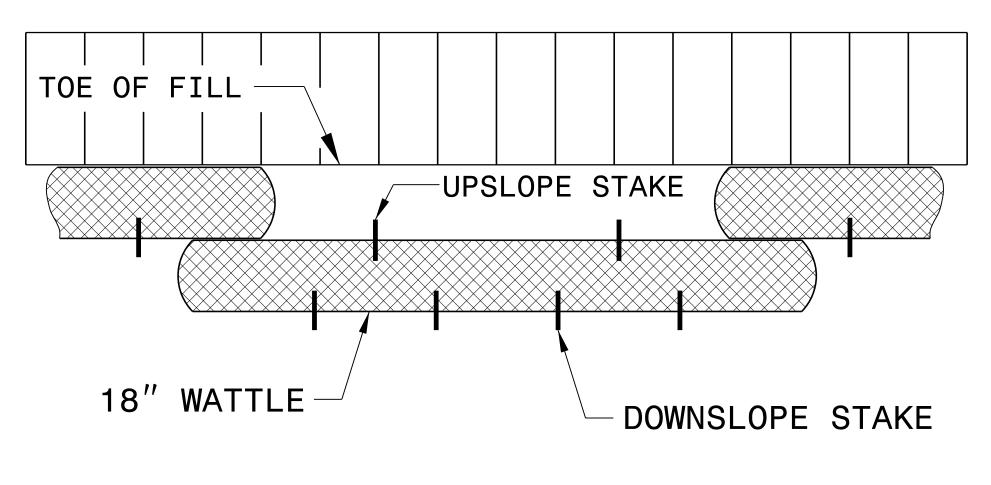

R/W SHEET NO. ROADWAY DESIGN HYDRAULICS	PROJECT REFERENCE NO	SHEET NO.	
ROADWAY DESIGN HYDRAULICS	U-5808	EC-2F	
	RW SHEET NO.		

USE 2 FT. WOODEN STAKES WITH A 2 IN. BY 2 IN. NOMINAL

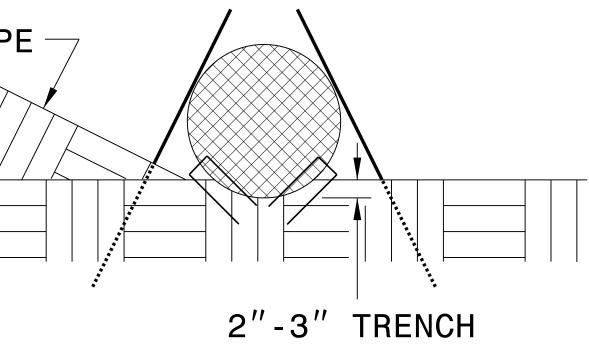

TOP VIEW