

MANHOLE ENGLISH DETAIL ₽ VALVE DRAWING BOX FOR

GENERAL NOTES:


- 1. USE RAPID SET GROUT, MORTAR, OR CONCRETE THAT WILL TAKE FULL SET AND BECOME LOAD BEARING WITHIN SIXTY MINUTES OF PLACEMENT WITH A MINIMUM COMPRESSIVE STRENGTH OF 4000 PSI.
- 2. REMOVE ALL FAULTY EXISTING BRICKWORK AND REPLACE WITH NEW BRICK MASONRY.
- 3. SHEER CUT EXCAVATION FOR THE ADJUSTMENT ON ALL SIDES.
- 4. FILL AREA BELOW 8" DEPTH WITH 78M OR NO.57 CLEAN STONE.
- 5. MIX MORTAR TO NCDOT SPECIFICATIONS.
- 6. MORTAR JOINTS 1/2" +/- 1/8"
- 7. CONSTRUCT AN ASPHALT RAMP IN ACCORDANCE WITH SECTION 858-3 OF THE 2024 STANDARD SPECIFICATIONS.

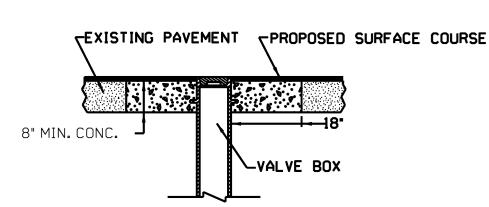

VALVE BOX CONCRETE ENCASEMENT

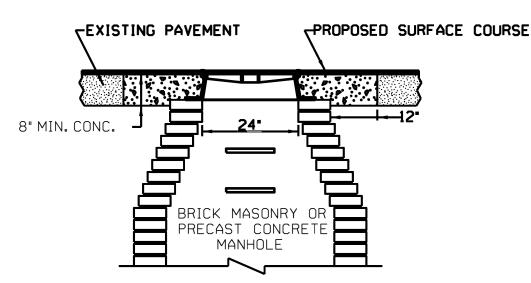

MANHOLE CONCRETE ENCASEMENT

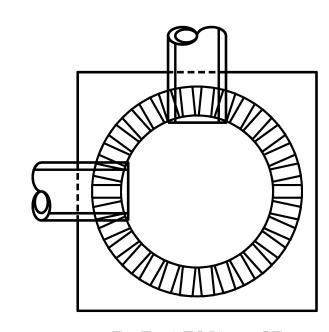

ELEVATION VIEW

PLACE BRICK ACCORDING TO ELEVATION VIEW

ADJUSTMENTS DRAWING FOR BOX VALVE **DETAIL** ENGL ISH AND MANHOLE

SHEET | OF 840D55

ADJUSTMENT

HEET OF