

REMOVE DRUMS FROM LEFT TURN LANE AND PCB FROM STA. 27+65 +/- -L- TO STA. 29+00 +/- -L- WHEN -Y3- IS OPEN TO TRAFFIC. NOTE: INSTALL TCC ON END OF PCB AT STA. 29+00 +/- -L-.

NOTES: PAVEMENT MARKINGS SHOW ARE EXISTING UNLESS OTHERWISE NOTED. SEE TMP-1A FOR PAVEMENT MARKING SCHEDULE.

WETHERILL ENGINEERING

1223 Jones Franklin Rd.
Raleigh, N.C. 27606
License No. F-0377
Bus: 919 851 8077
Fax: 919 851 8107

TRANSPORTATION PLANNING/DESIGN - BRIDGE/STRUCTURE DESIGN
CIVIL/SITE DESIGN - GIS/GPS - CONSTRUCTION OBSERVATION


DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

APPROVED: *Bob A. Way*

DATE: 10/16/2018

SEAL

NORTH CAROLINA PROFESSIONAL ENGINEER
SEAL 21116
BOB A. WAY

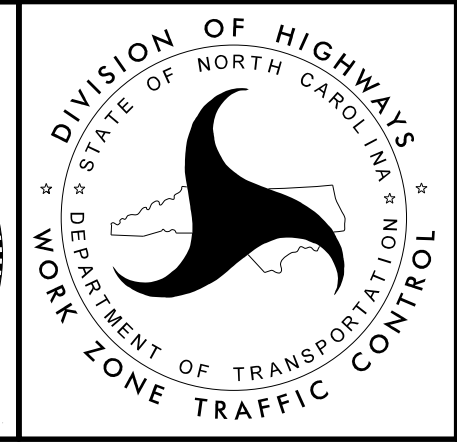

PHASE II