


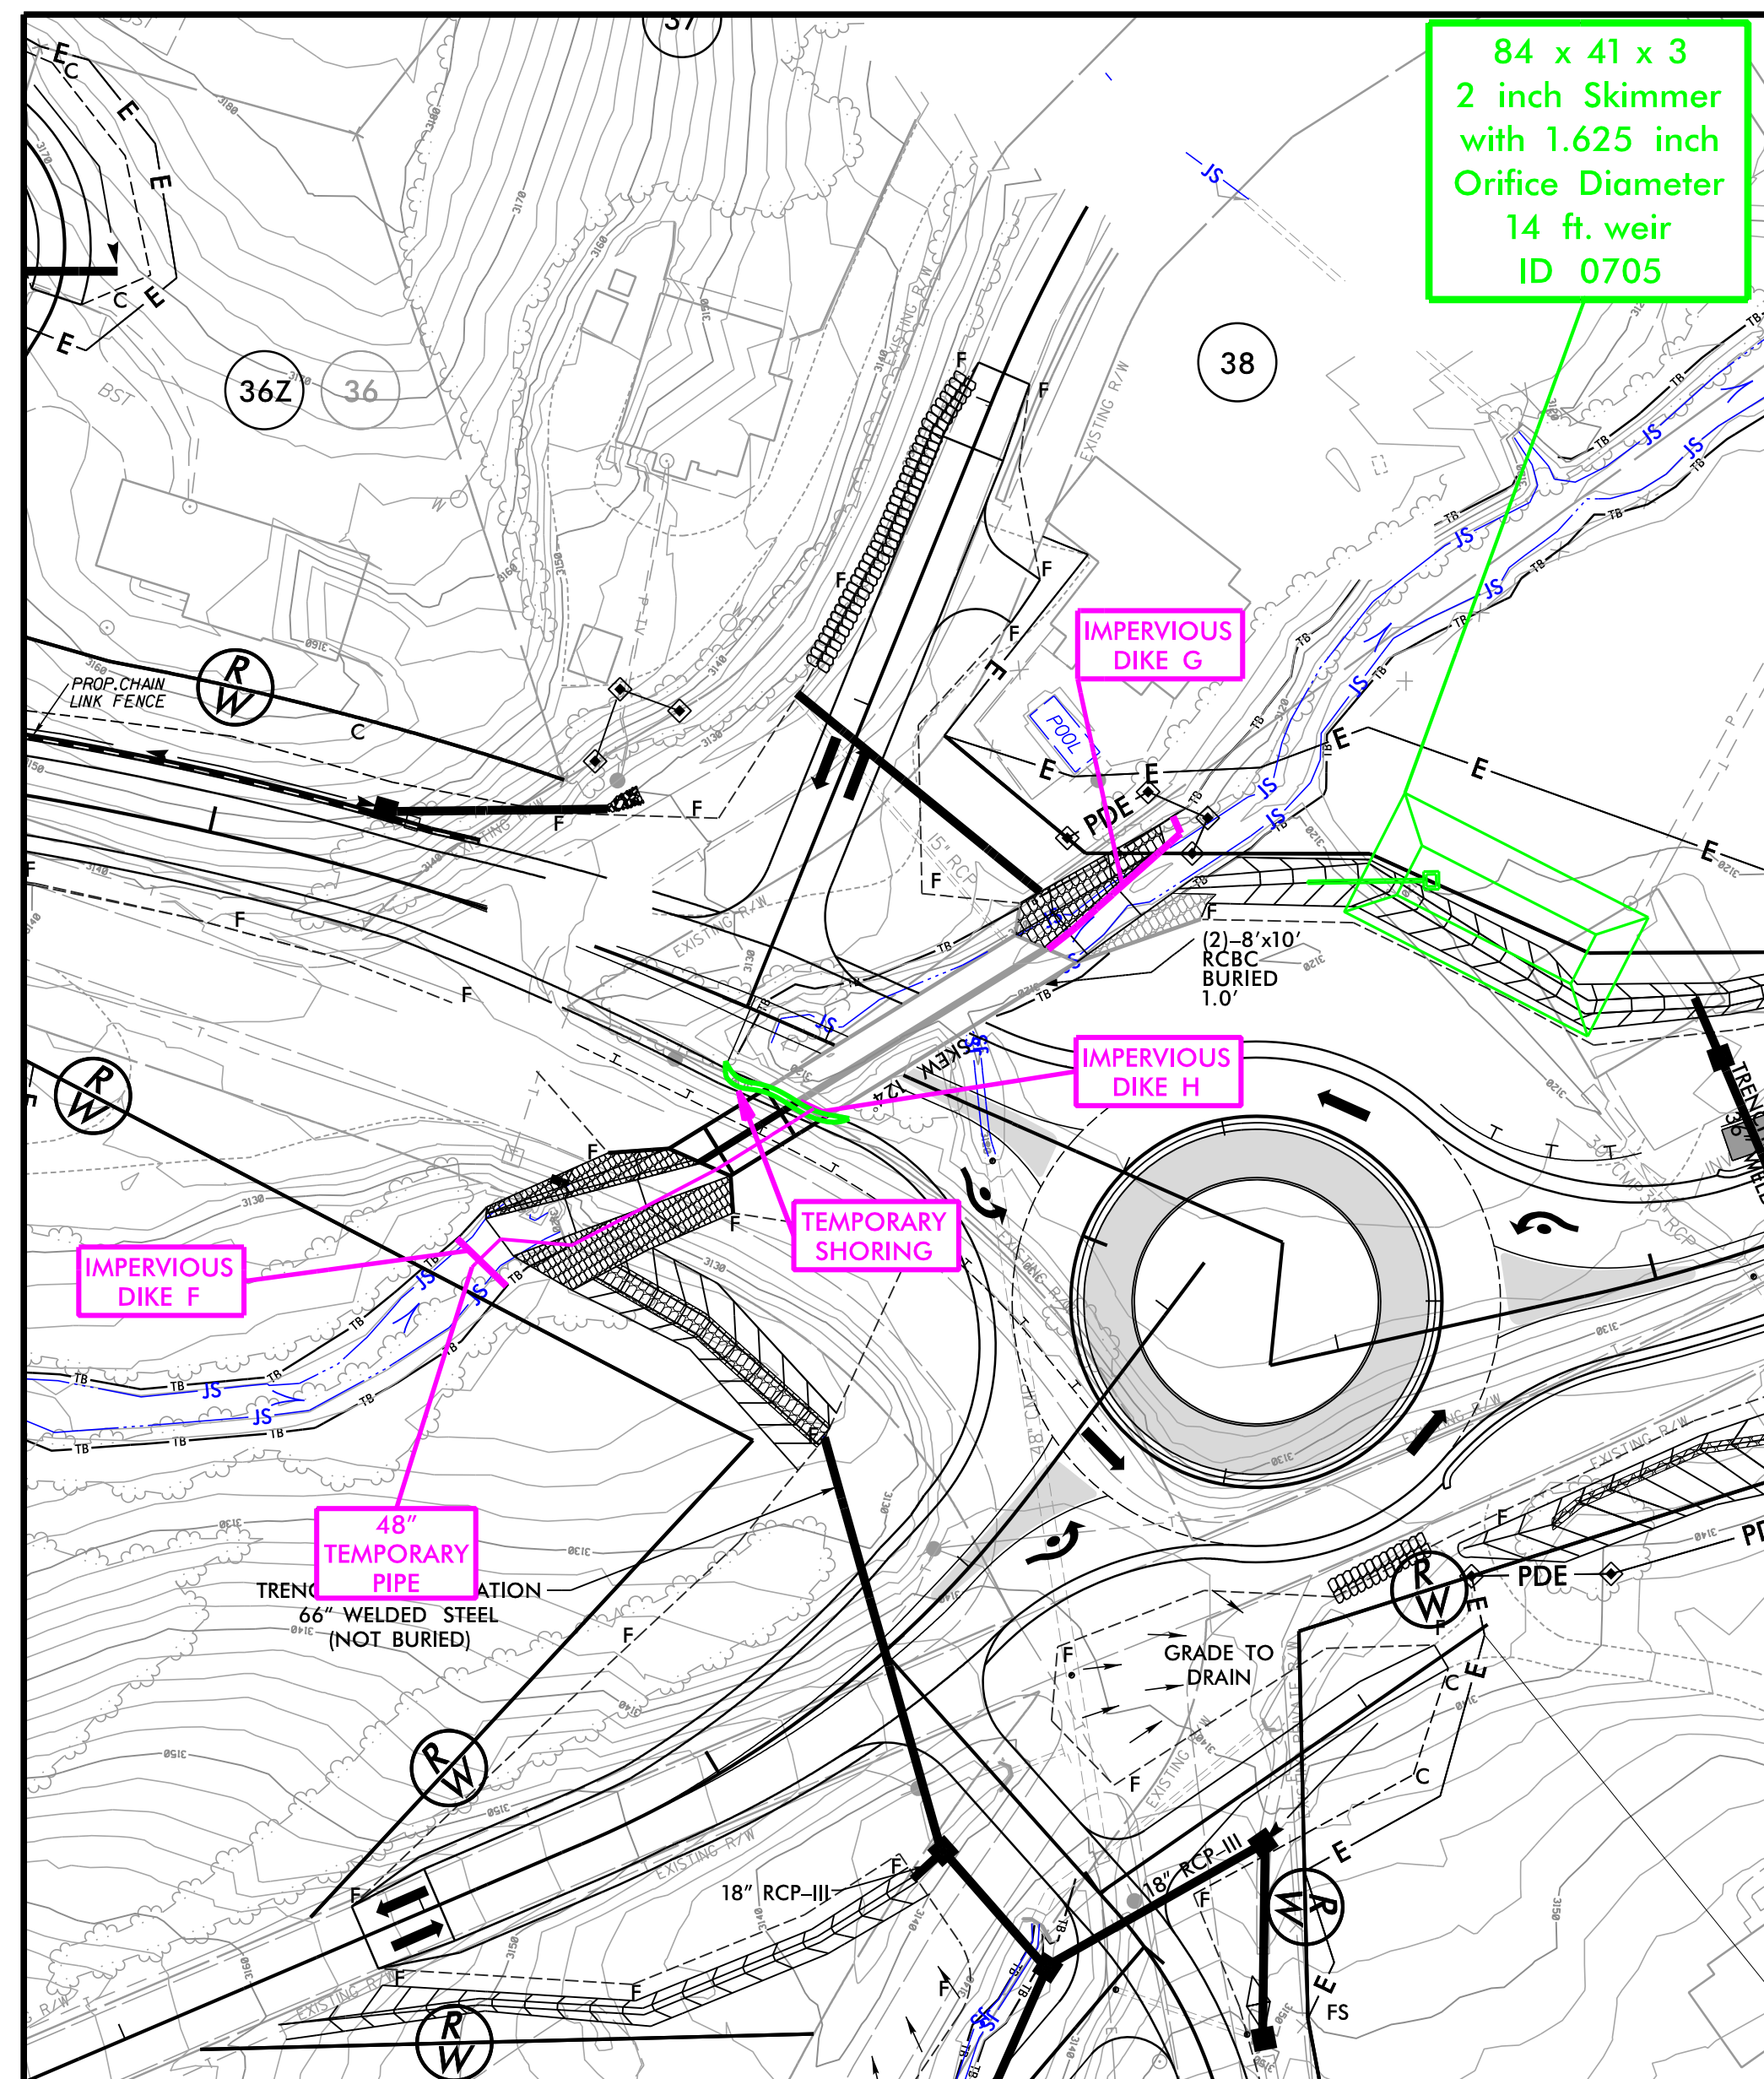

CULVERT INSTALLATION PHASE 3 STA. 53+79 -L-

1. SHIFT TRAFFIC TO NEWLY CONSTRUCTED ROADWAY.
2. REMOVE REMAINDER OF WESTERN 72" CMP WHILE MAINTAINING FLOW THROUGH EASTERN 72" CMP.
3. REMOVE IMPERVIOUS DIKES D & E FROM PHASE 2.
4. INSTALL 48" TEMPORARY PIPE AT UPSTREAM END OF PARTIALLY CONSTRUCTED EASTERN BOX CULVERT.
5. INSTALL IMPERVIOUS DIKES F, G, AND H TO DIRECT FLOW TO PARTIALLY CONSTRUCTED EASTERN BOX CULVERT AND 48" TEMPORARY PIPE.
6. REMOVE REMAINDER OF EASTERN 72" CMP AND INSTALL REMAINDER OF OUTLET CHANNEL IMPROVEMENTS.
7. CONSTRUCT REMAINING UPSTREAM PORTION OF 2 @ 8' X 10' BOX CULVERT, HEADWALL, WING WALLS, APPROACHES AND CHANNEL IMPROVEMENTS.
8. REMOVE IMPERVIOUS DIKES, TEMPORARY 48" PIPE, AND TEMPORARY SHORING.