


PROJECT REFERENCE NO.	SHEET NO.
P-5707	EC-06B/CONST.6
RW SHEET NO.	
ROADWAY DESIGN ENGINEER	HYDRAULICS ENGINEER

CULVERT CONSTRUCTION SEQUENCE STA. 44+63.5 -L-

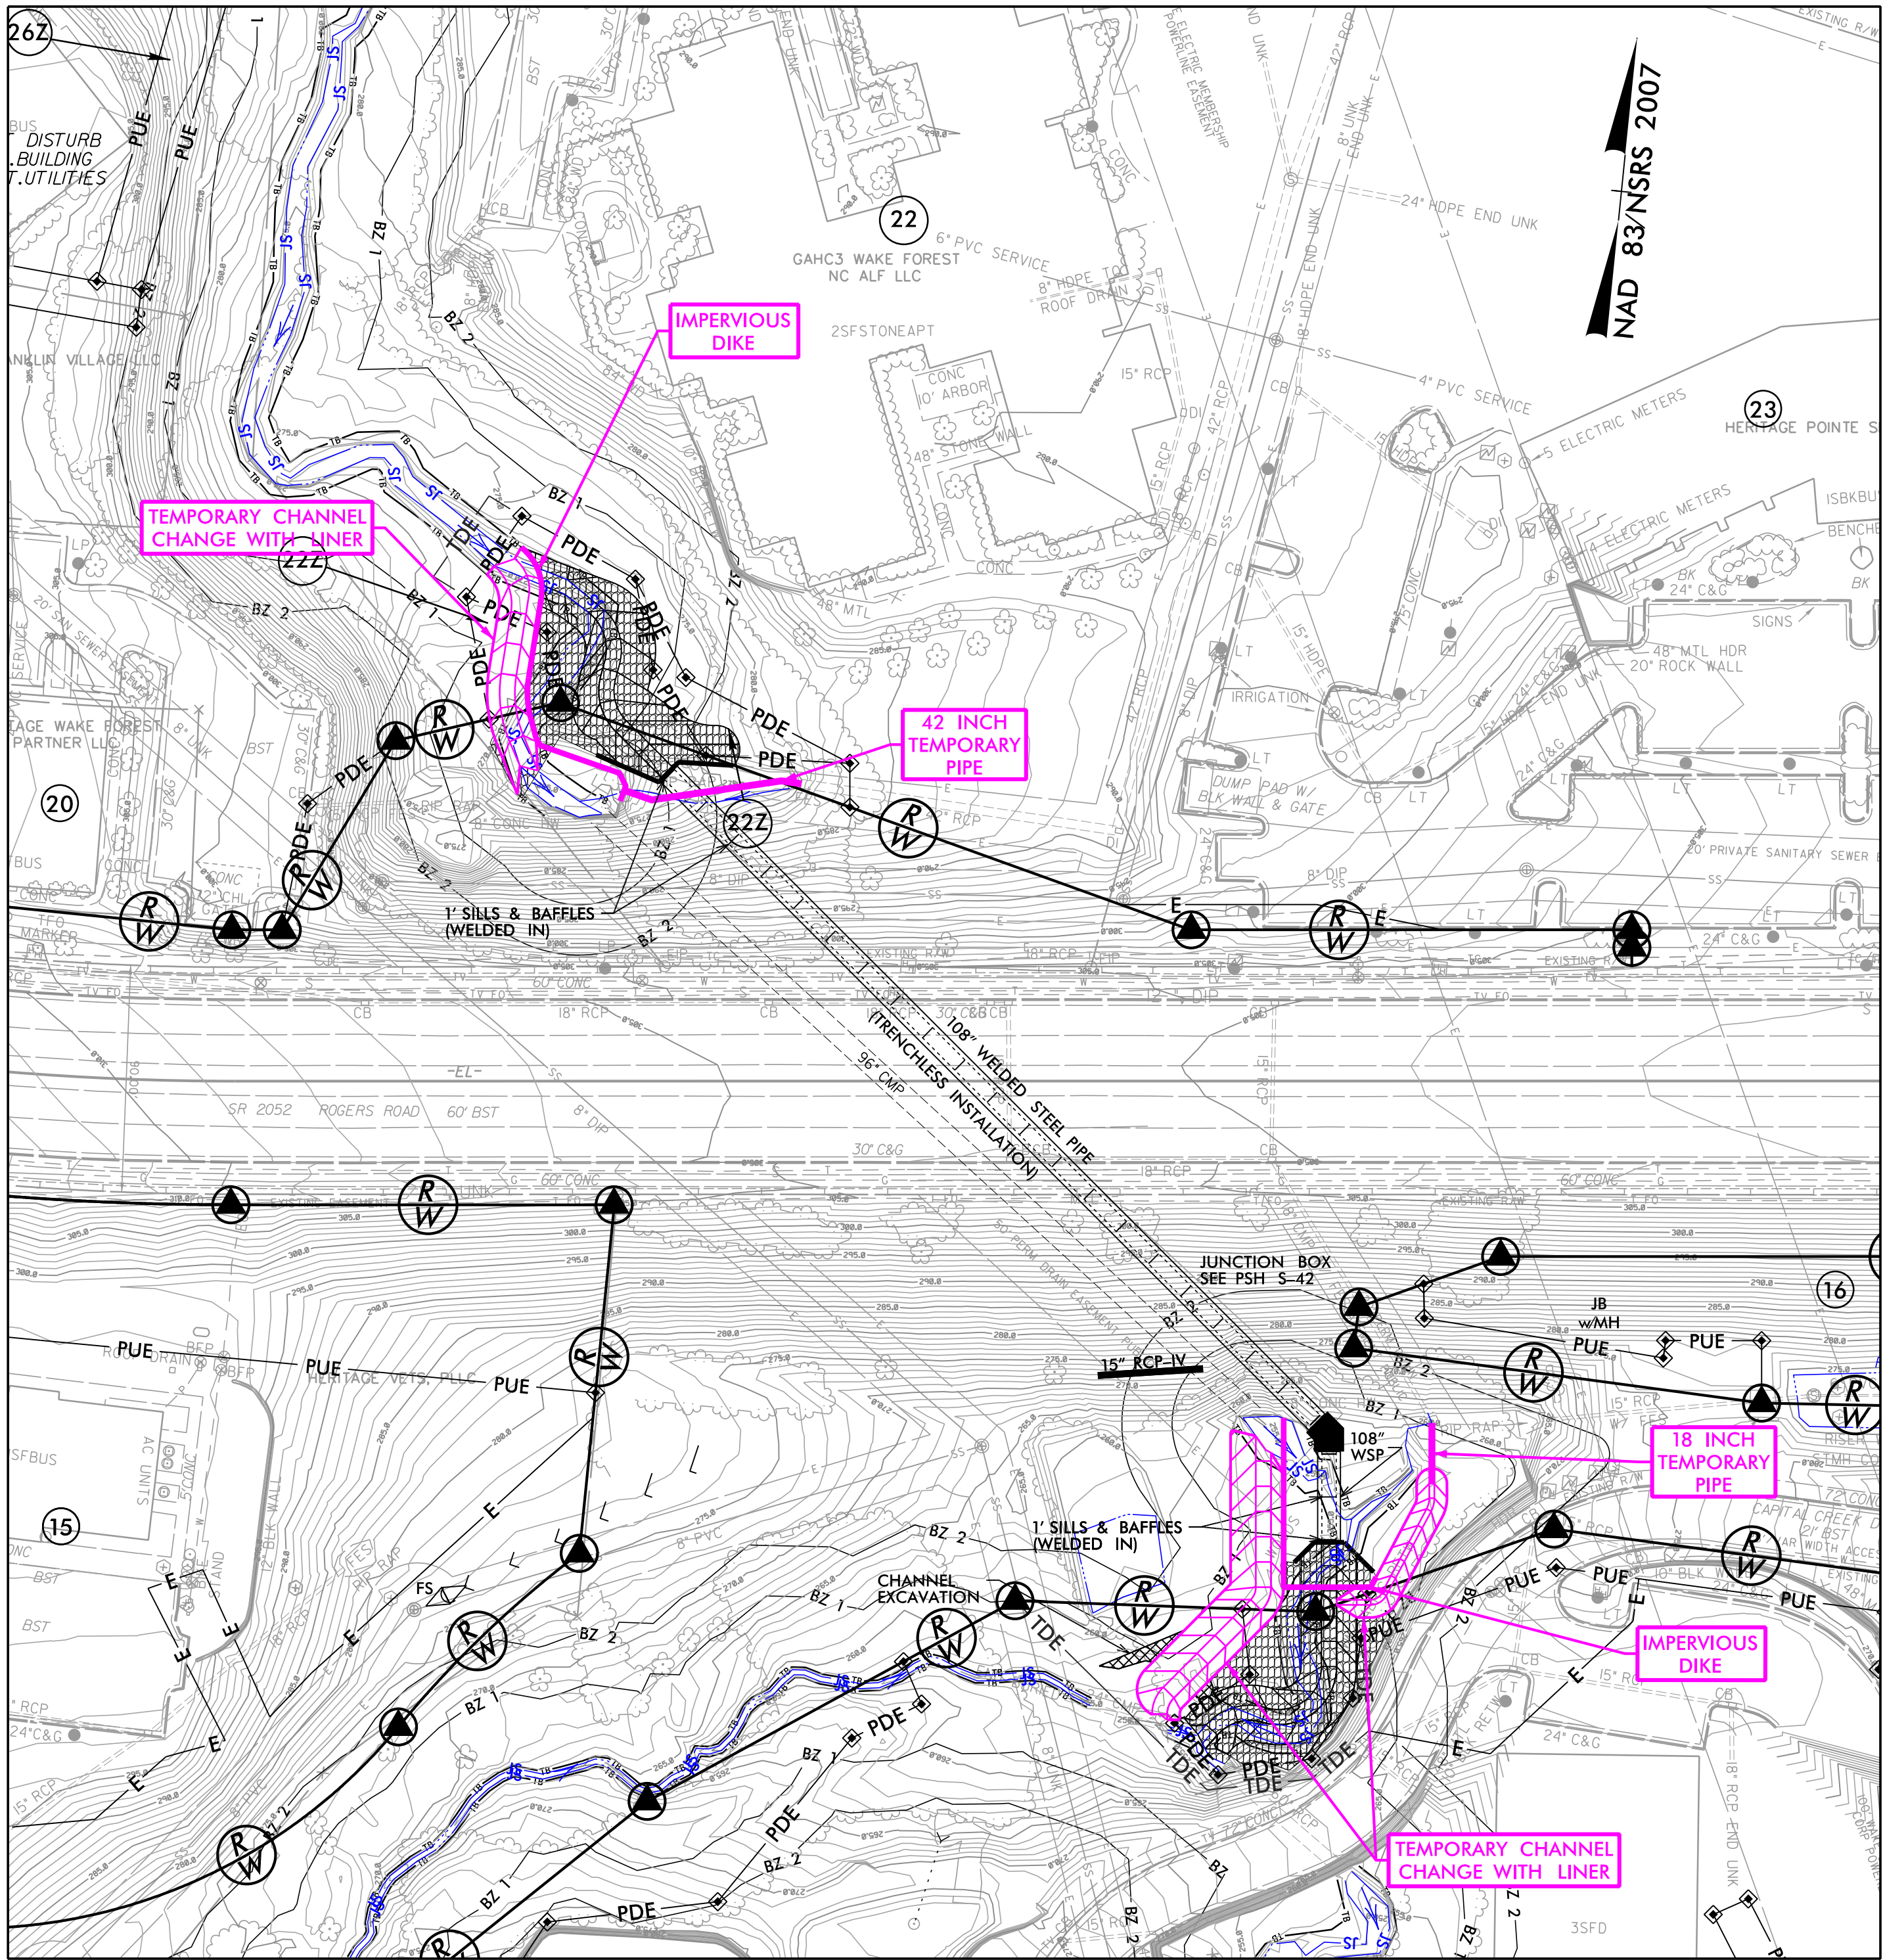

PHASE II

1. ADJUST TEMPORARY CHANNEL CHANGE W/LINER AT OUTLET OF 18" TEMPORARY PIPE AS SHOWN TO TIE WITH DOWNSTREAM CHANNEL WORK. ADJUST IMPERVIOUS DIKE ACCORDINGLY.
2. INSTALL SPECIAL DETAIL JUNCTION BOX AND 36' SECTION OF 108" WELDED STEEL PIPE.
3. INSTALL HEADWALL AND ENDWALL AT INLET AND OUTLET OF 108" WELDED STEEL PIPE CULVERT, RESPECTIVELY.
4. COMPLETE ROADWAY GRADING AND INSTALL PROPOSED DRAINAGE.
5. BEGIN PHASE III.

