

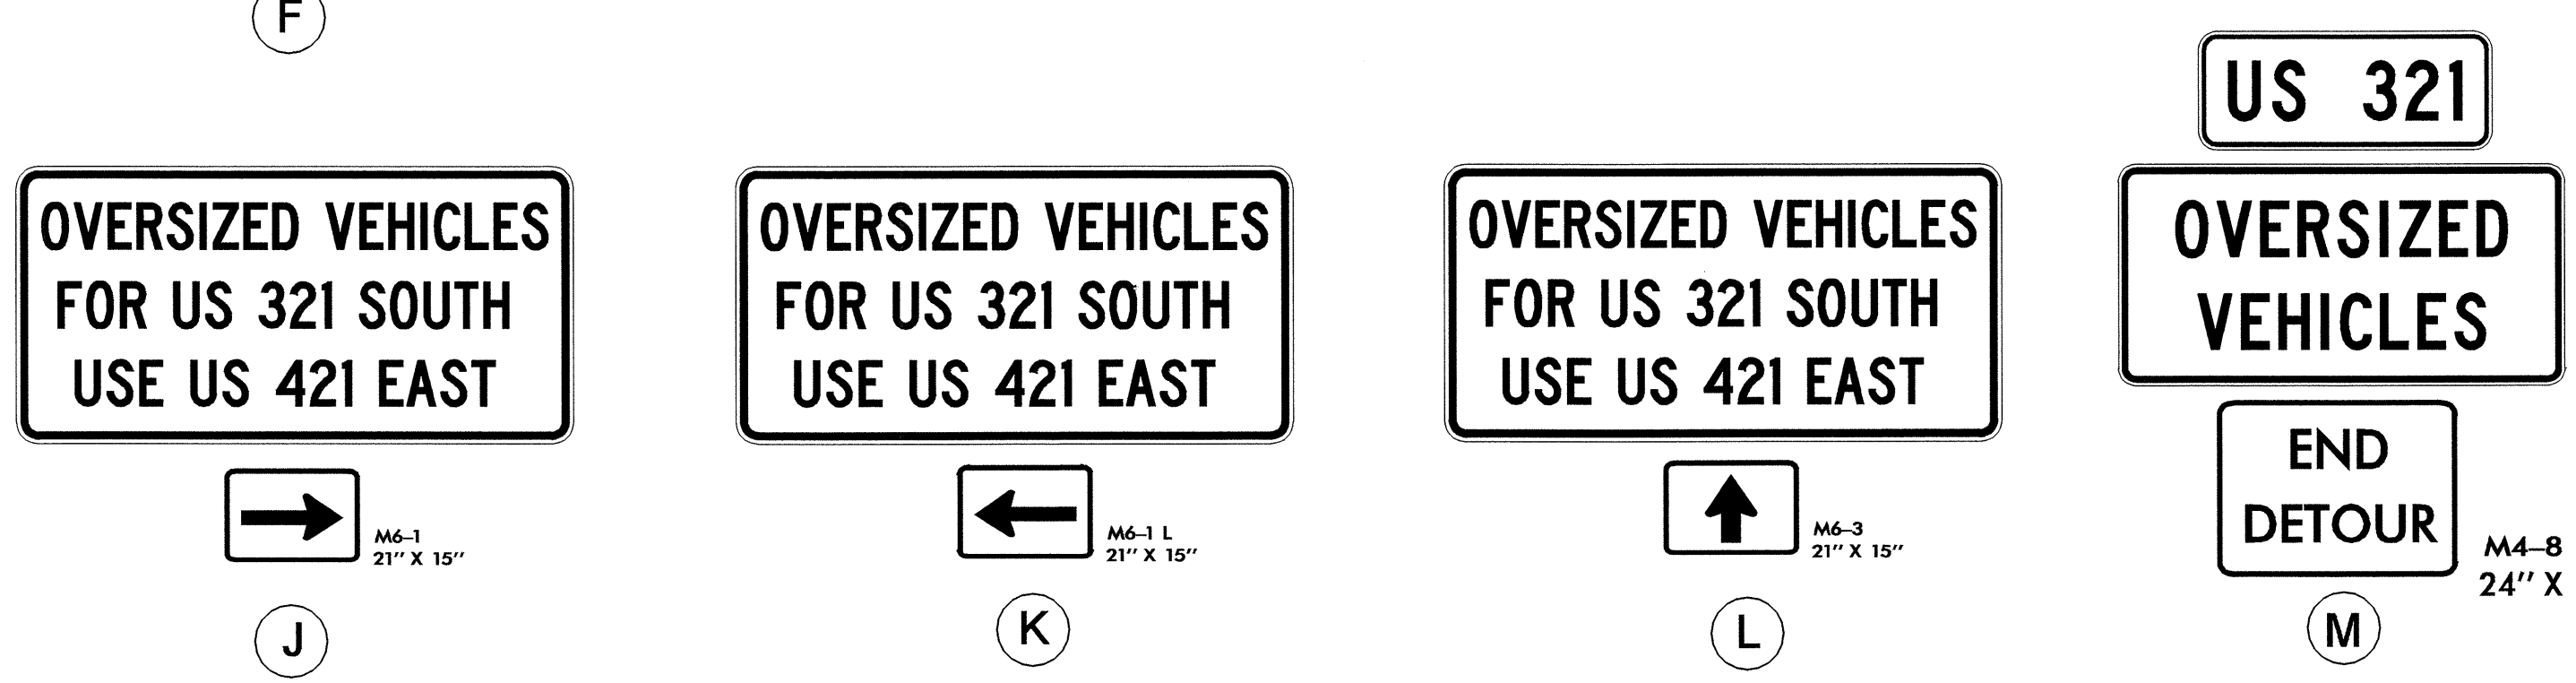
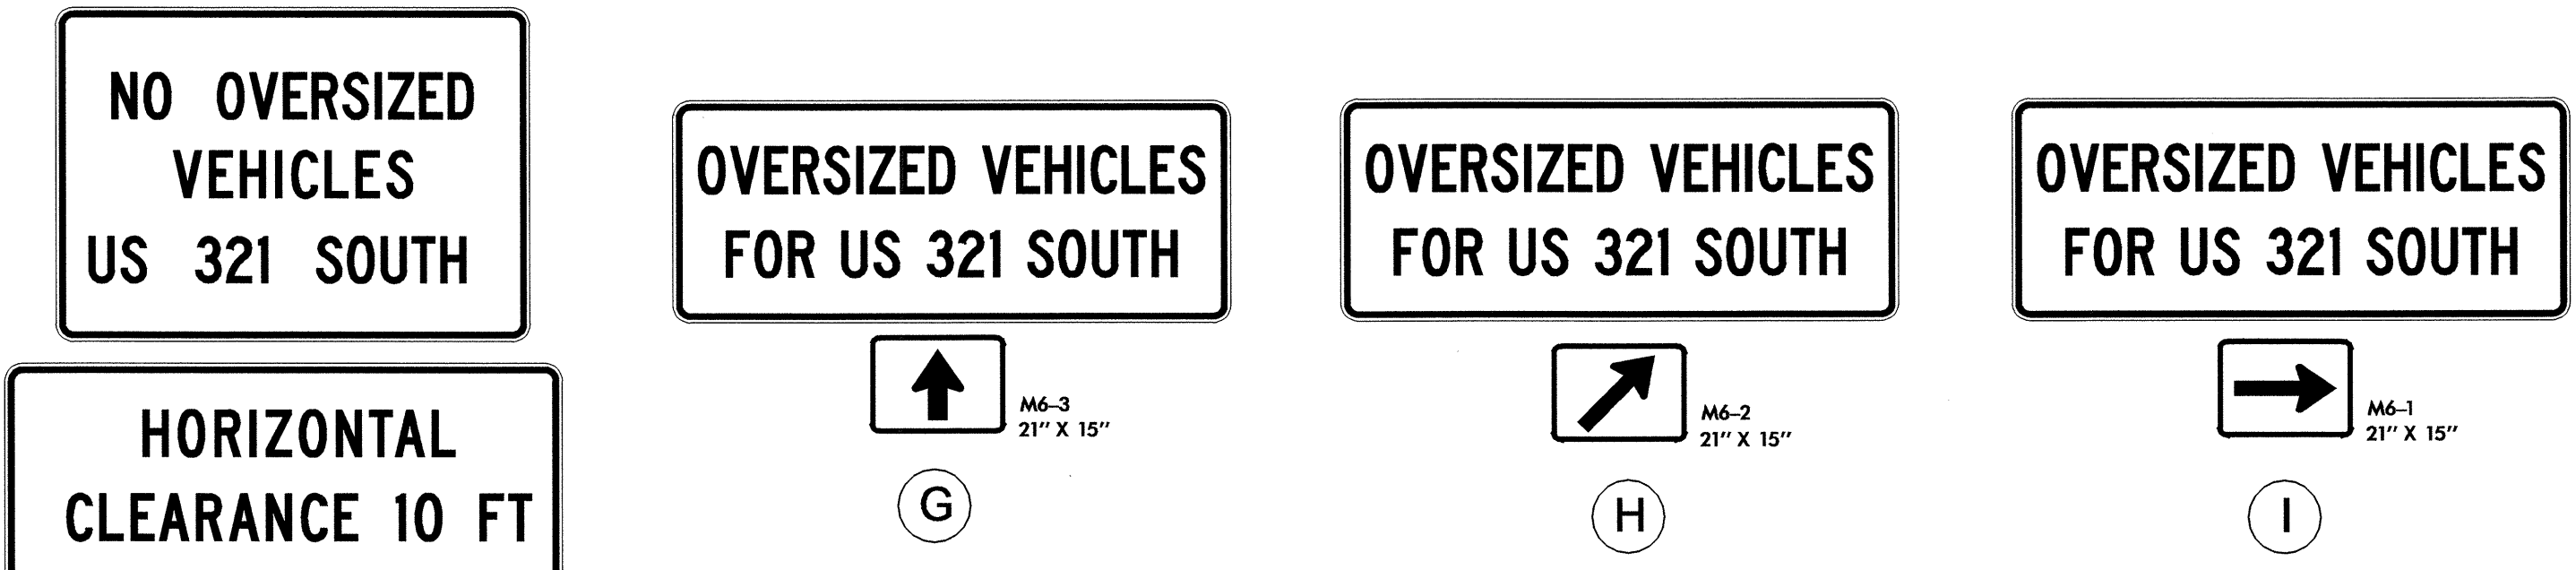
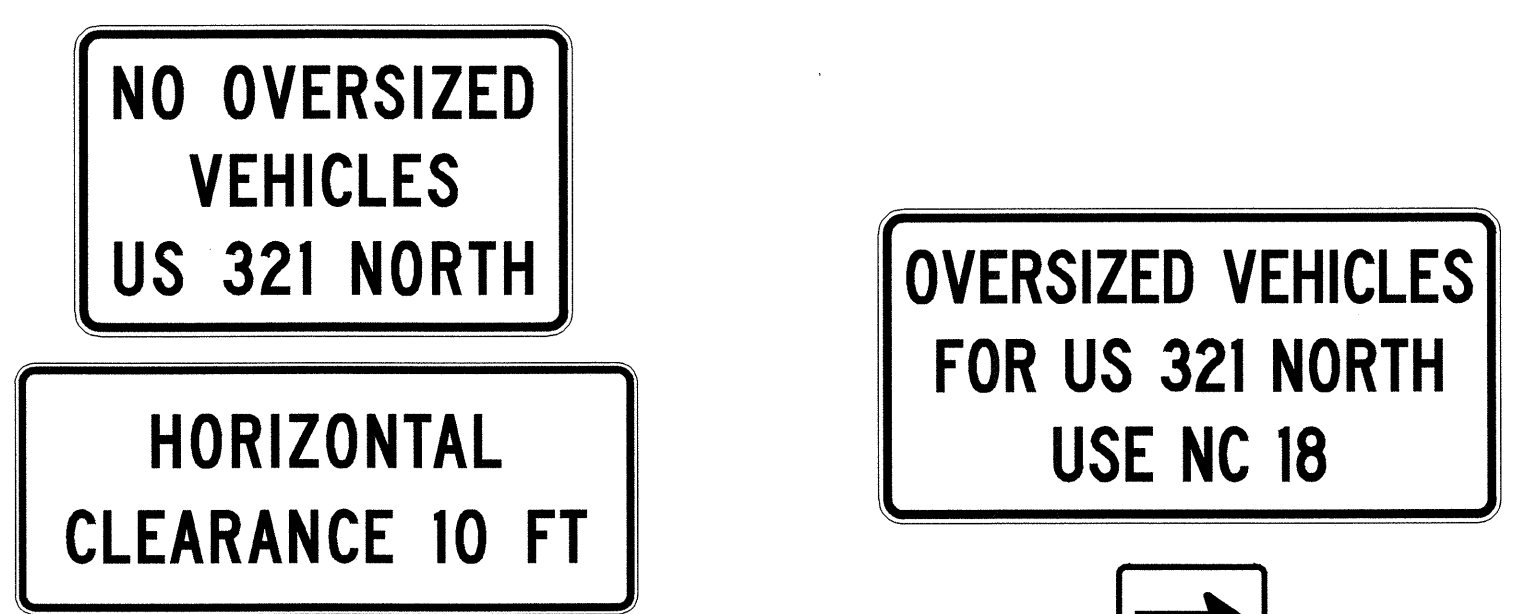


OVERSIZE DETOUR SIGNS

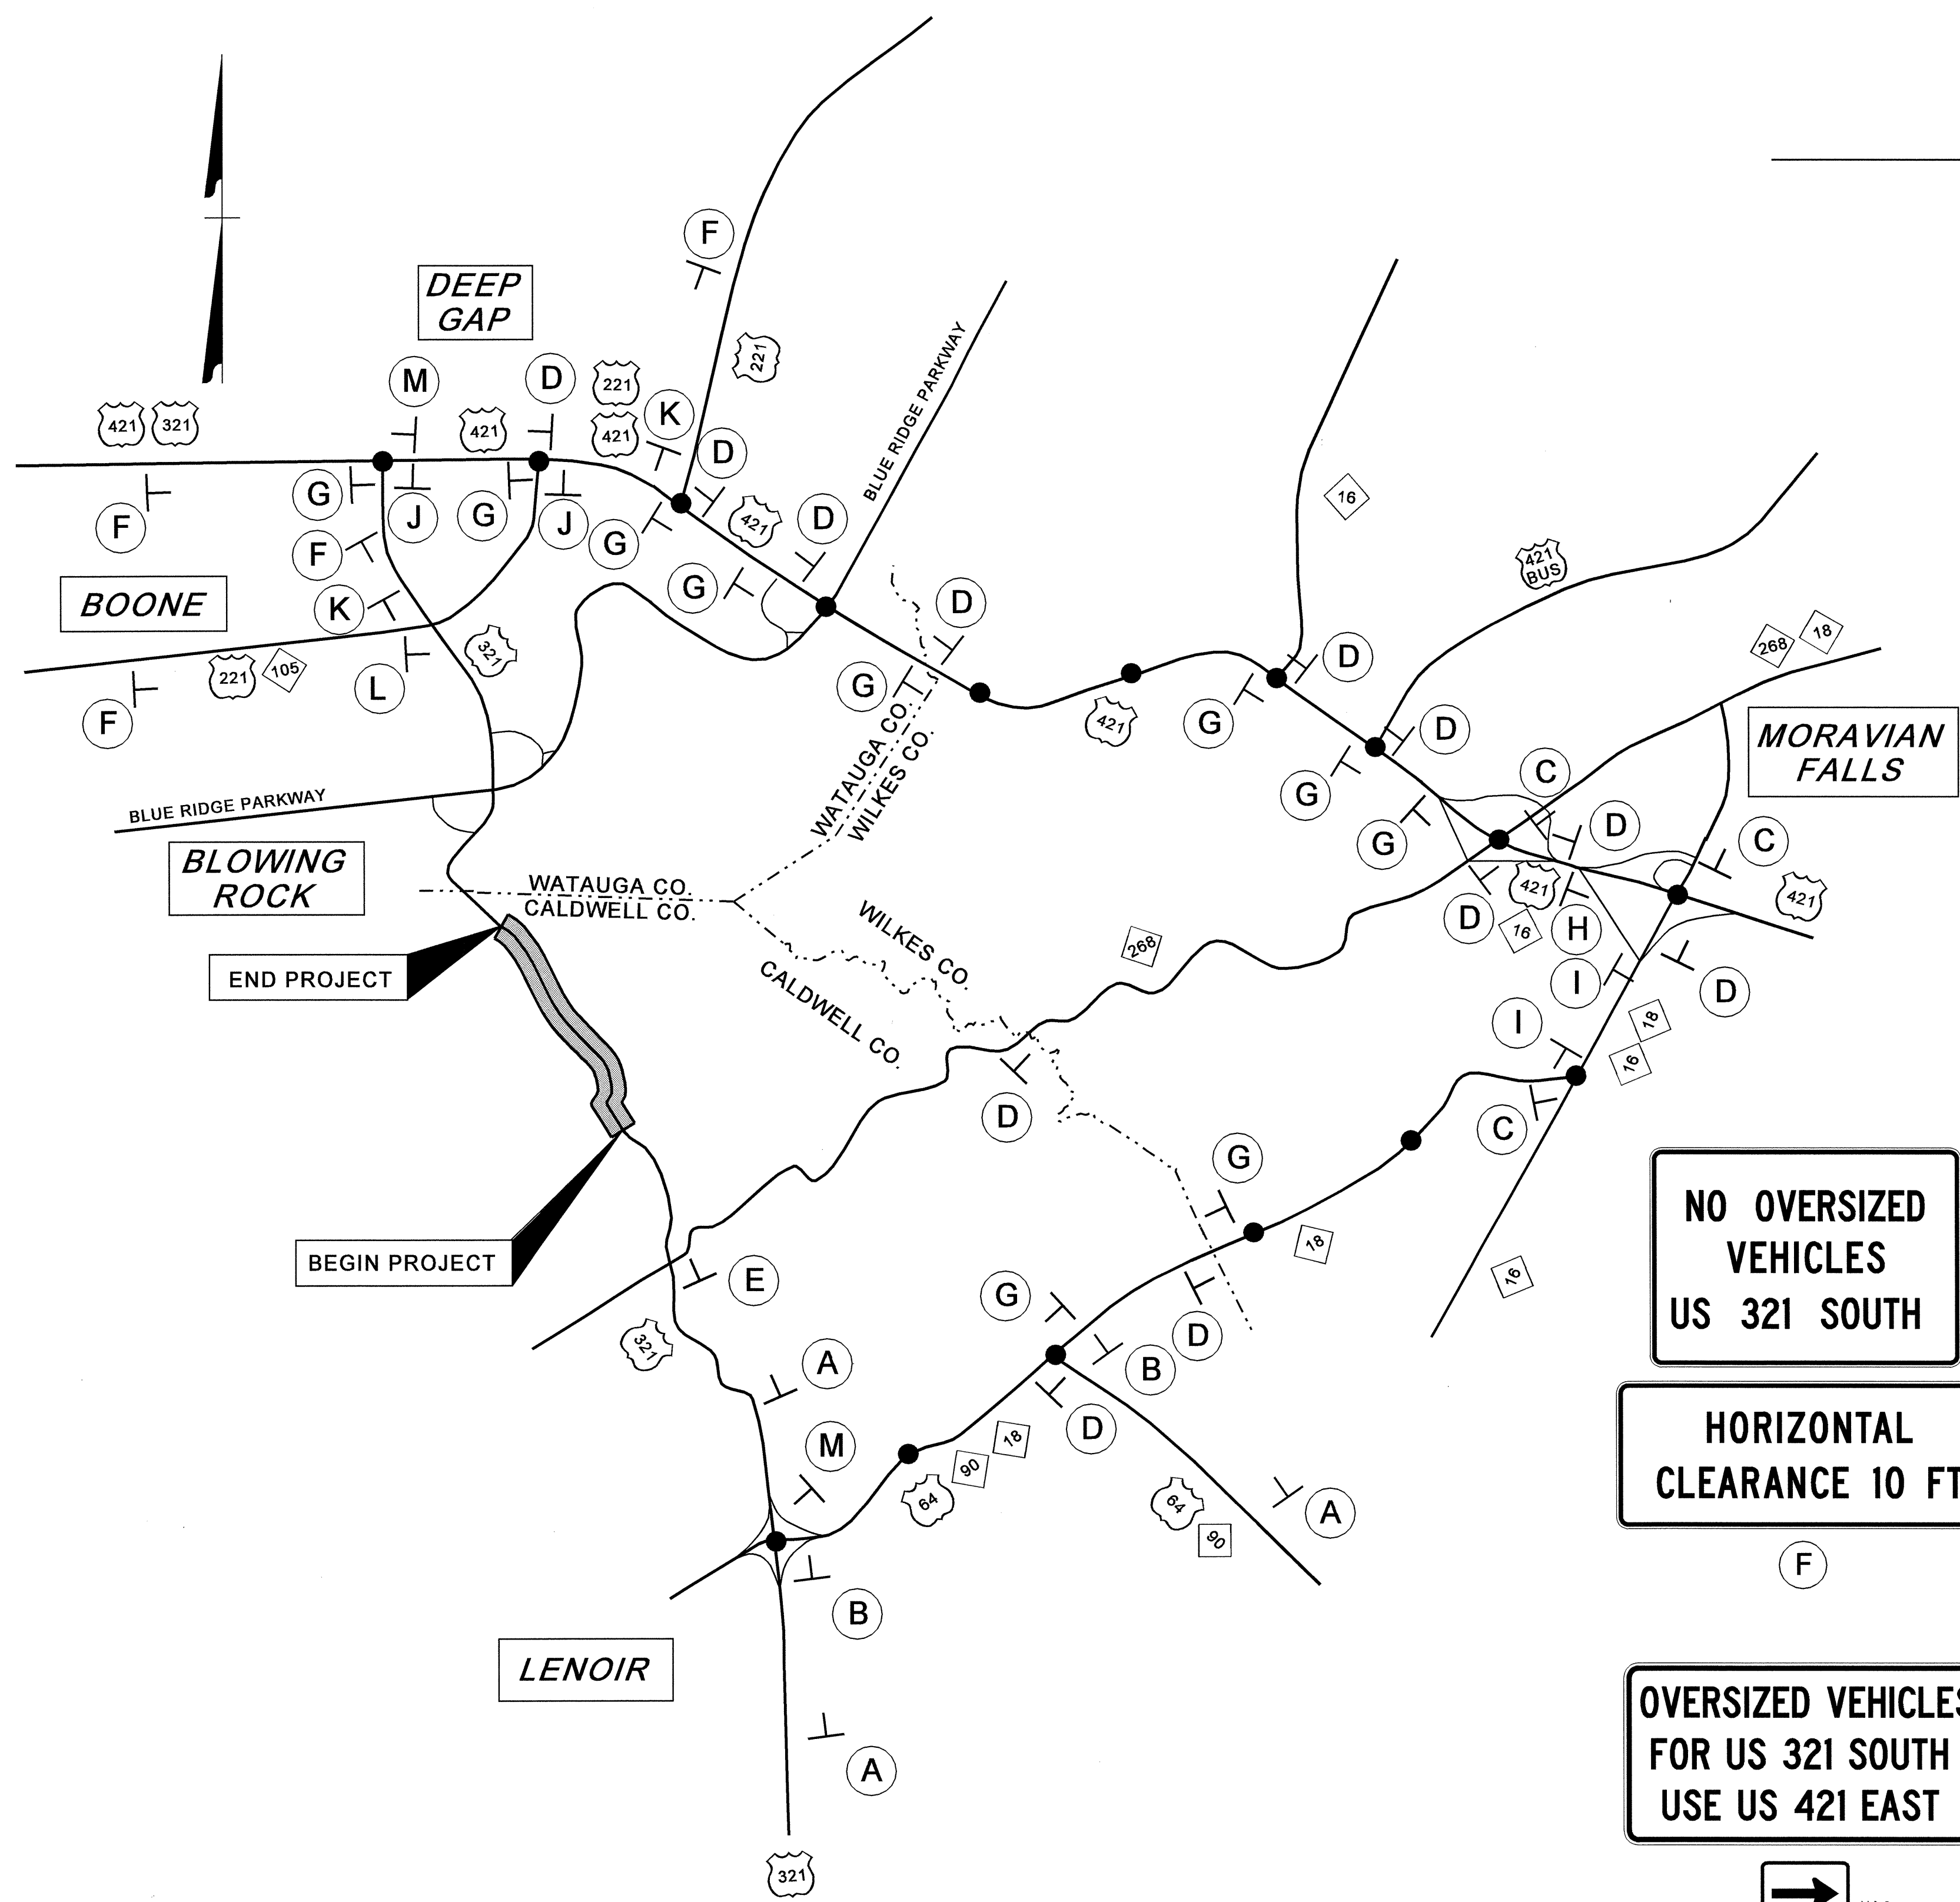

LEGEND

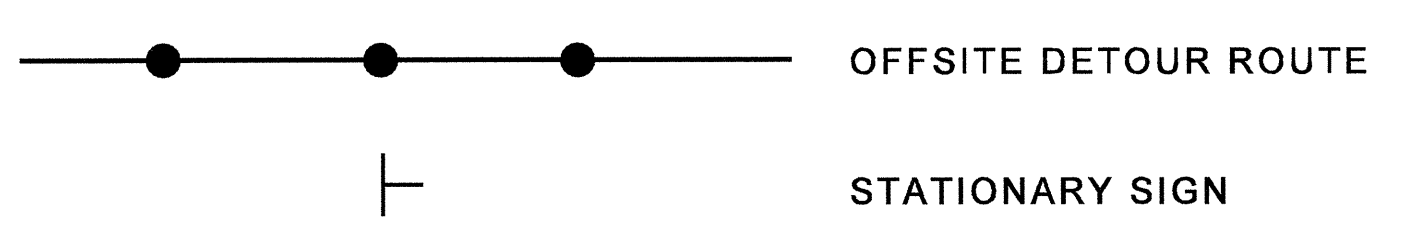

NOTES

ALL DETOUR SIGNS ARE BLACK ON ORANGE

THE RESIDENT ENGINEER MUST CONTACT MS. TAMMY DENNING OF THE NCDOT - OVERSIZE/OVERWEIGHT PERMIT UNIT AT 919-733-4740 30 DAYS PRIOR TO PUTTING THE OVERSIZE VEHICLE DETOUR INTO EFFECT AND AS SOON AS POSSIBLE ONCE THE DETOUR IS NO LONGER REQUIRED.

APPROVED:	DATE:	<b>OVERSIZE VEHICLE DETOUR</b>	
SCALE:	NONE		REVISIONS
DATE:	JULY 04		
DWG. BY:	DAP		
DESIGN BY:	DAP		
REVIEWED BY:	JWW		CADD FILE

02-SEP-2004 11:49  
 R:\TCP\R2237B\TC\_top\_detour.dgn  
 gdpdker AT TELC206426