
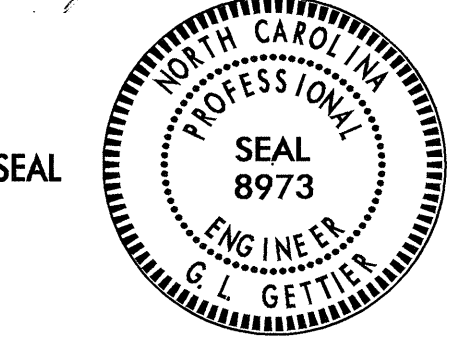



PHASE I

- STEP 1 - INSTALL ALL STATIONARY WORK ZONE ADVANCE WARNING SIGNS ACCORDING TO SHEET TCP- 7, PRIOR TO ANY CONSTRUCTION ACTIVITY.
- STEP 2 - USING ROADWAY STANDARD DRAWING NO. 1101.02, SHEET 1 OF 7:
- CONSTRUCT AS MUCH AS POSSIBLE, PROPOSED SR 1314 (-L-), INCLUDING THE STRUCTURE FROM STA. 15+00 +/- -L- TO STA. 18+00 +/- -L-, UP TO, BUT NOT INCLUDING THE FINAL LAYER OF SURFACE COURSE (SEE CONSTRUCTION PLANS AND ABOVE).
 - CONSTRUCT AS MUCH AS POSSIBLE, PROPOSED SR 1314 (-L-) UTILIZING TEMPORARY 2:1 SLOPES (AS SHOWN ON CROSS SECTIONS) FROM STA. 10+00 +/- -L- TO STA. 15+00 +/- -L- AND FROM STA. 18+00 +/- -L- TO STA. 23+00 +/- -L-, UP TO, BUT NOT INCLUDING THE FINAL LAYER OF SURFACE COURSE. (SEE CONSTRUCTION PLANS AND ABOVE).

20-JUN-2005 07:40
 \\ets-cctf501\p3857\top\top3857_tc_top3.dgn
 mwashovc AT TCU224168

APPROVED:  DATE: 6/6/05	PHASE I						
	SCALE: NONE						
	DATE: 06-05						
	DWG. BY: MW						
	DESIGN BY: MW						
REVIEWED BY: JWG	<table border="1"> <thead> <tr> <th colspan="2">REVISIONS</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> </tr> <tr> <td> </td> <td> </td> </tr> </tbody> </table>	REVISIONS					
REVISIONS							
<table border="1"> <tr> <td>CADD FILE</td> <td> </td> </tr> </table>		CADD FILE					
CADD FILE							