
PLANTING DETAILS

SEEDLING / LINER BAREROOT PLANTING DETAIL


HEALING IN

1. Locate a healing-in site in a shady, well protected area.


2. Excavate a flat bottom trench 12 inches deep and provide drainage.

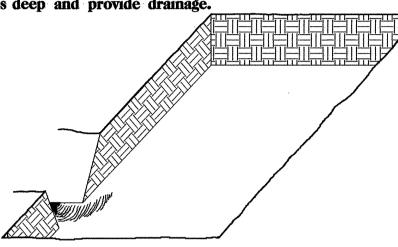


3. Backfill the trench with 2 inches well rotted sawdust. Place a 2 inch layer of well rotted sawdust at a sloping angle at one end of the trench.

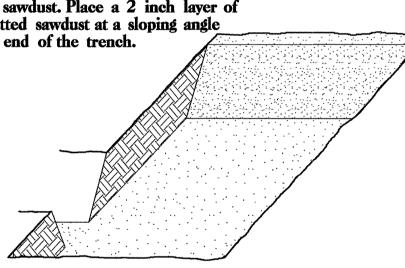


4. Place a single layer of plants against the sloping end so that the root collar is at ground level.

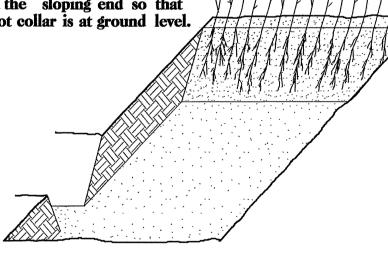

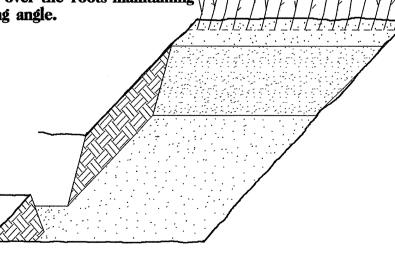


6. Repeat layers of plants and sawdust as necessary and water thoroughly.


DIBBLE PLANTING METHOD USING THE KBC PLANTING BAR

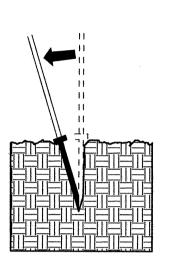


1. Insert planting bar as shown and pull handle

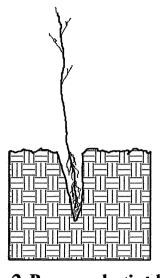


2. Remove planting bar and place seedling at correct depth.

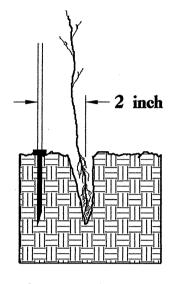


3. Insert planting bar 2 inches toward planter

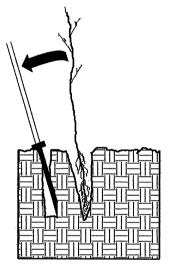

4. Pull handle of bar toward planter, firming soil at bottom.

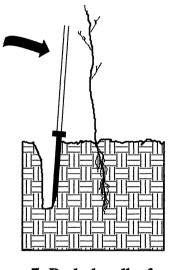


5. Push handle forward firming soil at top.

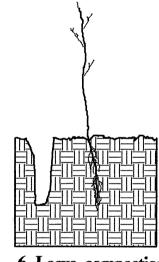


6. Leave compaction hole open. Water thoroughly.


PLANTING NOTES:

PLANTING BAG
During planting, seedlings
shall be kept in a moist
canvas bag or similar container to prevent the root systems from drying.

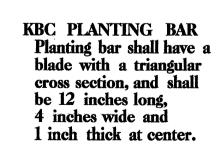

ROOT PRUNING
All seedlings shall be root
pruned, if necessary, so that
no roots extend more than
10 inches below the

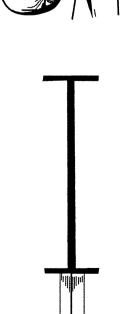

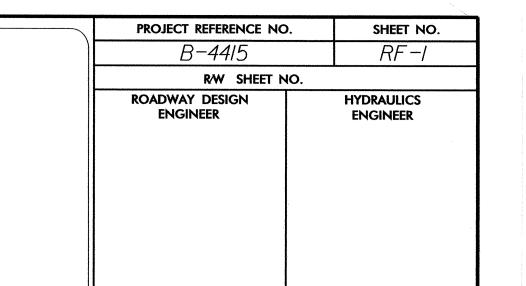

REFORESTATION

☐ TREE REFORESTATION SHALL BE PLANTED 6 FT. TO 10 FT. ON CENTER, RANDOM SPACING, AVERAGING 8 FT. ON CENTER, APPROXIMATELY 680 PLANTS PER ACRE.

REFORESTATION

MIXTURE, TYPE, SIZE, AND FURNISH SHALL CONFORM TO THE FOLLOWING:

25% TAXODIUM DISTICHUM 12 in - 18 in BR 12 in - 18 in BR 25% NYSSA AQUATICA **SWAMP TUPELO** 25% QUERCUS PHELLOS WILLOW OAK 12 in - 18 in BR 25% QUERCUS MICHAUXII SWAMP CHESTNUT OAK 12 in - 18 in BR

REFORESTATION DETAIL SHEET

N.C.D.O.T. - ROADSIDE ENVIRONMENTAL UNIT