


PHASING NOTES (CONTINUED)

PROJ. REFERENCE NO. R-3622B	SHEET NO. TMP-3A
 STV / Ralph Whitehead Associates, Inc. 900 West Trade St., Ste. 715 Charlotte, NC 28202 NC License Number F-0991	

PHASE II (CONT.)

PHASE III

STEP 3

USING RSD 1101.02 SHEET 1 OF 15 AND FLAGGERS AS NEEDED, PERFORM THE FOLLOWING:

- A) CONSTRUCT PROPOSED EXPRESSWAY GUTTER RIGHT OF -L- FROM STA. 14+99 TO 20+50 AS SHOWN ON TMP-10.
- B) PERFORM PAVEMENT REMOVAL AND OR BREAKING RIGHT OF -L- FROM STA. 28+04 TO STA. 39+77 AS SHOWN ON TMP-10 AND LEFT OF -L- FROM STA. 50+71 TO 61+08 AS SHOWN ON TMP-11.
- C) PLACE BARRICADES AS SHOWN ON TMP-12 AND CONSTRUCT ROADWAY FROM -L- STA. 65+08 TO 71+73.
- D) INSTALL TEMPORARY PCB AND CRASH CUSHION FOR THE FOLLOWING STATION RANGES AS SHOWN ON TMP-12 & TMP-13:
 - L- STA. 73+25 TO STA. 80+80
 - L- STA. 81+56 TO STA. 84+00
- E) CONSTRUCT PROPOSED EXPRESSWAY GUTTER AND PAVEMENT BUILDUP FROM -L- STA. 90+00 TO STA. 100+00 AS SHOWN ON TMP-14.
- F) CONSTRUCT PROPOSED EXPRESSWAY GUTTER FROM -L- STA. 114+50 TO STA. 126+25 AS SHOWN ON TMP-15.
- G) CONSTRUCT PROPOSED -DR7- STA. 10+50 TO STA. 12+75

STEP 4

AWAY FROM TRAFFIC PERFORM THE FOLLOWING:

- A) INSTALL TEMPORARY SHORING LOCATIONS 2, 3 & 4 AS SHOWN ON TMP-12 & TMP-13.
- B) CONSTRUCT PROPOSED ROADWAY FROM -L- STA. 73+23 TO STA. 80+50 AND STA. 82+00 TO STA. 87+49.
- C) CONSTRUCT TEMPORARY TIE FROM -Y1- TO TEMPORARY PAVEMENT AT -L- STA. 70+50 AND INSTALL TEMPORARY MARKINGS AS SHOWN ON TMP-12.

STEP 5

USING RSD 1101.02 SHEET 1 OF 15 AND FLAGGERS AS NEEDED PERFORM THE FOLLOWING AS SHOWN ON TMP-12:

- A) SHIFT TRAFFIC ON -Y1- ONTO TEMPORARY TIE IN.
- B) REMOVE EXISTING PAVEMENT AS SHOWN ON TMP-12 ALONG -Y1- RADFORD RD.

STEP 6

USING RSD 1101.02 SHEET 1 OF 15 AND FLAGGERS AS NEEDED PERFORM THE FOLLOWING AS SHOWN ON TMP-16:

- A) SHIFT TRAFFIC ON -Y1-TEMP ONTO TEMPORARY Y1.
- B) CONSTRUCT REMAINDER OF -L- FROM STA. 71+73 TO STA. 73+23.
- C) REMOVE WATER BARRIER AND CONSTRUCT TEMPORARY DRIVEWAY AT -L- STA. 78+40.
- D) SHIFT TRAFFIC ON DR5TEMP ONTO DR5.
- C) INSTALL TEMPORARY SHORING, PLACE BARRICADES AND CONSTRUCT REMAINDER OF -L- STA. 80+50 TO 82+00.

NOTE: WORK IN A CONTINUOUS MANNER TO COMPLETE STEPS 1 & 2.

STEP 1

AWAY FROM TRAFFIC PLACE TEMPORARY PAVEMENT MARKINGS AS SHOWN ON TMP-17. PLACE TEMPORARY PAVEMENT MARKERS ACCORDING TO ROADWAY STANDARD DRAWING 1250.01.

STEP 2

USING RSD 1101.02 SHEET 1 OF 15 AND FLAGGERS AND WEDGING AS NEEDED PERFORM THE FOLLOWING AS SHOWN ON TMP-17:

- A) INSTALL PCB FROM -L- STA. 73+14 TO STA. 77+98 AND FROM STA. 78+79 TO 84+00 ON NEWLY CONSTRUCTED -L- AND CRASH CUSHIONS. PCB TO BE REMOVED AS SOON AS NO OBSTACLE OR FILL WARRANTS ARE PRESENT.
- B) REMOVE BARRICADES AND SHIFT TRAFFIC ONTO NEWLY CONSTRUCTED -L- . PLACE BARRICADES AS SHOWN TO REDIRECT TRAFFIC AWAY FROM TEMPORARY ALIGNMENTS AS SHOWN ON TMP-17.
- C) CONSTRUCT REMAINDER OF ROADWAY SECTION RIGHT OF -L- FROM STA. 70+25 TO STA. 87+72. TEMPORARY SHORING LOCATIONS 2, 3 & 4 TO BE REMOVED.
- D) COMPLETE TIE OF -Y2- TO NEWLY CONSTRUCTED -L- FROM STA. 77+98 TO STA. 78+79.
- E) COMPLETE TIE OF -Y3- TO NEWLY CONSTRUCTED -L- FROM STA. 84+00 TO STA. 84+76.

STEP 3

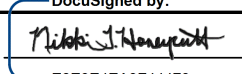


USING RSD 1101.02 SHEET 1 OF 15 AND FLAGGERS AS NEEDED, PLACE FINAL LAYER OF SURFACE COURSE AND FINAL PAVEMENT MARKINGS ON PROPOSED ALIGNMENTS (SEE FINAL PAVEMENT MARKING PLANS).

STEP 4

REMOVE ALL TEMPORARY TRAFFIC CONTROL DEVICES.

R:\TrafficControl\NCPAR3622B_TC_TMP_03A.dgn

4/9/2015

APPROVED:  DATE: 4/10/2015			TEMPORARY TRAFFIC CONTROL PHASING
---	---	---	--