



#### NOTES:


- 1) DETAIL DOES NOT APPLY TO OGAFC AND ULTRA-THIN BONDED WEARING COURSE.
- 2) BACKFILL SHOULDER WITH APPROVED MATERIAL.
  3) THE SHOULDER WEDGE DEVICE MAY BE DISENGAGED AT PAVED DRIVEWAYS, SIDE STREETS, HIGH SHOULDERS, AND OTHER LOCATIONS NOT FEASIBLE TO CONSTRUCT AS APPROVED BY THE ENGINEER.

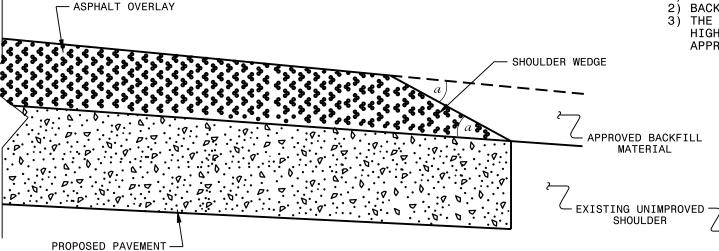

### SHOULDER WEDGE DETAIL

(Resurfacing Projects w/ Widening or with Existing Paved Shoulder having no dropoffs)

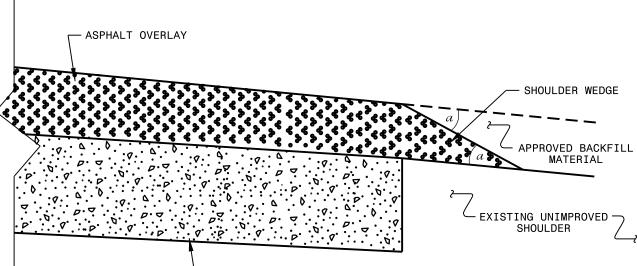

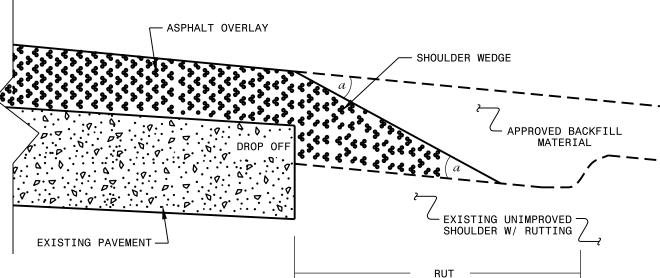

### SHOULDER WEDGE DETAIL

(Resurfacing Projects w/ NO Widening)

EXISTING PAVEMENT —

- SHOULDER WEDGE ANGLE =  $30^{\circ}$ 

# CONTRACT STANDARDS AND DEVELOPMENT UNIT Office 919-707-6950 FAX 919-250-4119

### SHOULDER WEDGE **DETAILS**

ORIGINAL BY:	T.SPELL DAT	E: 7 19 11
MODIFIED BY:	DAT	E: 2/2/16
CHECKED BY:_	DAT	E:
FILE SPEC	s:usr/details/stand/shoulderwedgedetail.dgn	

## SHOULDER WEDGE DETAIL

(Resurfacing Adjacent to Rutted Shoulder)