


- NOTES
1. REFER TO THE "TEMPORARY SHORING" PROJECT SPECIAL PROVISION FOR INFORMATION ABOUT TEMPORARY SHORING.
 2. DO NOT PLACE BARRIER DIRECTLY ON ANY SURFACE OTHER THAN ASPHALT OR CONCRETE.
 3. SET BARRIER NEXT TO AND UP AGAINST THE TRAFFIC SIDE OF THE TEMPORARY SHORING.
 4. INSTALL THE WATER FILLED BARRIER PER THE MANUFACTURER'S RECOMMENDATIONS.

APPROVED: *David W. Bissette*
DATE: 4/29/2021

SEAL

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

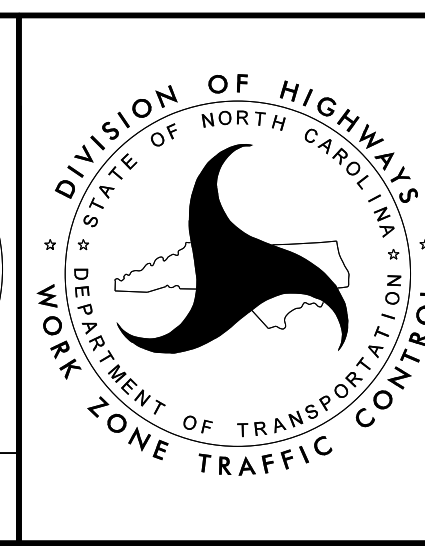

TEMPORARY TRAFFIC CONTROL
TEMPORARY SHORING DETAIL
-WALL1- & -WALL2-

4/28/2021 \\USFH00HV\FPS01\Proj\396782_Calyx_R-5014\TrafficControl\TCP\R-5014_TC_TMP_04.dgn User:HB0Y89356