


NOTES:

- 1. PLACE SKINNY DRUMS ALONG CENTERLINE OF ROAD.
- 2. USE THIS DRAWING IN CONJUNCTION WITH RSD 1101.02 SHEET 1 OF 14.
- 3. CONTRACTOR MUST MAINTAIN DRIVEWAY ACCESS THROUGHOUT THE LIFE OF THE PROJECT.

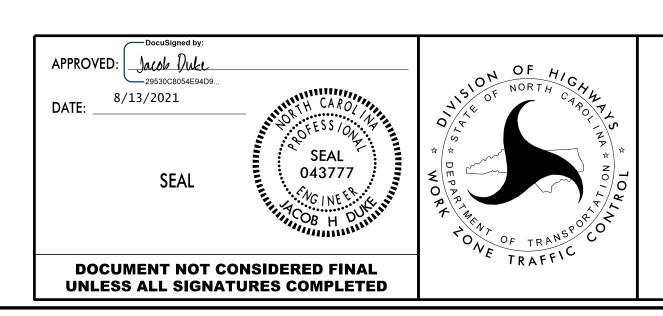

Y8 SR 1207 NB LANE CLOSURE DETAILS

PROJ. REFERENCE NO.

SHEET NO.