


BEGIN -XOVR1- CONSTRUCTION
-XOVR1- STA 11+20.39=
-L- STA 18+78.61

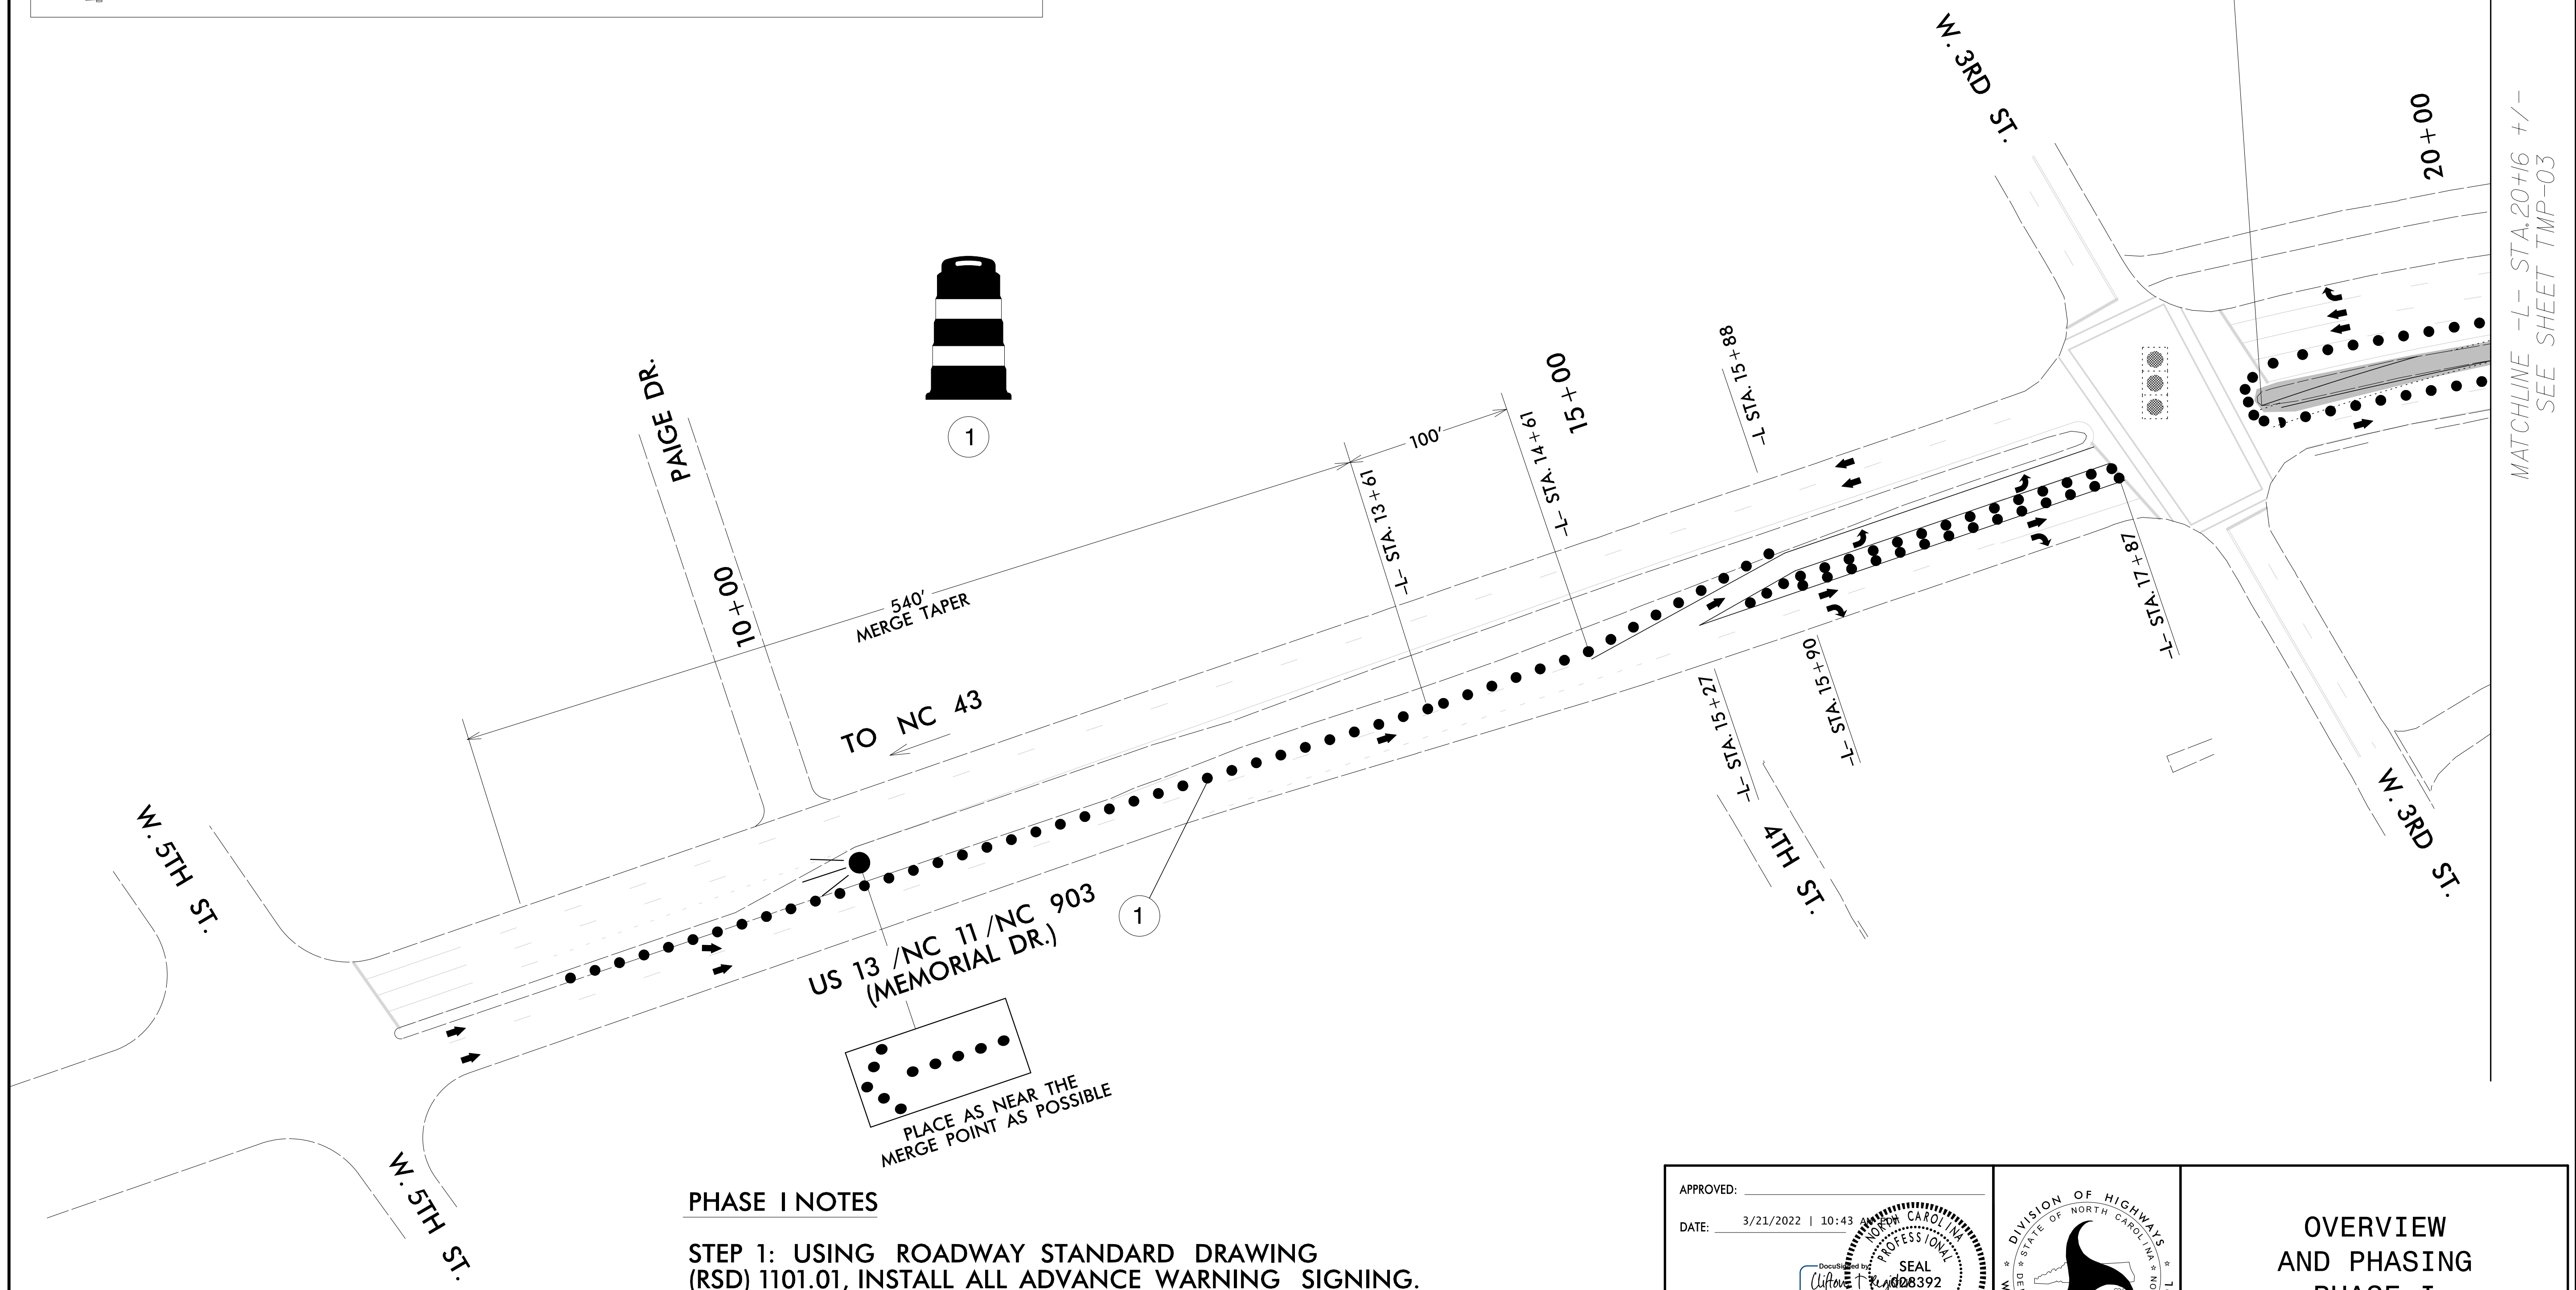


MATCHLINE -L- STA. 20+16 +/-
SEE SHEET TMP-03

PHASE I NOTES

- STEP 1: USING ROADWAY STANDARD DRAWING (RSD) 1101.01, INSTALL ALL ADVANCE WARNING SIGNING.
- STEP 2: USING RSD 1101.02 SHEET 3 OF 14, CONSTRUCT THE MEDIAN PORTIONS OF -XOVR1- AND -XOVR2-

APPROVED: _____
DATE: 3/21/2022 | 10:43

DOCUMENT NOT CONSIDERED FINAL
UNLESS ALL SIGNATURES COMPLETED

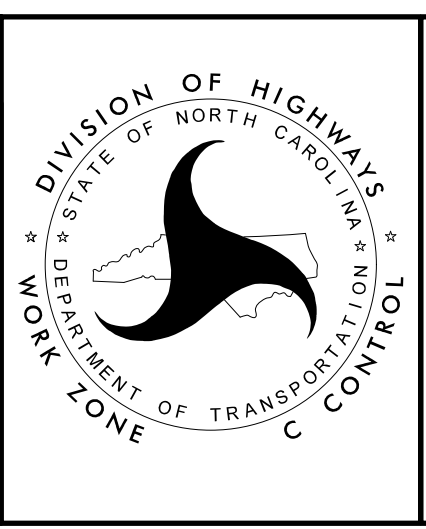

**OVERVIEW
AND PHASING
PHASE I
DETAIL**