


**INSET 'A'**

NOTE: Place top (first) reinforcement layer 6" below top of wall regardless of vertical spacing for underlying reinforcement layers. As shown in insets above, it is not necessary to wrap the top layer of geotextile reinforcement at the wall face.

NOTE: Use temporary geotextile wall to construct approach embankments to finished grade before observing waiting periods, driving bridge foundation piles, or constructing end bent caps.

**TEMPORARY GEOTEXTILE WALL DETAILS**

| GEOTEXTILE REINFORCEMENT (TYPE 5 GEOTEXTILE) |                      |   |
|--|----------------------|---|
| WALL HEIGHT H (ft)                           | REINF. LENGTH L (ft) | WIDE WIDTH TENSILE STRENGTH @ ULTIMATE (MD) (lb/ft) |
| < 8  | 8                    | 5000  |
| 8 TO 12                                      | = H                  |   |

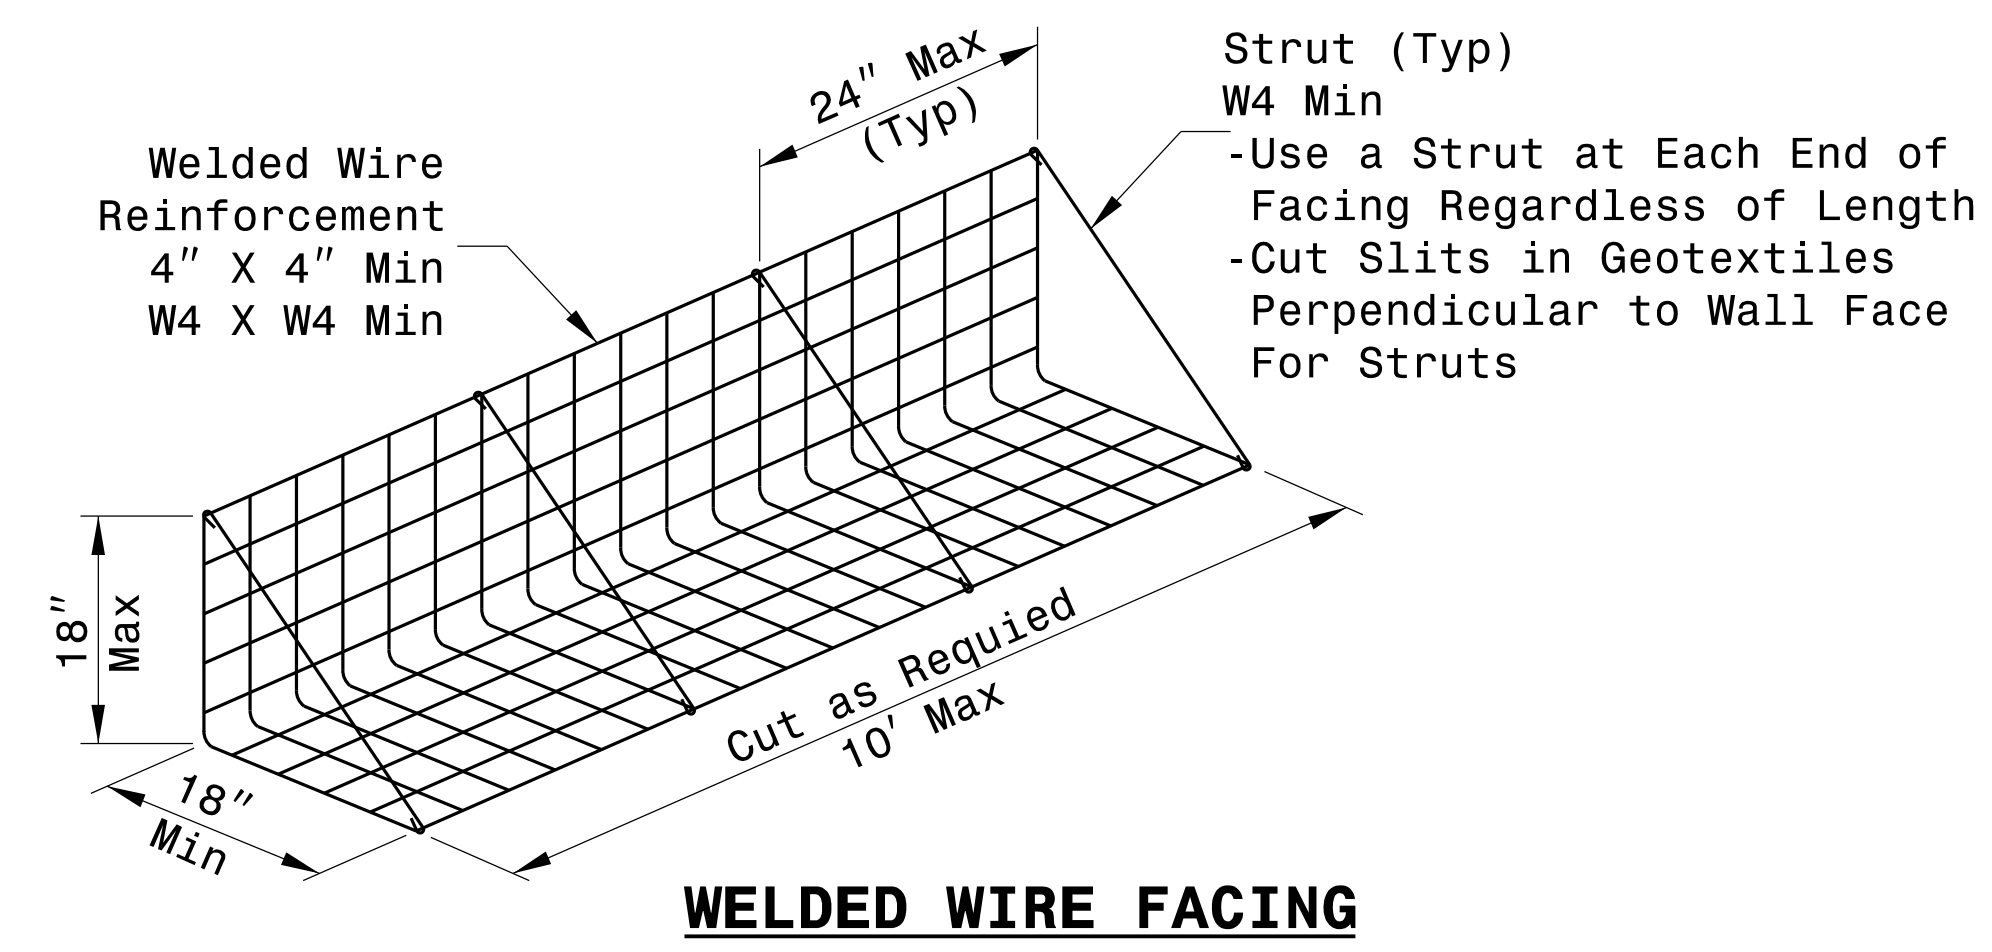

**WELDED WIRE FACING**