

PROJECT PHASING NOTES

PROJ. REFERENCE NO.	SHEET NO.
BR-0044	TMP-3

PHASE I

STEP 1: INSTALL WORK ZONE ADVANCE WARNING SIGNS ON ALL ROADWAYS AS SHOWN ON ROADWAY STANDARD DRAWING NO. 1101.01.

STEP 2: USING RSD 1101.02, SHEET 1 OF 14 AND FLAGGERS AS NEEDED, REMOVE EXISTING PAVEMENT MARKINGS AND INSTALL TEMPORARY PAVEMENT MARKINGS AND MARKERS ON -L- FROM STA 10+75+/- TO STA 33+30+/- AND SHIFT TRAFFIC IN THE PATTERN SHOWN ON TMP-4.

STEP 3: USING RSD 1101.02, SHEET 1 OF 14 AS NEEDED, INSTALL PORTABLE CONCRETE BARRIER ON -L- FROM STA 15+40+/- TO STA 28+65+/-.

STEP 4: BEGIN CONSTRUCTION OF THE FOLLOWING PROPOSED BRIDGE AND ROADWAY SECTIONS UP TO, BUT NOT INCLUDING, THE FINAL LAYER OF SURFACE COURSE:

-L- STA 10+75+/- TO -L- STA 33+30+/-

USING RSD 1101.02, SHEET 1 OF 14, CONDUCT THE FOLLOWING OPERATIONS IN A CONTINUOUS MANNER:

- A - REMOVE EXISTING GUARDRAIL ON THE LEFT SIDE OF -L- (NC14/87).
- B - CONSTRUCT PROPOSED PAVEMENT UP TO EDGE AND ELEVATION OF EXISTING PAVEMENT (SEE TMP-4, TMP-5 AND ROADWAY PLANS).
- C - INSTALL PROPOSED GUARDRAIL ON THE LEFT SIDE OF NC14/87.
- D - INSTALL TEMPORARY SHORING LOCATIONS 1 AND 2 AS SHOWN ON TMP-4.
- E - INSTALL PROPOSED GUARDRAIL AND TEMPORARY GUARDRAIL ANCHOR UNITS ON THE RIGHT SIDE OF -L- FROM STA 16+04+/- RT TO STA 19+29+/- RT AND FROM STA 24+96+/- RT TO STA 27+96+/- RT.

PHASE II

STEP 1: USING RSD 1101.02, SHEET 1 OF 14, PERFORM THE FOLLOWING, IN A CONTINUOUS MANNER AS SHOWN ON SHEETS TMP-5

- A - COMPLETE CONSTRUCTION OF THE PROPOSED ROADWAY SECTION, WITH TEMPORARY SLOPES WHERE PROPOSED UP TO, BUT NOT INCLUDING, THE FINAL SURFACE LAYER.
- B - PLACE TEMPORARY PAVEMENT MARKINGS AND PAVEMENT MARKERS IN THE FINAL PATTERN AND REMOVE CONFLICTING MARKINGS.
- C - PLACE TRAFFIC CONTROL DEVICES AS SHOWN AND SHIFT TRAFFIC TO THE FINAL PATTERN.

STEP 2: USING RSD 1101.02, SHEET 1 OF 14 AS NEEDED, COMPLETE THE FOLLOWING:

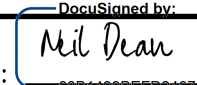
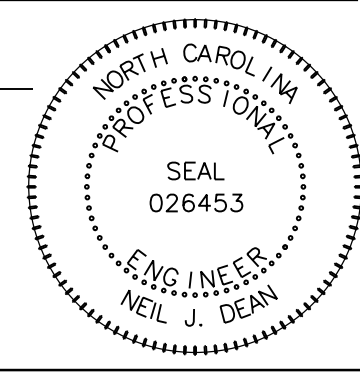

- A - REMOVE THE EXISTING STRUCTURE AND TEMPORARY SHORING LOCATIONS 1 AND 2.
- B - REMOVE EXISTING PAVEMENT AS INDICATED IN THE ROADWAY PLANS.
- C - REMOVE EXISTING GUARDRAIL ON THE RIGHT SIDE OF NC14/87.
- D - COMPLETE ALL PROPOSED ROADWAY CONSTRUCTION UP TO BUT NOT INCLUDING THE FINAL SURFACE LAYER.
- E - INSTALL PROPOSED GUARDRAIL ON THE RIGHT SIDE OF NC14/87.
- F - REMOVE TEMPORARY GUARDRAIL ANCHOR UNITS ON THE RIGHT SIDE OF -L- AND STA 27+96+/- TO STA 30+69+/-.

STEP 3: USING RSD 1101.02, SHEET 1 OF 14, COMPLETE THE FOLLOWING:

- A - PLACE THE FINAL LAYER OF SURFACE COURSE.
- B - PLACE THE FINAL PAVEMENT MARKINGS AND MARKERS AS SHOWN IN THE PAVEMENT MARKING PLANS.

STEP 4: REMOVE ALL TRAFFIC CONTROL DEVICES.

4/6/2022
 R:\Traffic\TrafficControl\TCP\BR0044\TC_TMP-3.dgn
 joanna.mccormack

APPROVED:  DATE: 4/8/2022 SEAL 		<h1>PHASING</h1>
DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED		