

**PHASE I NOTES**

STEP 1: USING ROADWAY STANDARD DRAWING (RSD) 1101.01, INSTALL ALL ADVANCE WARNING SIGNING.


STEP 2: USING RSD 1101.02 SHEET 3 OF 14, CONSTRUCT THE MEDIAN PORTIONS OF -XOVR1- AND -XOVR2-

APPROVED: \_\_\_\_\_

DATE: 3/21/2022 | 10:43 AM

Seal of a Professional Engineer, State of North Carolina, License No. 1024092, signed by William T. Register.

**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

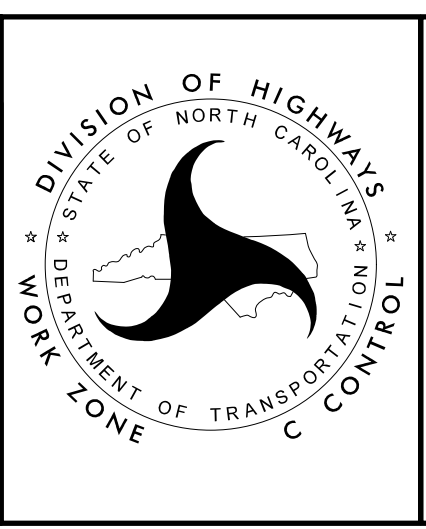

**OVERVIEW AND PHASING PHASE I DETAIL**