
DRAWING 2

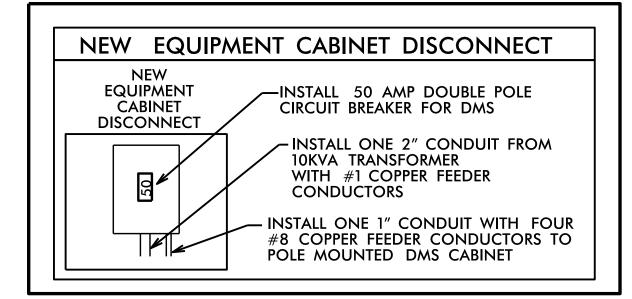

<u>NOTES</u>

- 1. OBTAIN FINAL DMS LOCATION APPROVAL FROM THE INCIDENT MANAGEMENT ENGINEER (336–315–7080) BEFORE INITIATING ANY WORK AT THIS LOCATION.
- 2. CONTACT ENGINEER TO REQUEST NCDOT SUPPLIED MODEM AT LEAST SIX WEEKS PRIOR TO INSTALLATION.

