

PIPE INSTALLATION SEQUENCE

STA. 30+53 -L1-

PROJECT REFERENCE NO. U-5907
SHEET NO. EC-8B



Kimley»Horn

200 SOUTH TRYON, SUITE 200
CHARLOTTE, N.C. 28202

PIPE INSTALLATION SEQUENCE
Stage II

1. CONSTRUCT TEMPORARY PIPE #3 FROM 804 TO EXISTING CB. REMOVE TEMPORARY PIPE #1 (SEE STAGE I).
2. DIVERT FLOW THROUGH PIPE #3 AND CONSTRUCT PIPE FROM 804 TO 807.
3. DIVERT FLOW THROUGH NEW SYSTEM AND REMOVE TEMPORARY PIPES #2 AND #3.
4. CONSTRUCT PIPES FROM 803 TO 806, 806 TO 807, 808 TO 809.

STAGE II

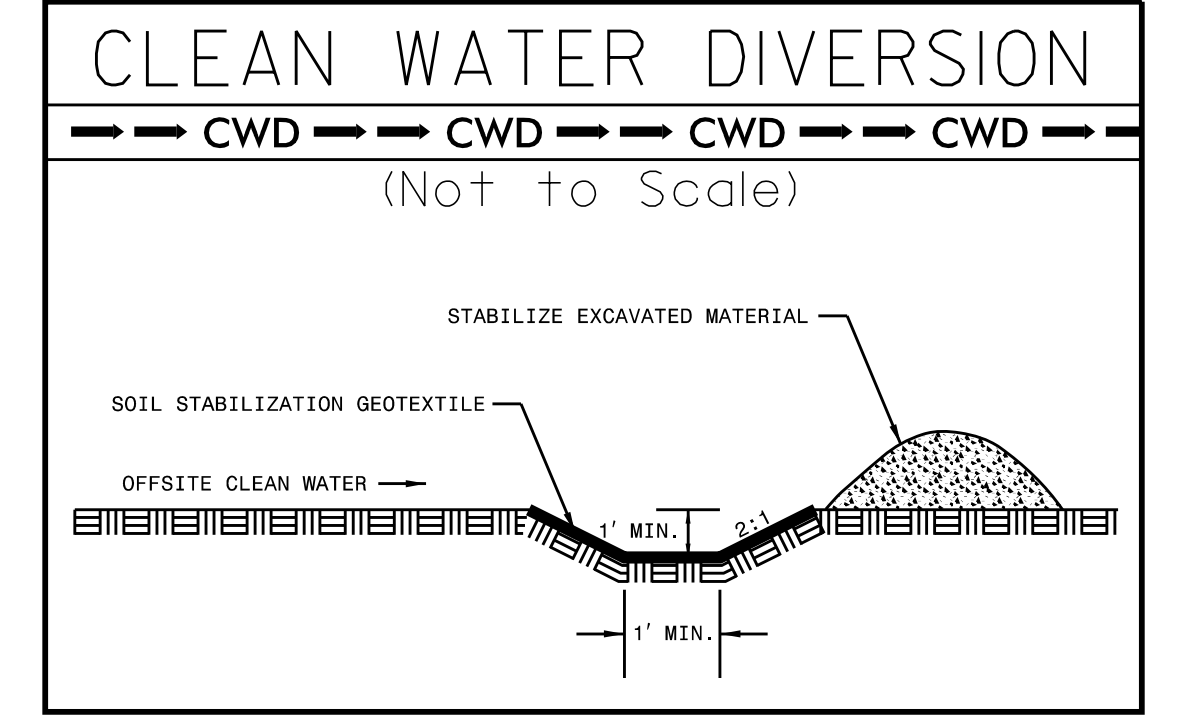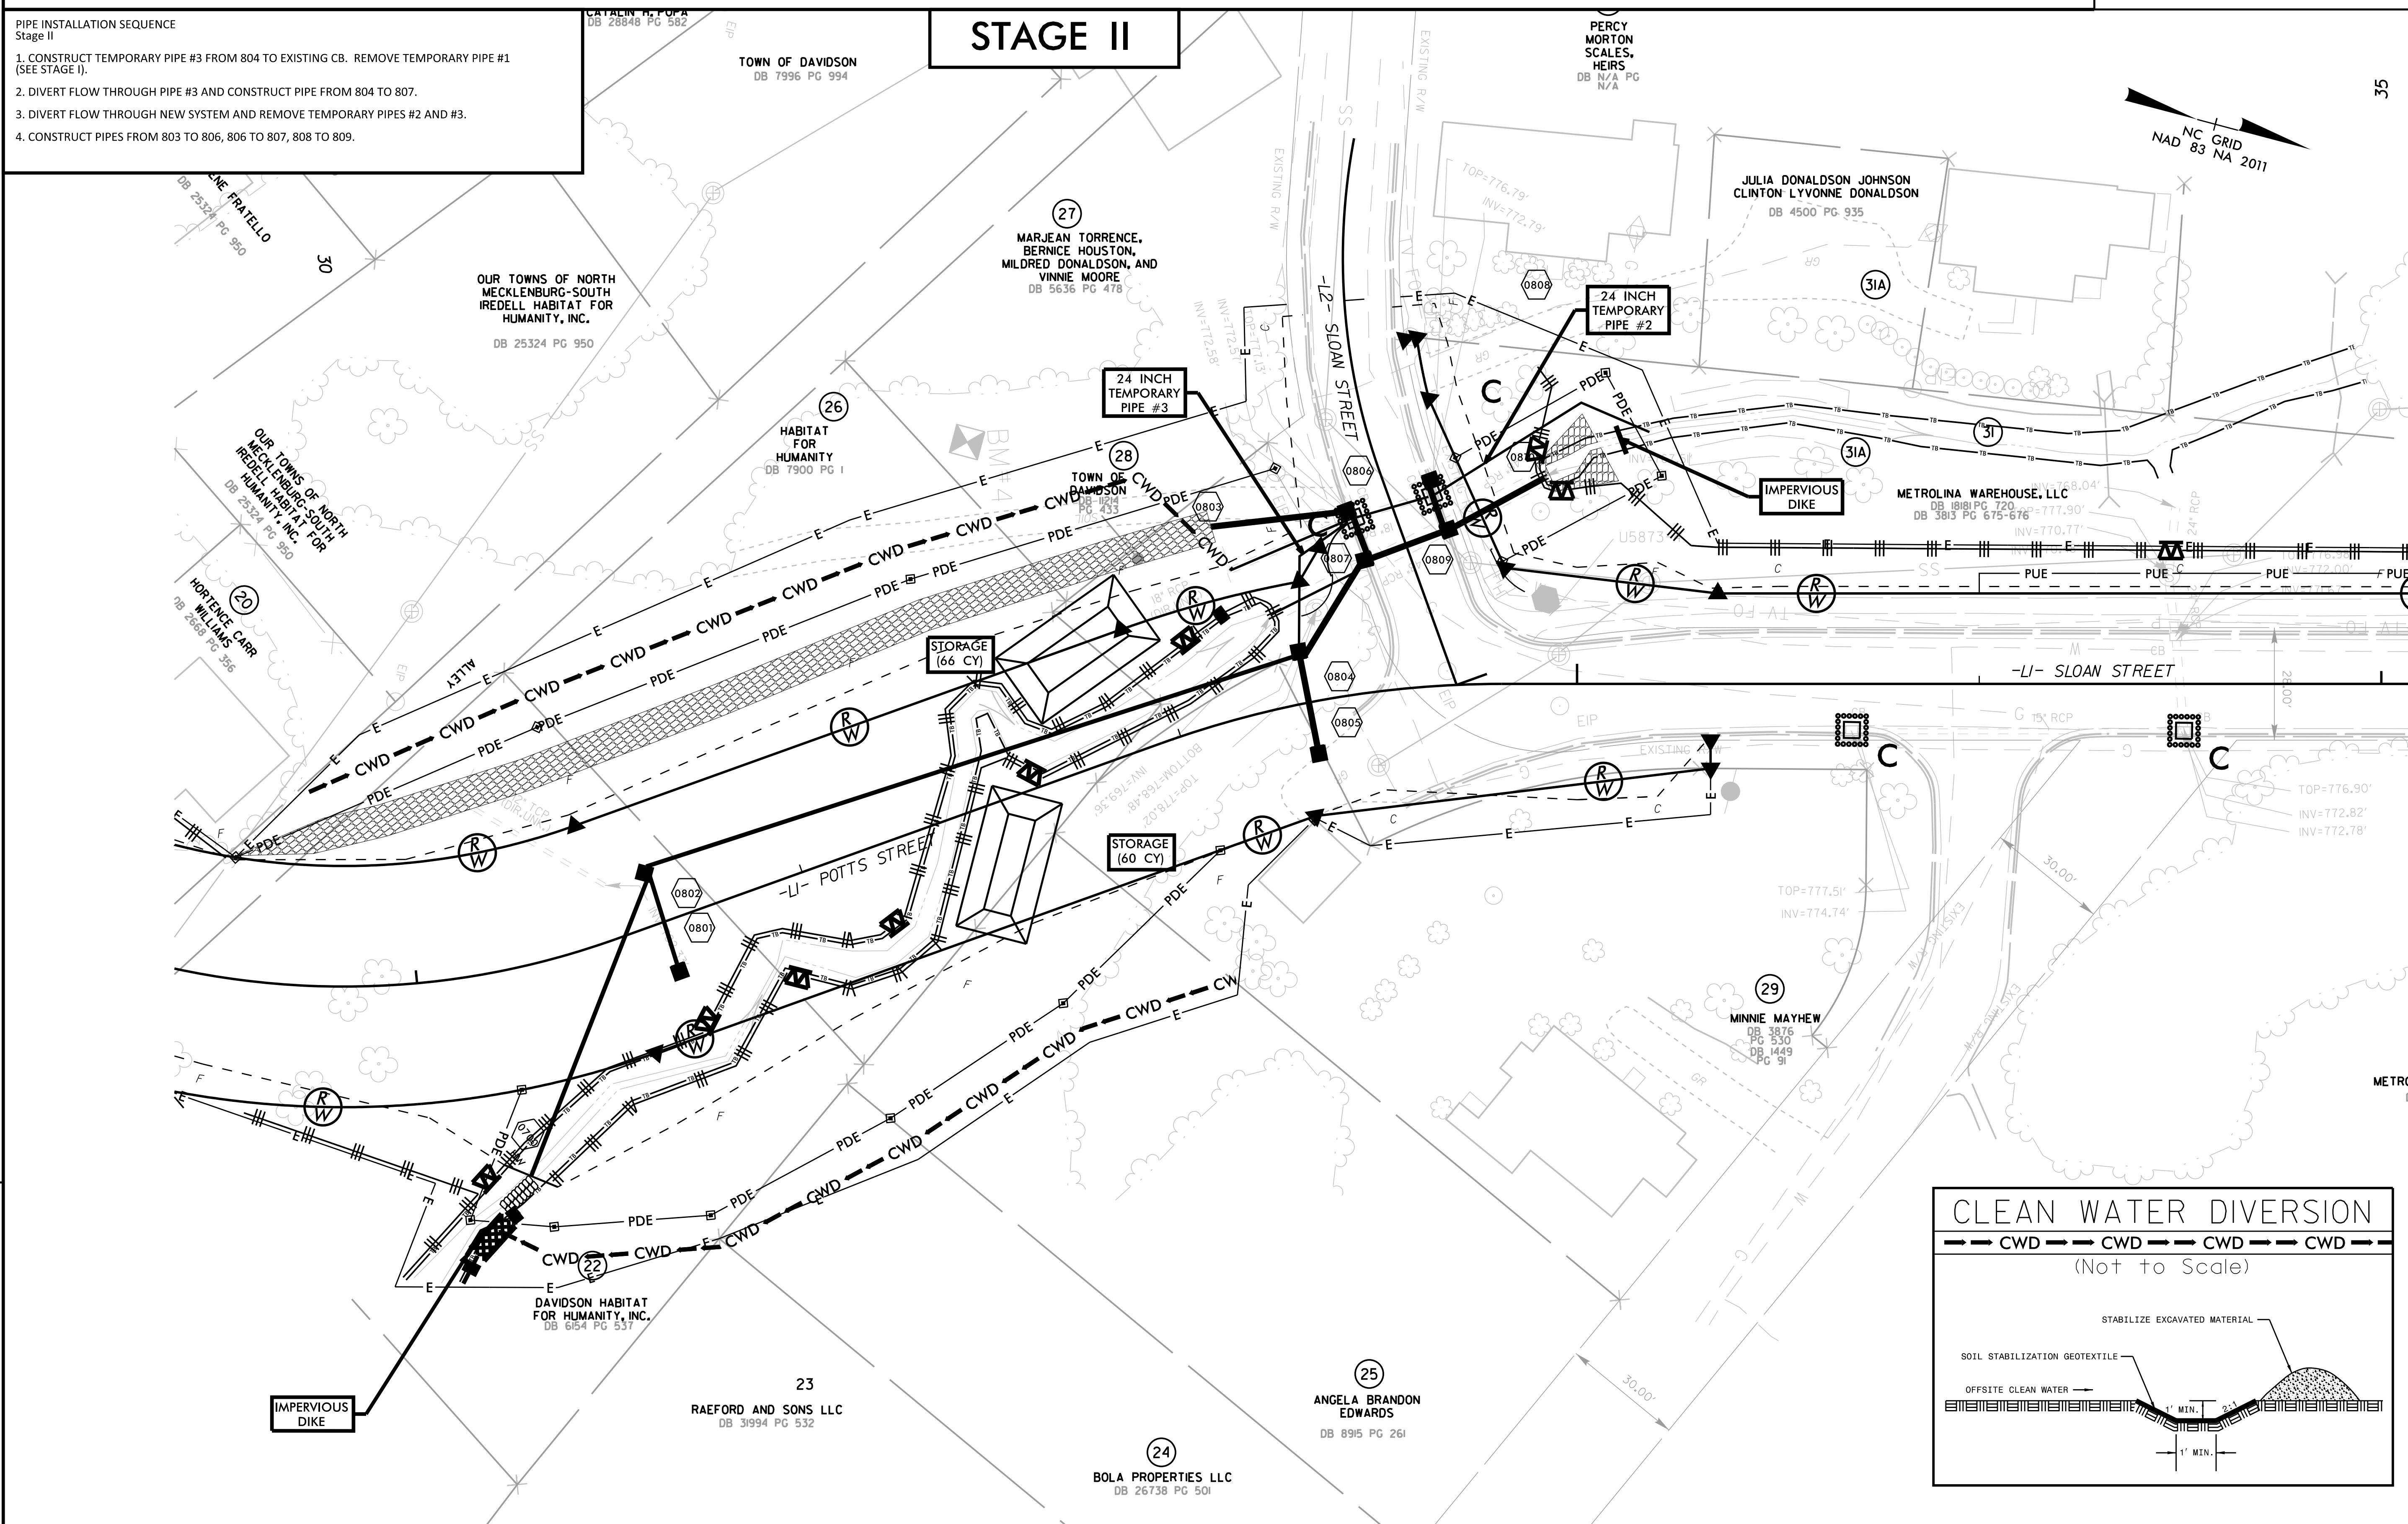

REVISIONS

5/14/199

9/8/2023